SDM-P232W

SERVICE MANUAL

US Model
Canadian Model
AEP Model

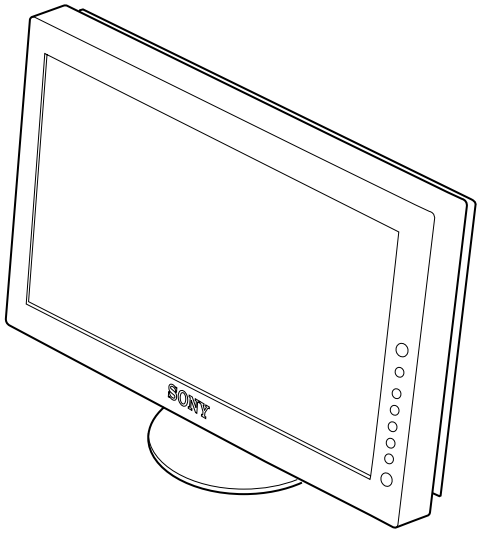

SPECIFICATIONS

LCD panel	Panel type: a-Si TFT Active Matrix Picture size: 23.0 inch
Input signal format	RGB operating frequency* Horizontal: 28–92 kHz (analog RGB) 28–75 kHz (digital RGB) Vertical: 48–85 Hz (analog RGB) 60 Hz (digital RGB)
Resolution	Horizontal: Max.1920 dots Vertical: Max.1200 lines
Input signal levels	Analog RGB video signal: 0.7 Vp-p, 75 Ω, positive SYNC signal: TTL level, 2.2 kΩ positive or negative (Separate horizontal and vertical, or composite sync) 0.3 Vp-p, 75 Ω, negative (Sync on green) Digital RGB (DVI) signal: TMDS (Single link)
Power requirements	100–240 V, 50–60 Hz,
Power consumption	Max. 1.0 A Max. 80 W
Operating temperature	5–35 °C

Dimensions (width/height/depth)	
	Display (upright): Approx. 566 × 446 × 251 mm (22 3/8 × 17 5/8 × 10 inches) (with stand) Approx. 566 × 380 × 114 mm (22 3/8 × 15 × 4 1/2 inches) (without stand)
Mass	Approx. 12.7 kg (27 lb 16 oz) (with stand) Approx. 10.2 kg (22 lb 8 oz) (without stand)
Plug & Play	DDC2B

* Recommended horizontal and vertical timing condition
- Horizontal sync width duty should be more than 4.8% of total horizontal time or 0.8 µs, whichever is larger.
- Horizontal blanking width should be more than 2.5 µsec.
- Vertical blanking width should be more than 450 µsec.

Design and specifications are subject to change without notice.

TFT LCD Color Computer Display

SONY®

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are “pinched” or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the connector shell, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC Leakage. Check leakage as described right.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes).

Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers’ instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOMs that are suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

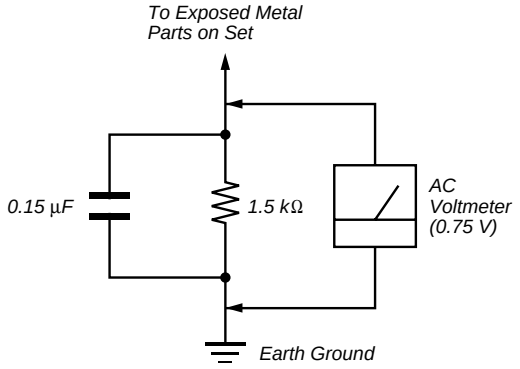

Fig. A. Using an AC voltmeter to check AC leakage.

WARNING!!

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

AVERTISSEMENT!!

ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET UNE MARQUE ⚠ SONT CRITIQUES POUR LA SÉCURITÉ. NE LES REMPLACER QUE PAR UNE PIÈCE PORTANT LE NUMÉRO SPECIFIÉ. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT SONT IDENTIFIÉS DANS LE PRÉSENT MANUEL. SUIVRE CES PROCÉDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.

POWER SAVING FUNCTION

This monitor meets the power-saving guidelines set by VESA, ENERGY STAR, and NUTEK. If the monitor is connected to a computer or video graphics board that is DPMS (Display Power Management Signaling) compliant, the monitor will automatically reduce power consumption as shown below.

Power mode	Power consumption	⏻ (power) indicator
normal operation	80 W (max.)	green
active off* (deep sleep)**	approx. 1 W	orange
⏻ (power) off	approx. 1 W	red
main power off	0 W	off

* When your computer enters the "active off" mode, the input signal is cut and "No input signal" appears on the screen. After 20 seconds, the monitor enters the power saving mode.

** "Deep sleep" is a power saving mode defined by the Environmental Protection Agency.

AUTOMATIC PICTURE QUALITY ADJUSTMENT FUNCTION

(ANALOG RGB SIGNAL ONLY)

When the monitor receives an input signal, it automatically adjusts the picture's position and sharpness (phase/pitch), and ensures that a clear picture appears on the screen.

The factory preset mode

When the monitor receives an input signal, it automatically matches the signal to one of the factory preset modes stored in the monitor's memory to provide a high quality picture at the center of the screen. If the input signal matches the factory preset mode, the picture appears on the screen automatically with the appropriate default adjustments.

If input signals do not match one of the factory preset modes

When the monitor receives an input signal that does not match one of the factory preset modes, the automatic picture quality adjustment function of this monitor is activated to ensure that a clear picture always appears on the screen (within the following monitor frequency ranges):
Horizontal frequency: 28–92 kHz
Vertical frequency: 48–85 Hz
Consequently, the first time the monitor receives input signals that do not match one of the factory preset modes, the monitor may take a longer time than normal to display the picture on the screen. This adjustment data is automatically stored in memory so that next time, the monitor will function in the same way as when the monitor receives the signals that match one of the factory preset modes.

If you adjust the phase, pitch, and picture position manually

For some input signals, the automatic picture quality adjustment function of this monitor may not completely adjust the picture position, phase, and pitch. In this case, you can set these adjustments manually (MANUAL, INSTRUCTION page 15). If you set these adjustments manually, they are stored in memory as user modes and automatically recalled whenever the monitor receives the same input signals.

SELF DIAGNOSIS

This monitor is equipped with a self-diagnosis function. If there is a problem with your monitor or computer(s), the screen will go blank and the ⏻ (power) indicator will light up green. If the ⏻ (power) indicator is lit in orange, the computer is in power saving mode. Try pressing any key on the keyboard or moving the mouse.

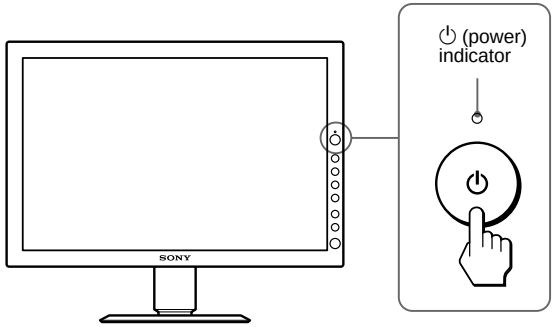

If the picture disappears from the screen and the ⏻ (power) indicator is green

1 Turn off the ⏻ (power) switch and disconnect the video signal cables from the monitor.

2 Turn the monitor on by pressing the ⏻ (power) switch.

If all four color bars appear (white, red, green, blue), the monitor is working properly. Reconnect the video input cables and check the condition of your computer(s).
If the color bars do not appear, there is a potential monitor failure. Inform your authorized Sony dealer of the monitor's condition.

If the ⏻ (power) indicator lights up in orange

Try pressing any key on the keyboard or moving the mouse.
The computer's power saving mode is shut off and the ⏻ (power) indicator lights up in green, and the picture appears on the screen.

TABLE OF CONTENTS

Section	Title	Page
1. DISASSEMBLY		
1-1.	Rear Cover and Rear Panel Assy Removal	1-1
1-2.	G and I Boards Removal	1-2
1-3.	A Board Removal	1-3
1-4.	LCD Panel Removal	1-4
1-5.	H2 Board Removal	1-5
2. DIAGRAMS		
2-1.	Circuit Boards Location	2-1
2-2.	Schematic Diagrams and Printed Wiring Boards	2-2
(1)	Schematic Diagram of A(ⓐ,ⓑ,ⓒ,ⓓ,ⓔ,ⓕ,ⓖ) Board	2-3
(2)	Schematic Diagram of G Board	2-11
(3)	Schematic Diagram of H2 Board	2-13
(4)	Schematic Diagram of I Board	2-15
2-3.	Semiconductors	2-17
3. EXPLODED VIEWS		
3-1.	Chassis	3-2
3-2.	Packing Materials	3-4
4. ELECTRICAL PARTS LIST		4-1

SECTION 1
DISASSEMBLY

1-1. REAR COVER AND REAR PANEL ASSY REMOVAL

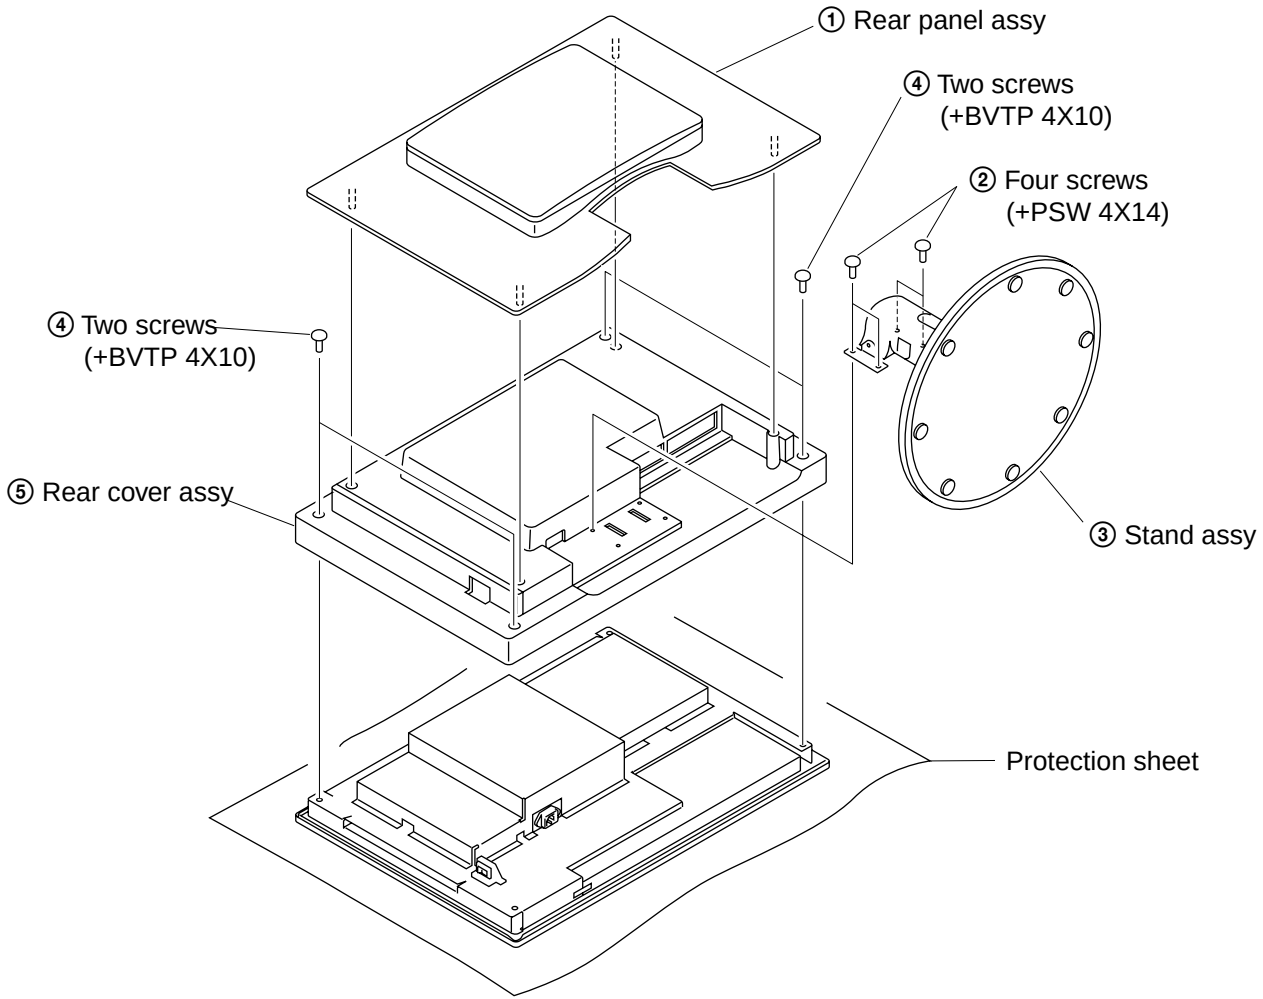

1-2. G AND I BOARDS REMOVAL

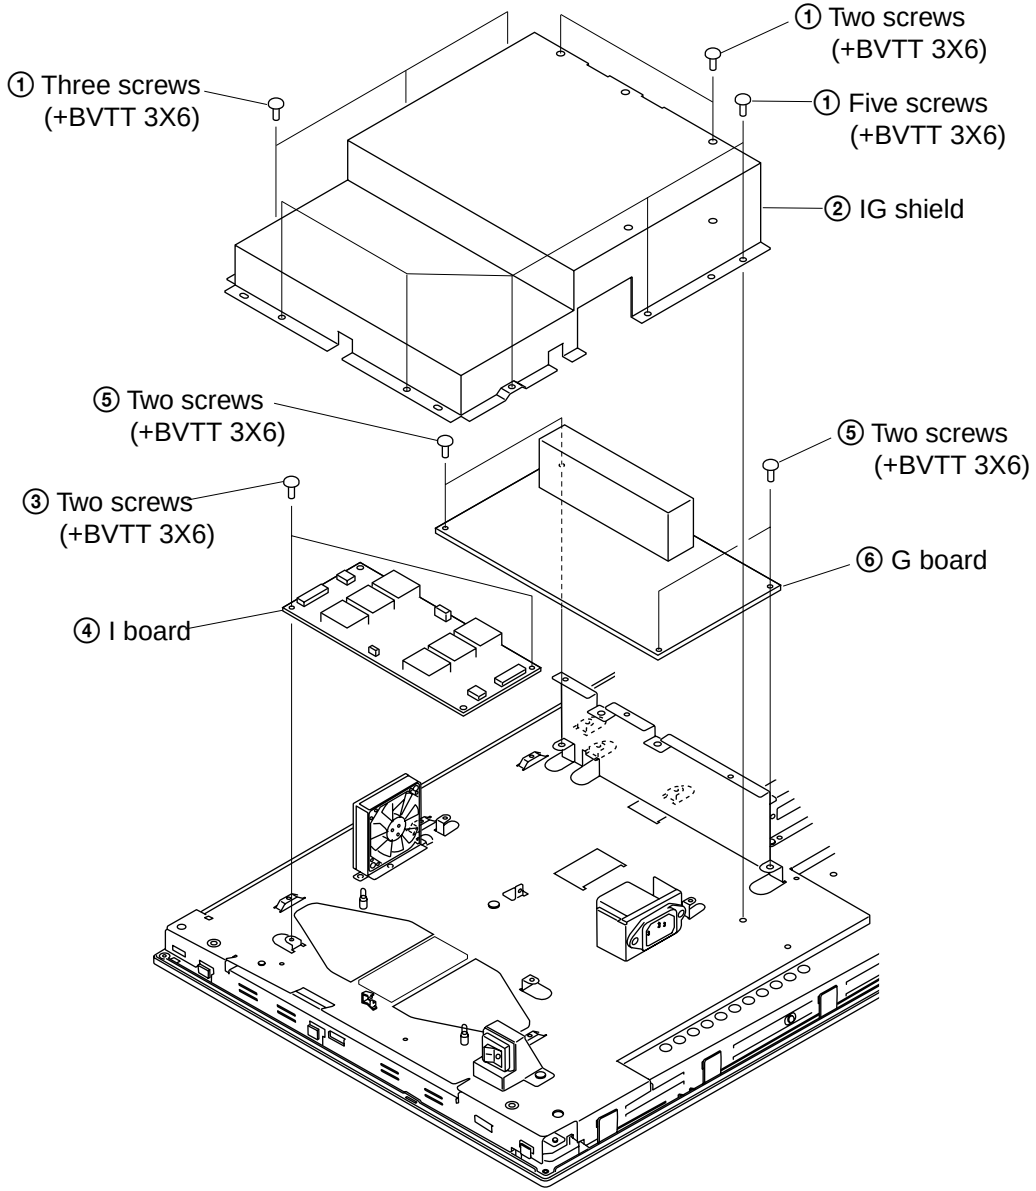

1-3. A BOARD REMOVAL

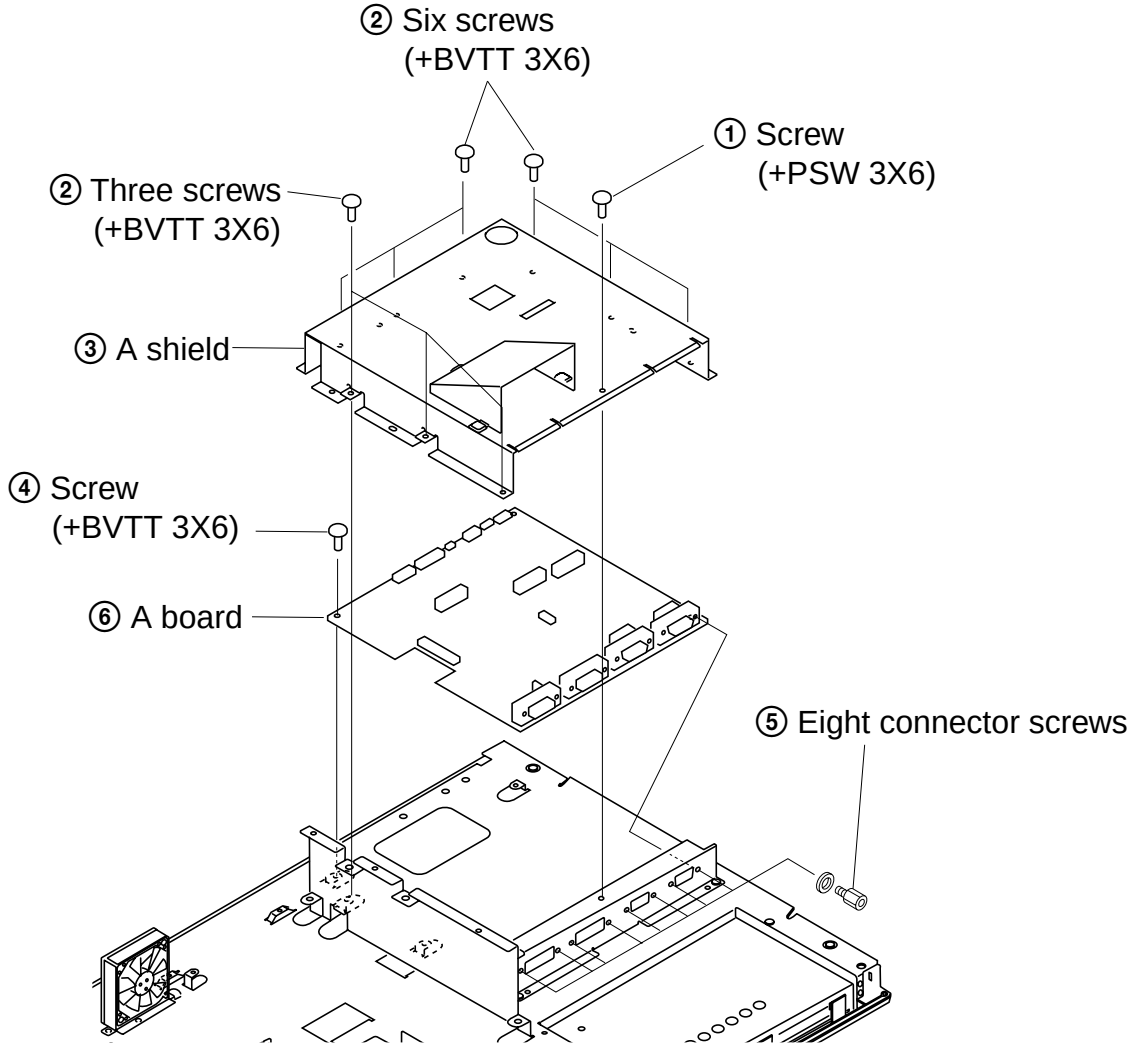

1-4. LCD PANEL REMOVAL

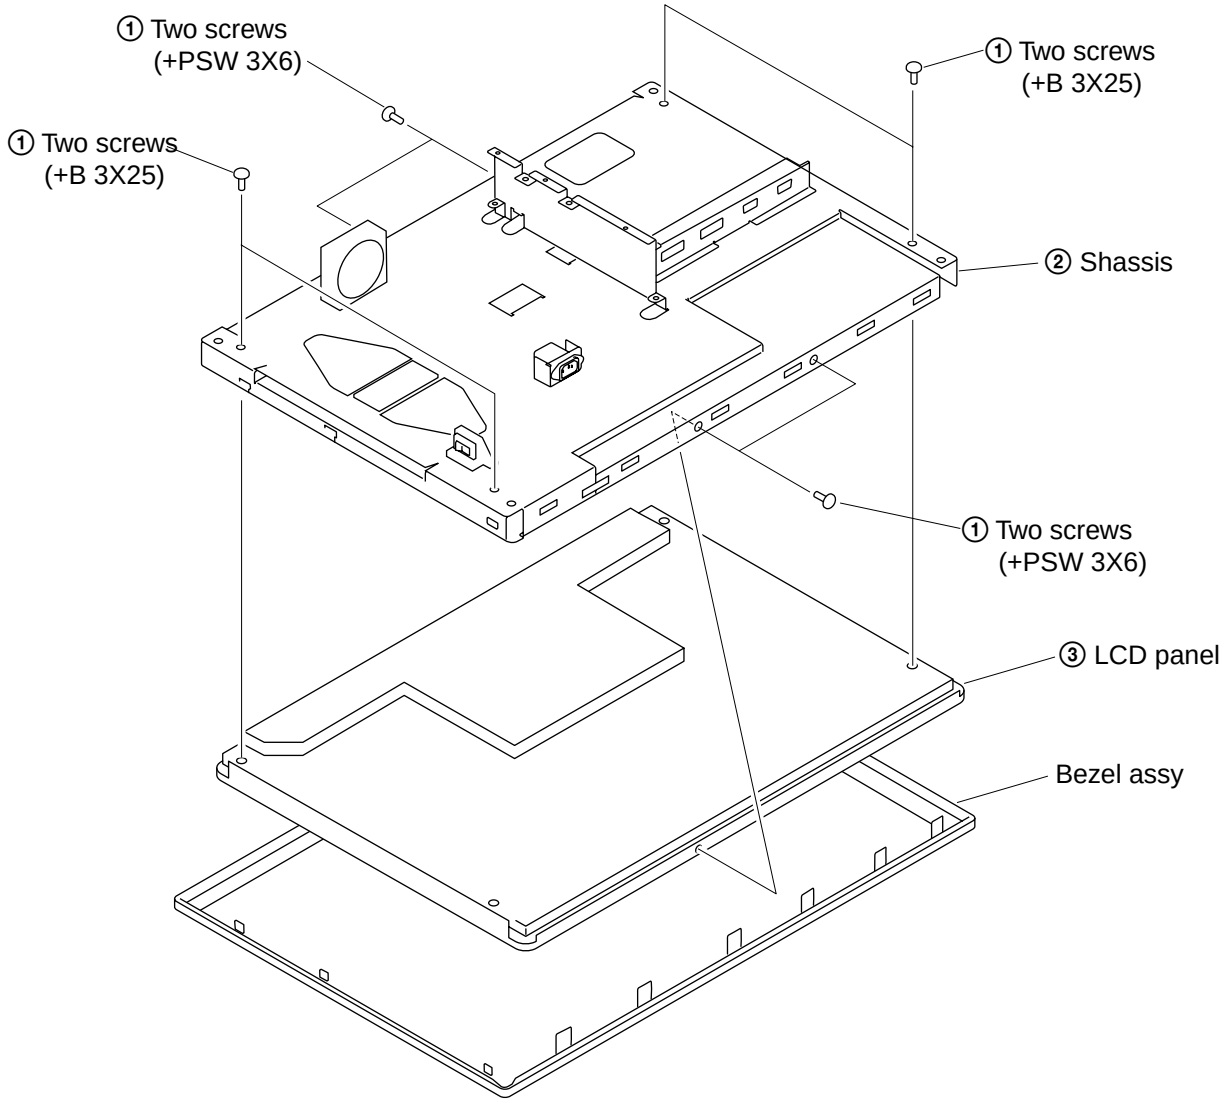

1-5. H2 BOARD REMOVAL

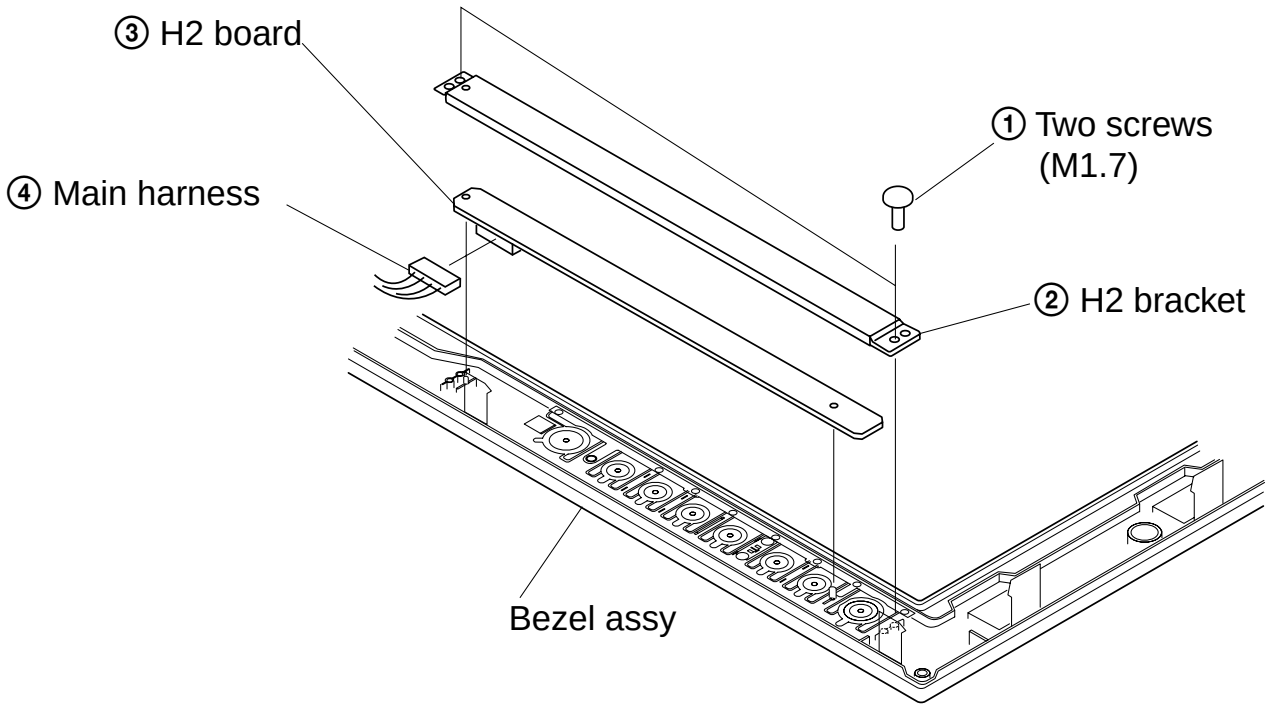

SECTION 2
DIAGRAMS

2-1. CIRCUIT BOARDS LOCATION

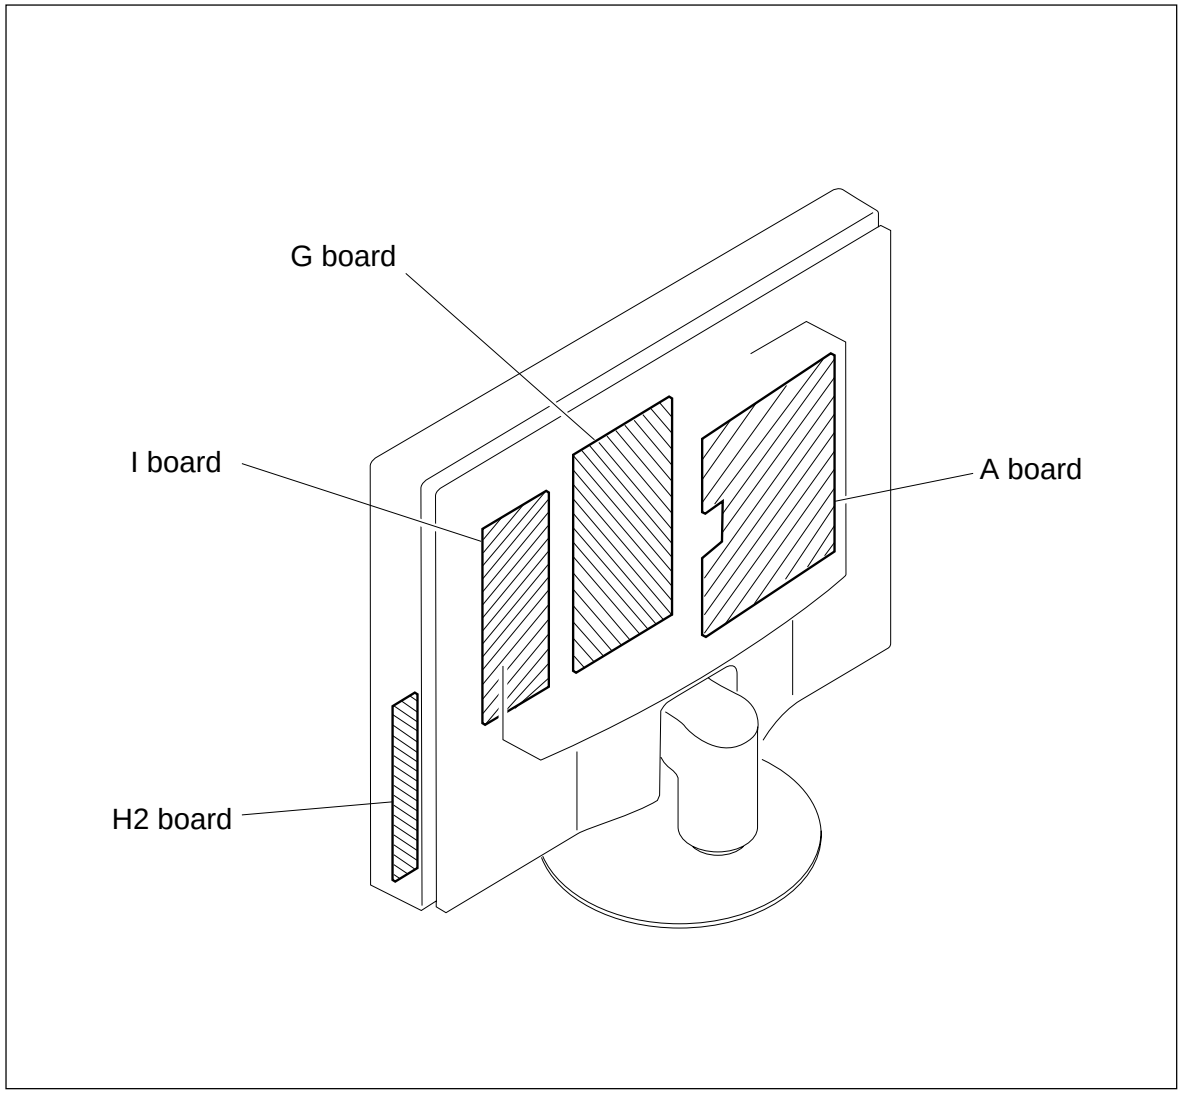

2-2. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

Note:

- All capacitors are in µF unless otherwise noted. (pF: µµF)
  Capacitors without voltage indication are all 50 V.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

  Pitch: 5 mm

  Rating electrical power 1/4 W (CHIP : 1/10 W)

- All resistors are in ohms.
- : nonflammable resistor.
- : fusible resistor.
- Δ : internal component.
- : panel designation, and adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- : earth-ground.
- : earth-chassis.
- When replacing the part in below table, be sure to perform the related adjustment.
- All voltages are in V.
- Readings are taken with a 10 M digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerances.
- ∗ : Can not be measured.
- Circled numbers are waveform references.
- : B + bus.
- : B – bus.

Note: The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un tramé et une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- Divided circuit diagram

  One sheet of A board are circuit diagram is divided into seven sheets, each having the code A-ⓐ to A-ⓖ. For example, the destination (ab1) on the code A-ⓐ sheet is connected to (ab1) on the A-ⓑ sheet.



Terminal name of semiconductors in silk screen printed circuit (∗)

	Device	Printed symbol	Terminal name	Circuit
①	Transistor		Collector / Base / Emitter	
②	Transistor		Collector / Base / Emitter	
③	Diode		Cathode / Anode	
④	Diode		Cathode / Anode (NC)	
⑤	Diode		Cathode / Anode (NC)	
⑥	Diode		Common / Anode / Cathode	
⑦	Diode		Common / Anode / Cathode	
⑧	Diode		Common / Anode / Anode	
⑨	Diode		Common / Anode / Anode	
⑩	Diode		Common / Cathode / Cathode	
⑪	Diode		Common / Cathode / Cathode	
⑫	Diode		Anode Anode Cathode / Cathode Anode Anode	
⑬	Transistor (FET)		Drain / Source / Gate	
⑭	Transistor (FET)		Drain / Source / Gate	
⑮	Transistor (FET)		□ Source □ Drain □ Gate	
⑯	Transistor		□ Emitter □ Collector □ Base	
⑰	Transistor		C2 B1 E1 / E2 B2 C1	
⑱	Transistor		C1 B2 E2 / E1 B1 C2	
⑲	Transistor		C1 B2 E2 / E1 B1 C2	
⑳	Transistor		C1 B2 E2 / E1 B1 C2	
㉑	Transistor		E2 B1 E1 / C2 C1(B2)	
㉒	Transistor		(B2) B1 E1 E2 / C1 C2	
㉓	Transistor		(B2) E2 E1 B1 / C2 C1	
–	Discrete semiconductot			

(Chip semiconductors that are not actually used are included.)

Ver.1.5

(1) Schematic Diagram of A (ⓐ, ⓑ, ⓒ, ⓓ, ⓔ, ⓕ, ⓖ) Board

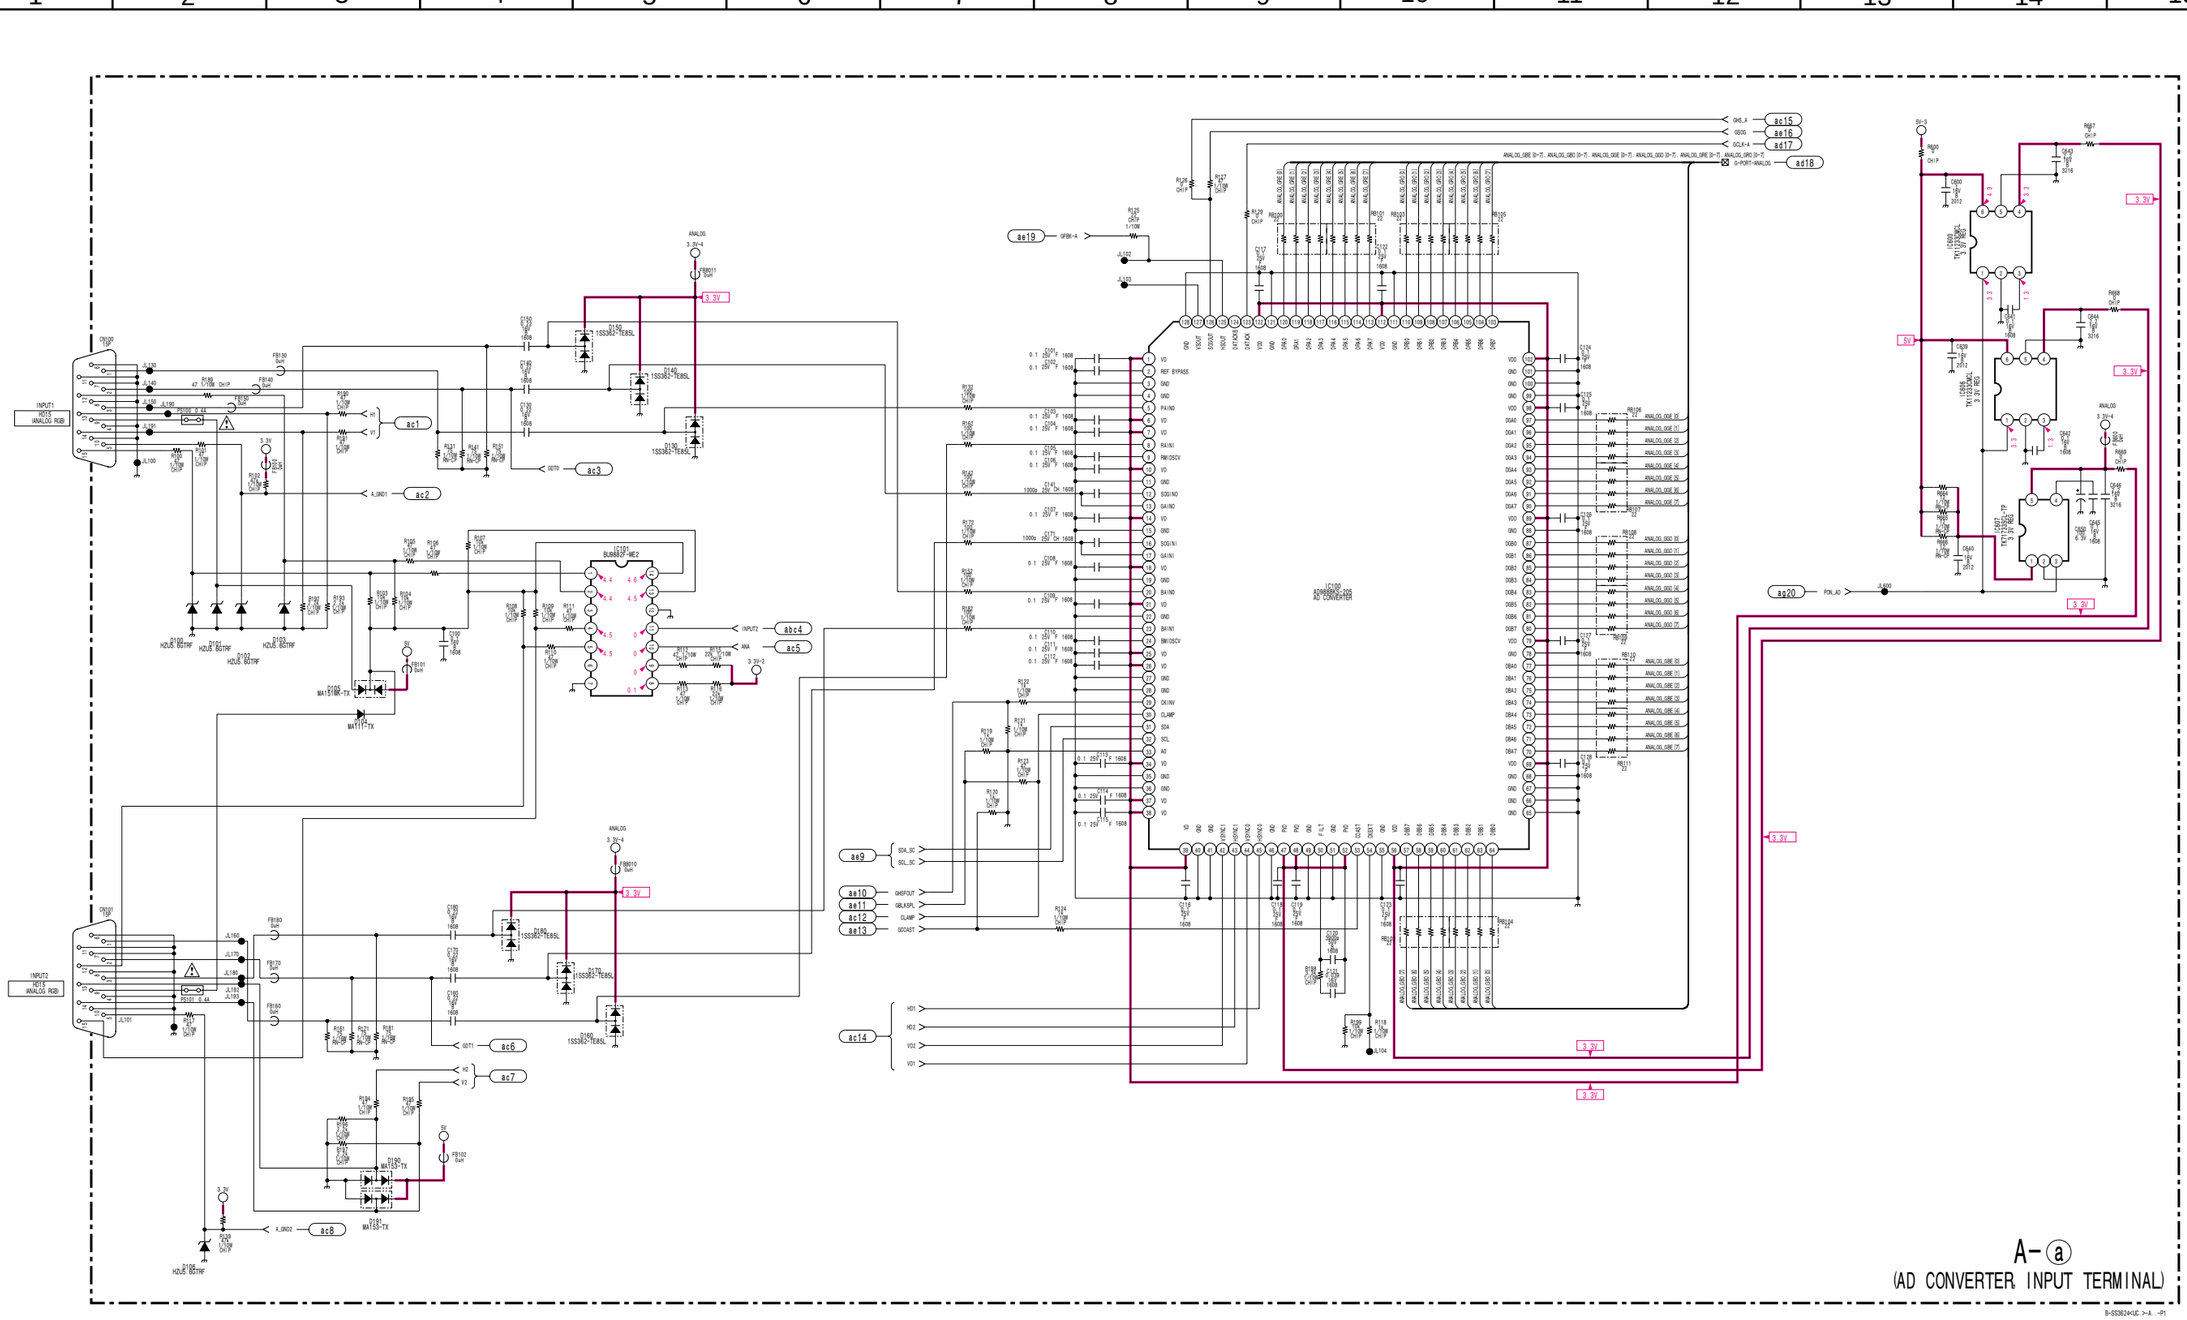

- Divided circuit diagram

  One sheet of A board are circuit diagram is divided into seven sheets,each having the code A-ⓐ to A-ⓖ.

  For example, the destination(ab1)on the code A-ⓐ sheet is connected to (ab1)on the A-ⓑ sheet.

  a b 1
  - Ref. No.
  - Circuit diagram division code

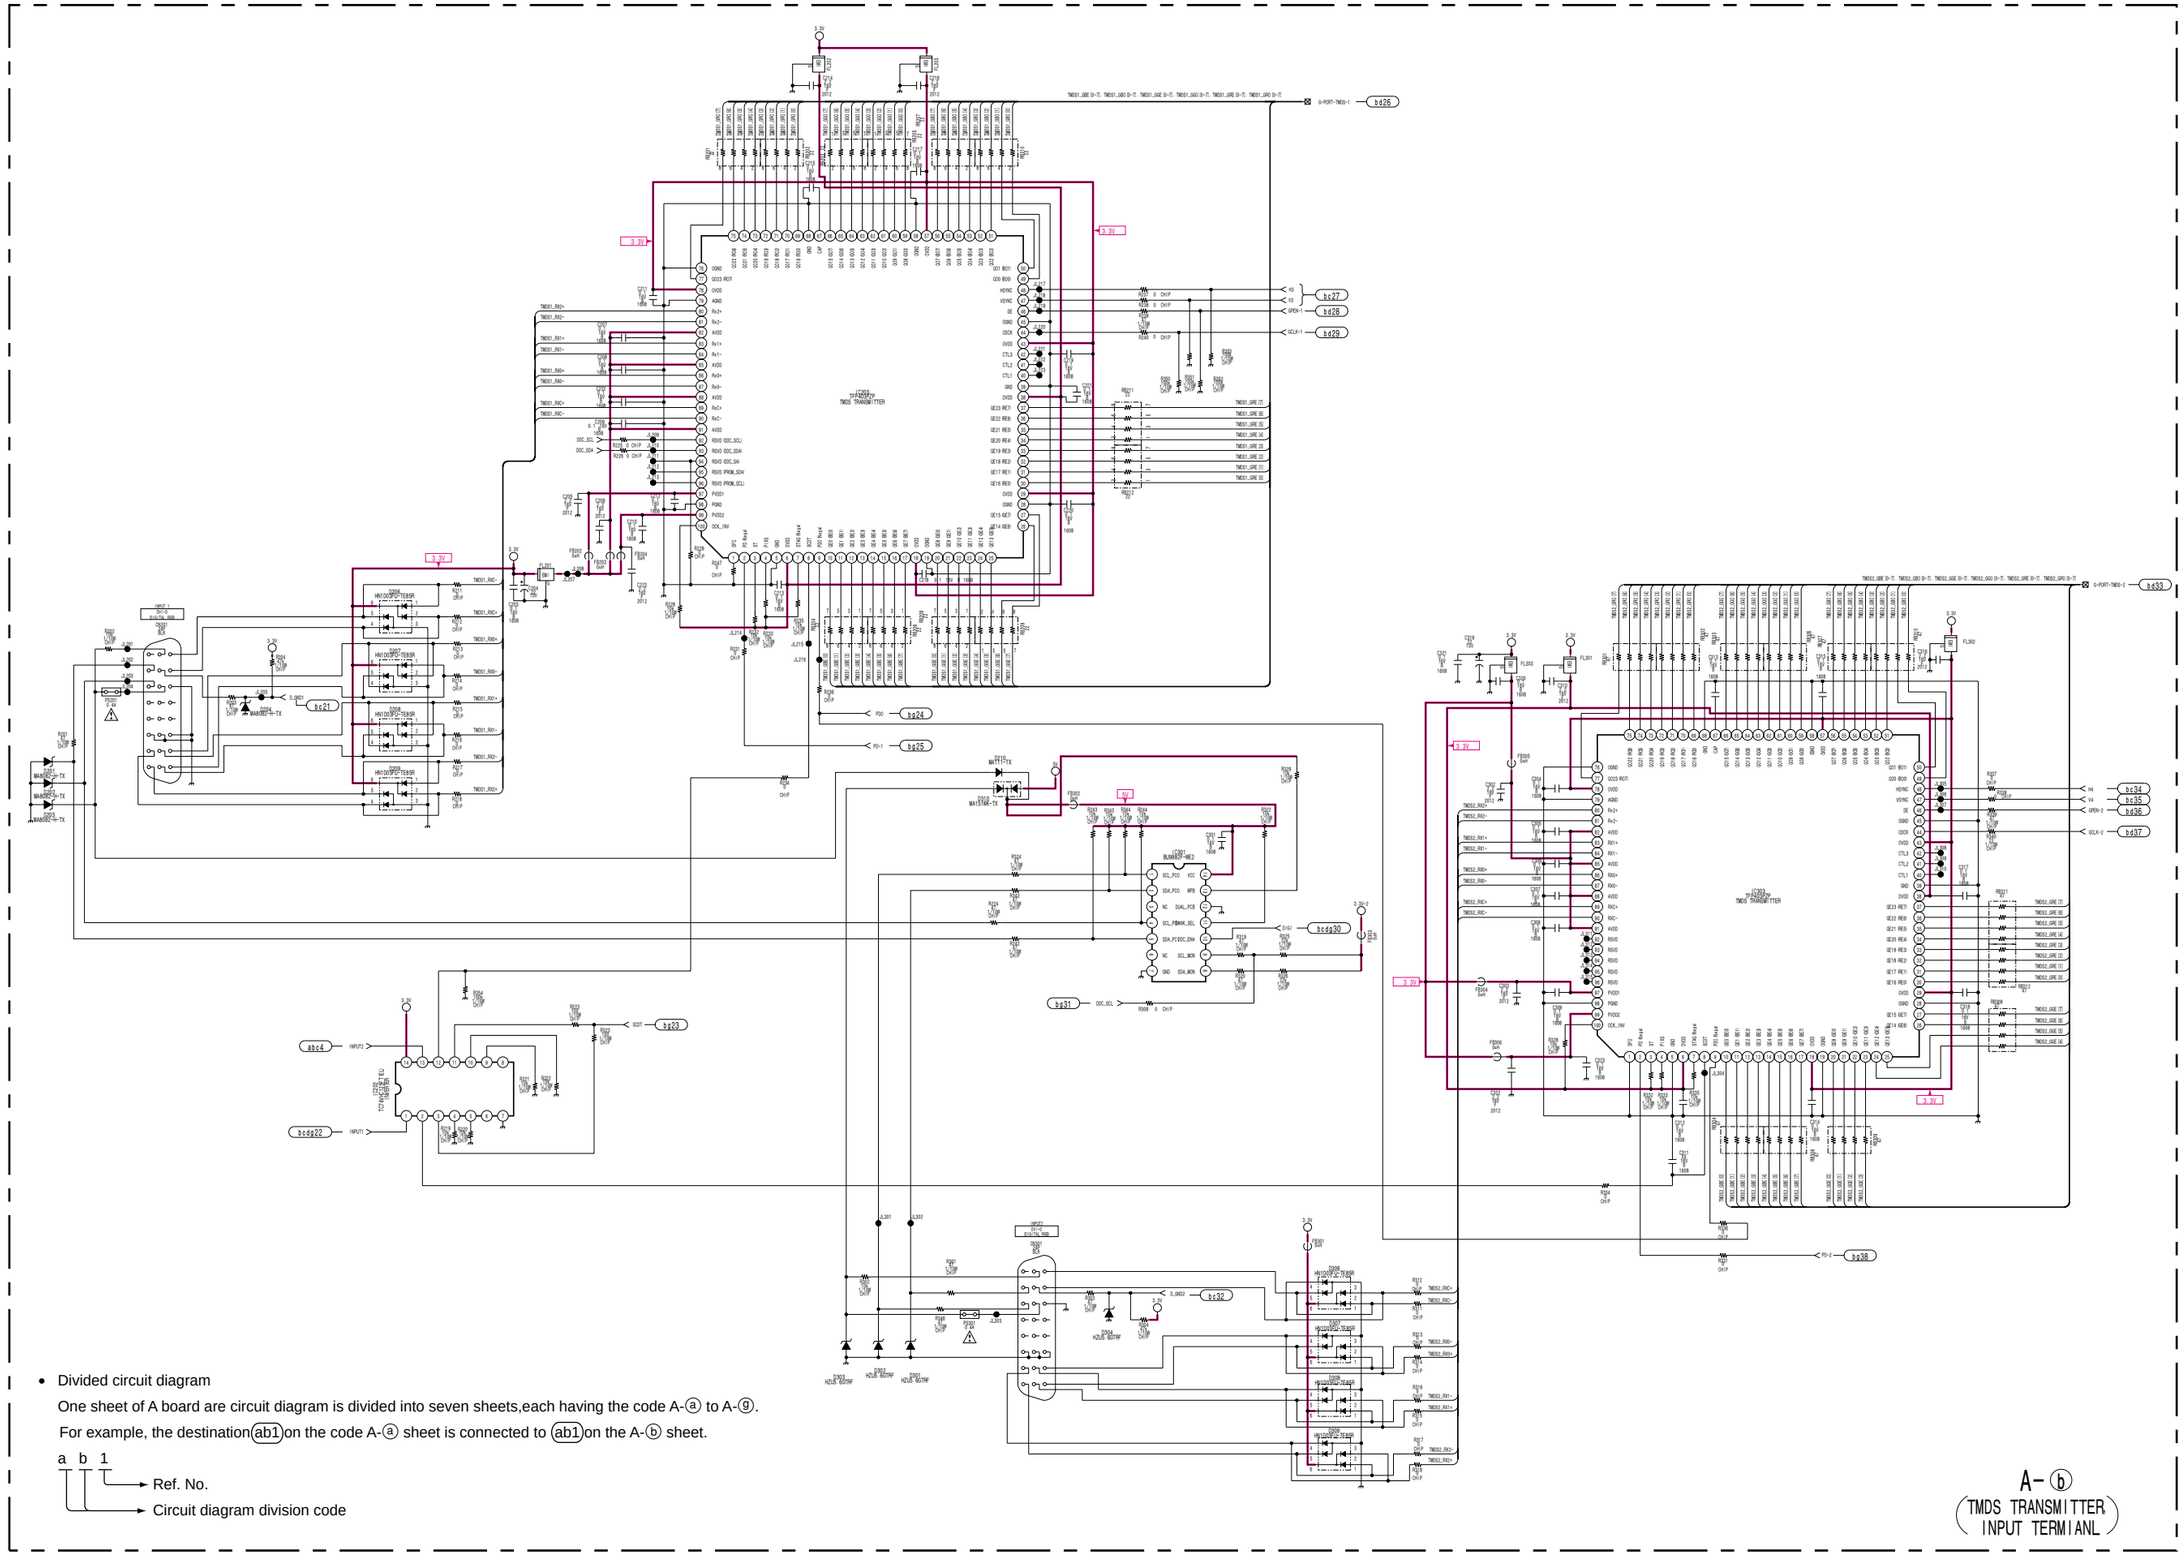

- Divided circuit diagram

  One sheet of A board are circuit diagram is divided into seven sheets,each having the code A-ⓐ to A-ⓖ.

  For example, the destination (ab1) on the code A-ⓐ sheet is connected to (ab1) on the A-ⓑ sheet.

  a b 1
  - 1 → Ref. No.
  - b → Circuit diagram division code

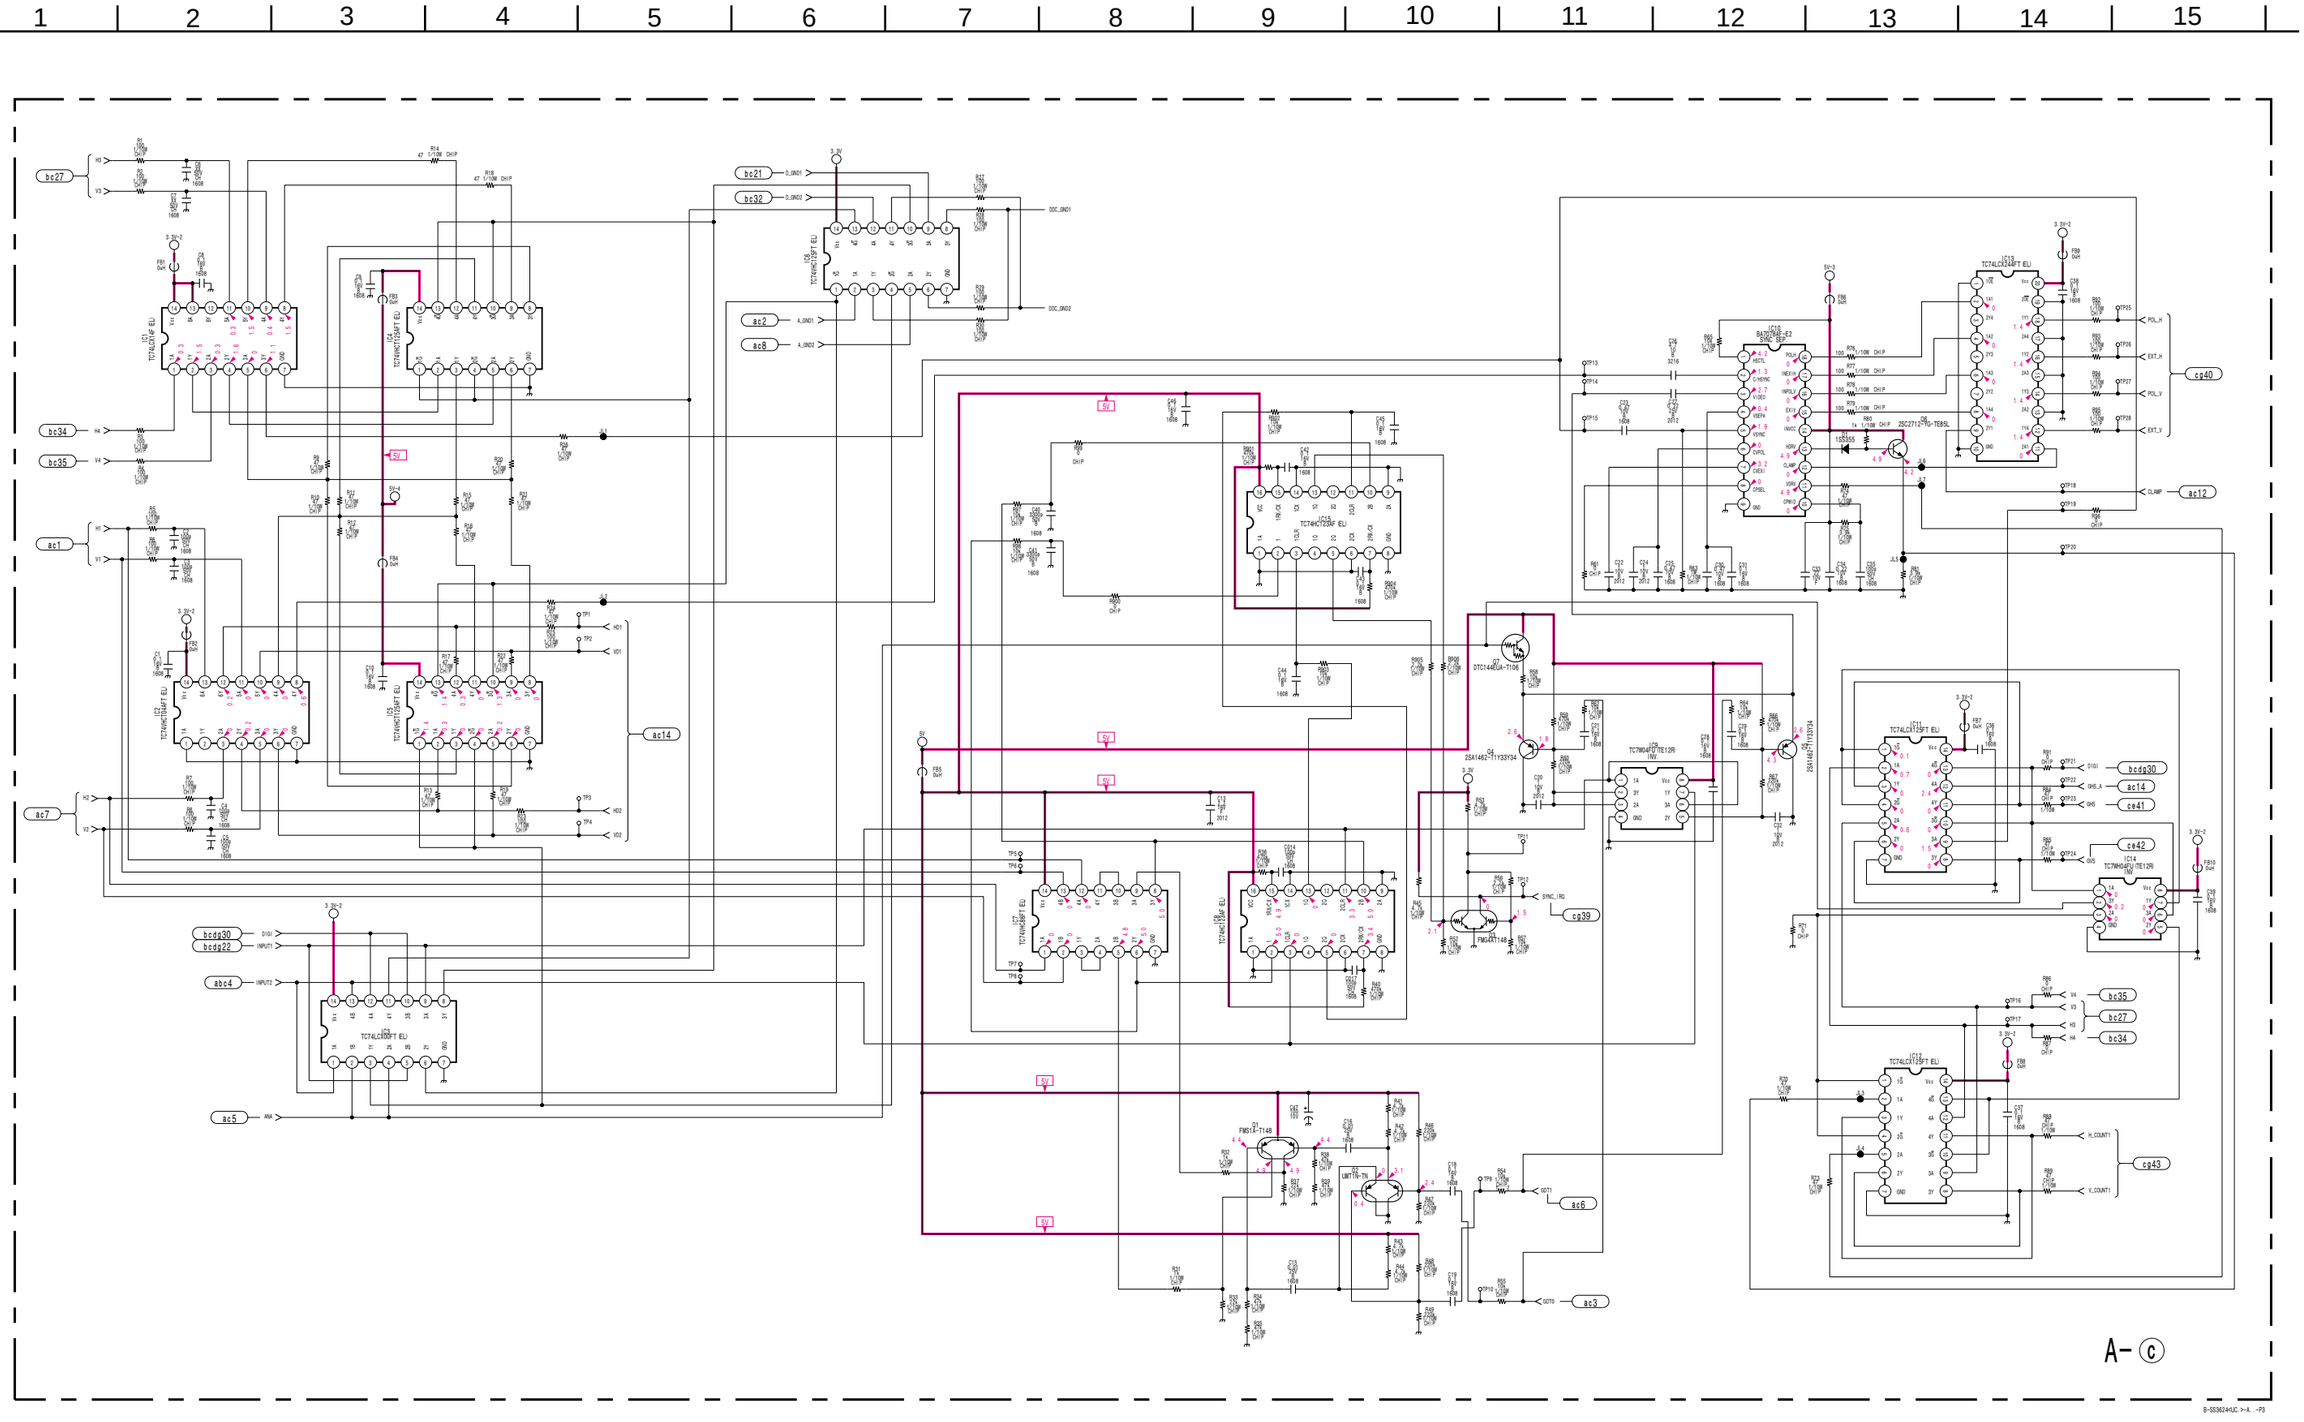

- Divided circuit diagram

  One sheet of A board are circuit diagram is divided into seven sheets,each having the code A-ⓐ to A-ⓖ.

  For example, the destination (ab1) on the code A-ⓐ sheet is connected to (ab1) on the A-ⓑ sheet.

  a b 1
  - 1 → Ref. No.
  - a b → Circuit diagram division code

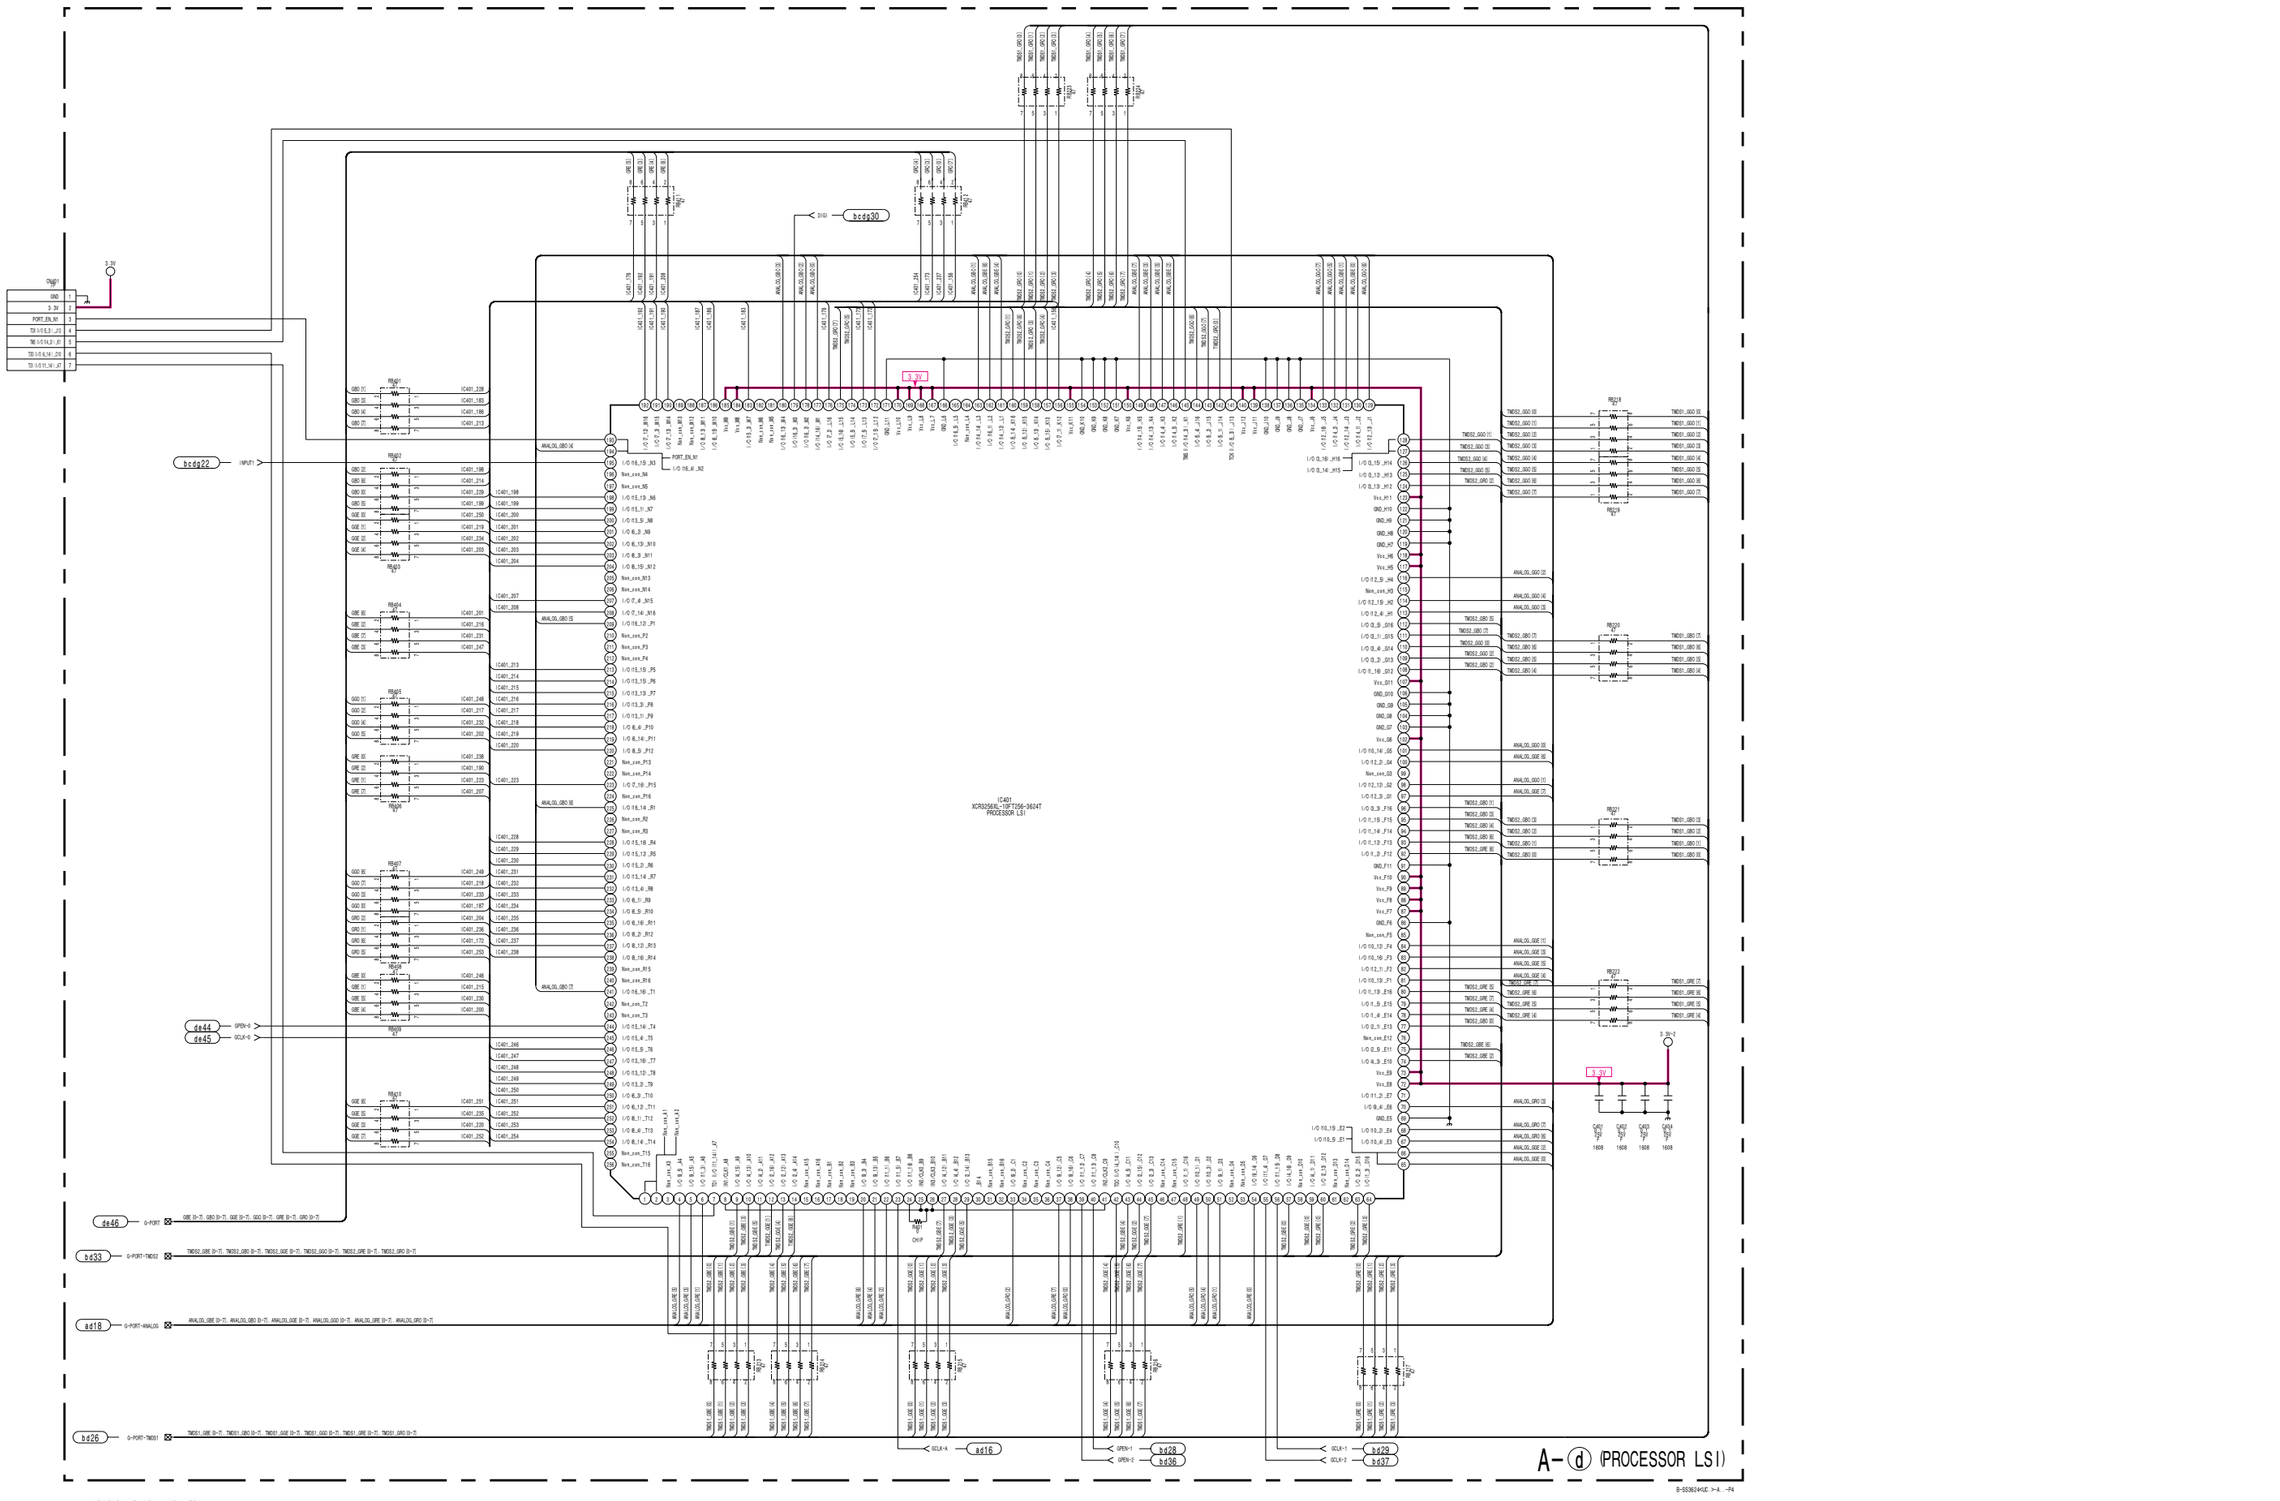

- Divided circuit diagram

  One sheet of A board are circuit diagram is divided into seven sheets,each having the code A-ⓐ to A-ⓖ.

  For example, the destination (ab1) on the code A-ⓐ sheet is connected to (ab1) on the A-ⓑ sheet.

  a b 1
  - 1 → Ref. No.
  - b → Circuit diagram division code

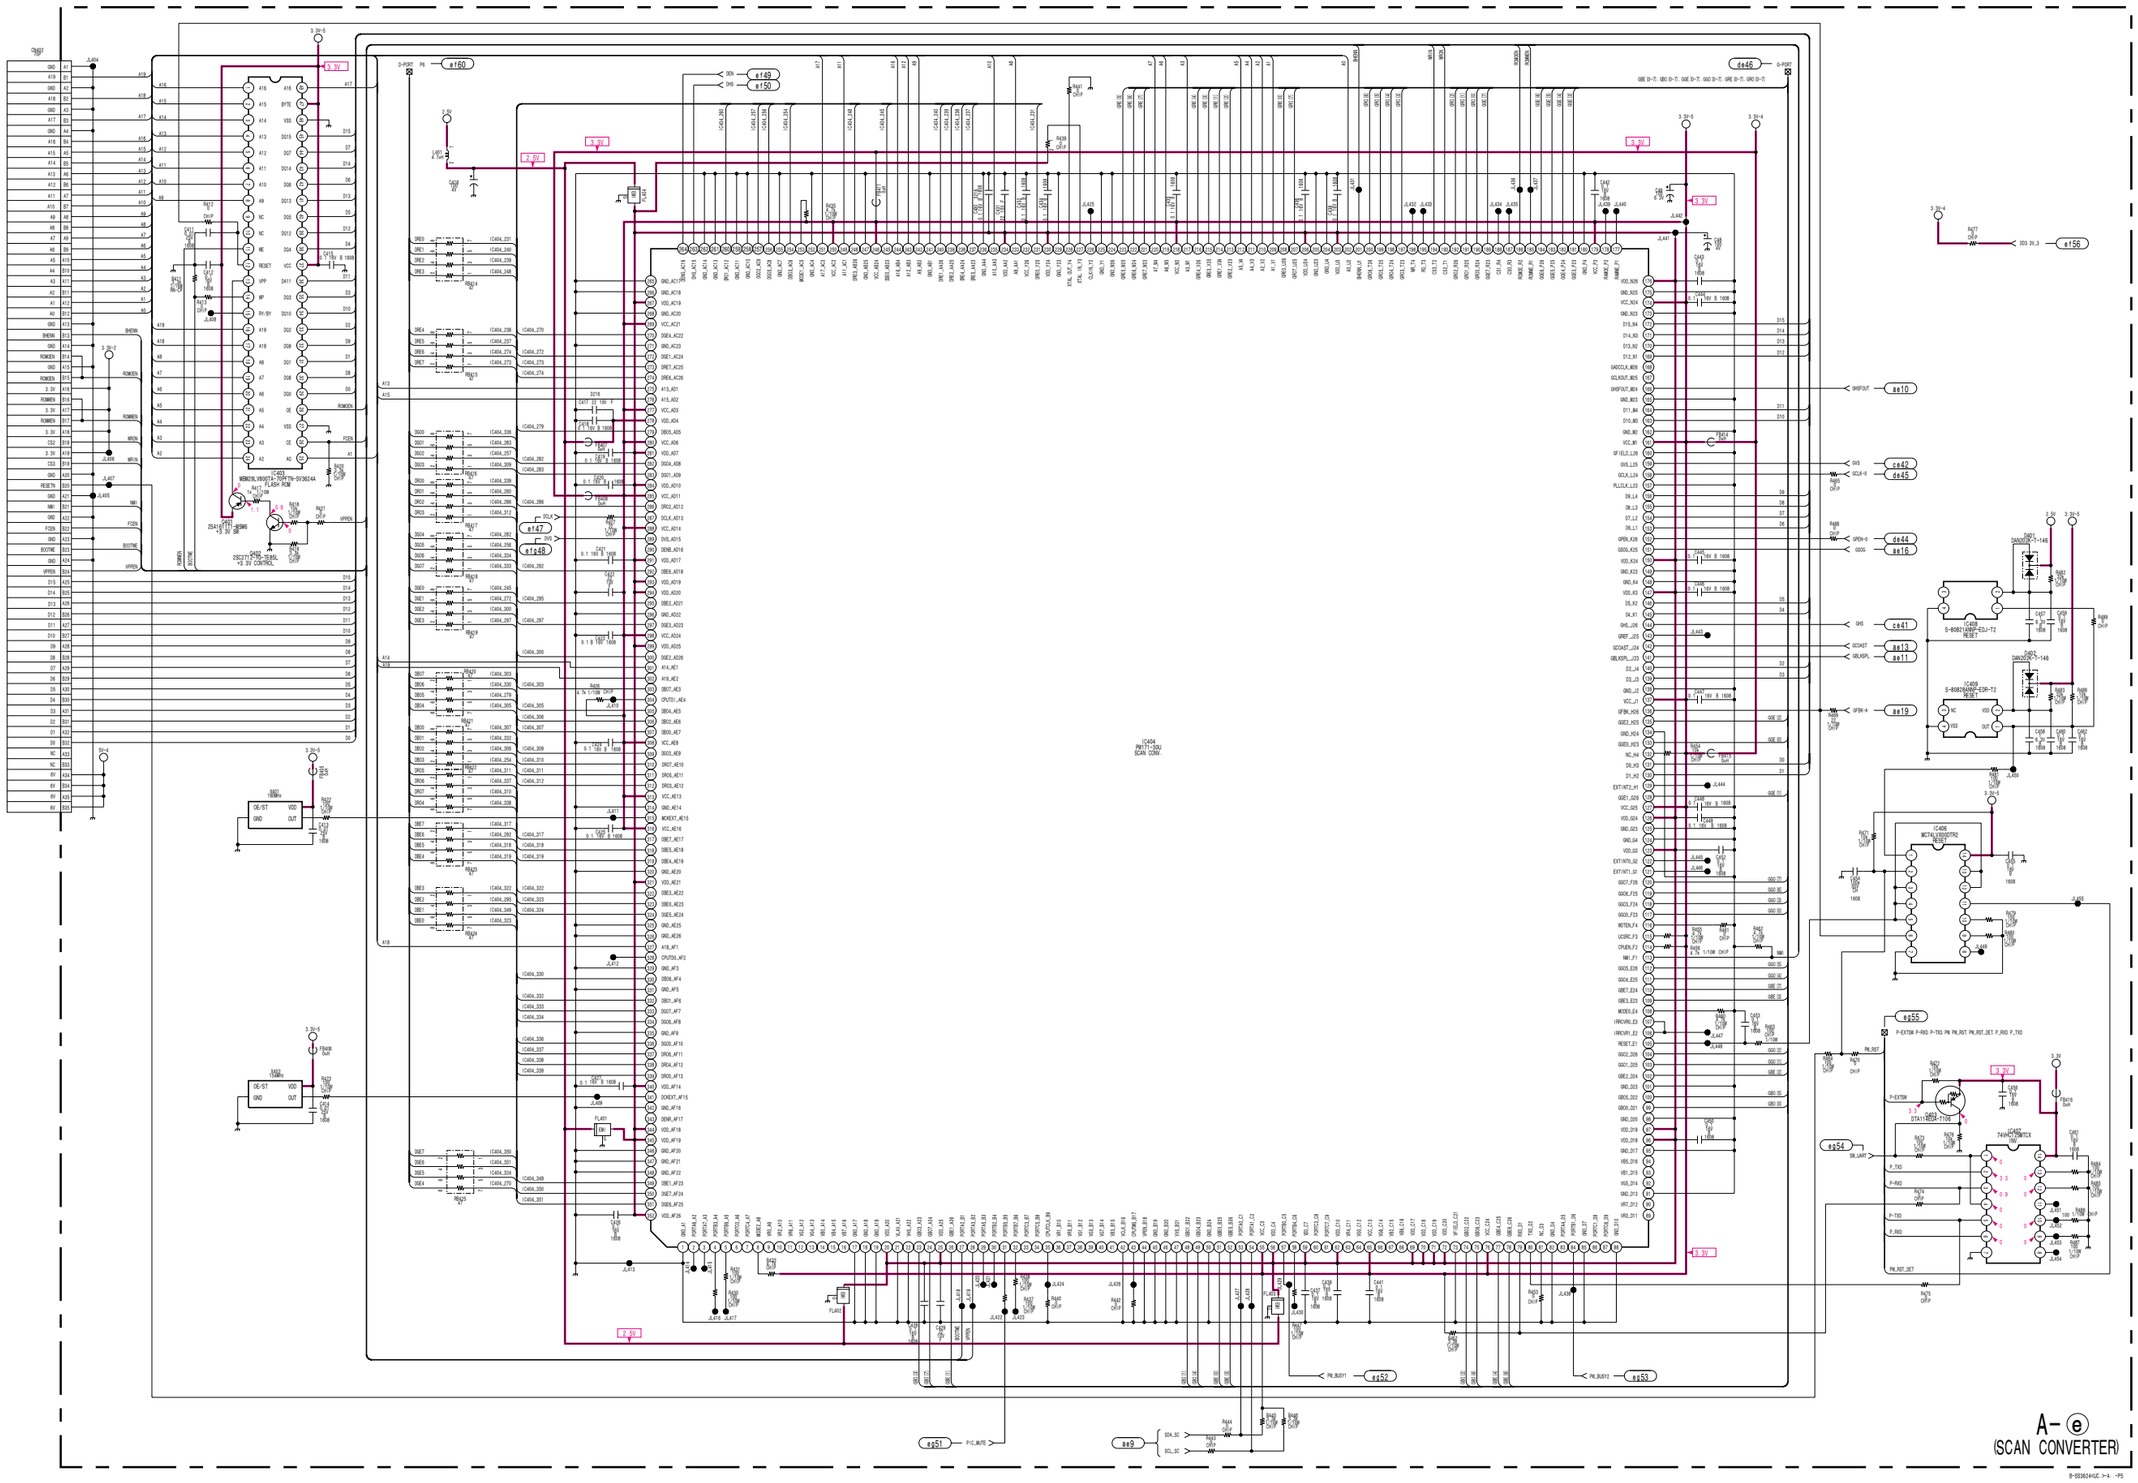

- Divided circuit diagram

  One sheet of A board are circuit diagram is divided into seven sheets,each having the code A-ⓐ to A-ⓖ.

  For example, the destination ab1 on the code A-ⓐ sheet is connected to ab1 on the A-ⓑ sheet.

  a b 1
  - Ref. No.
  - Circuit diagram division code

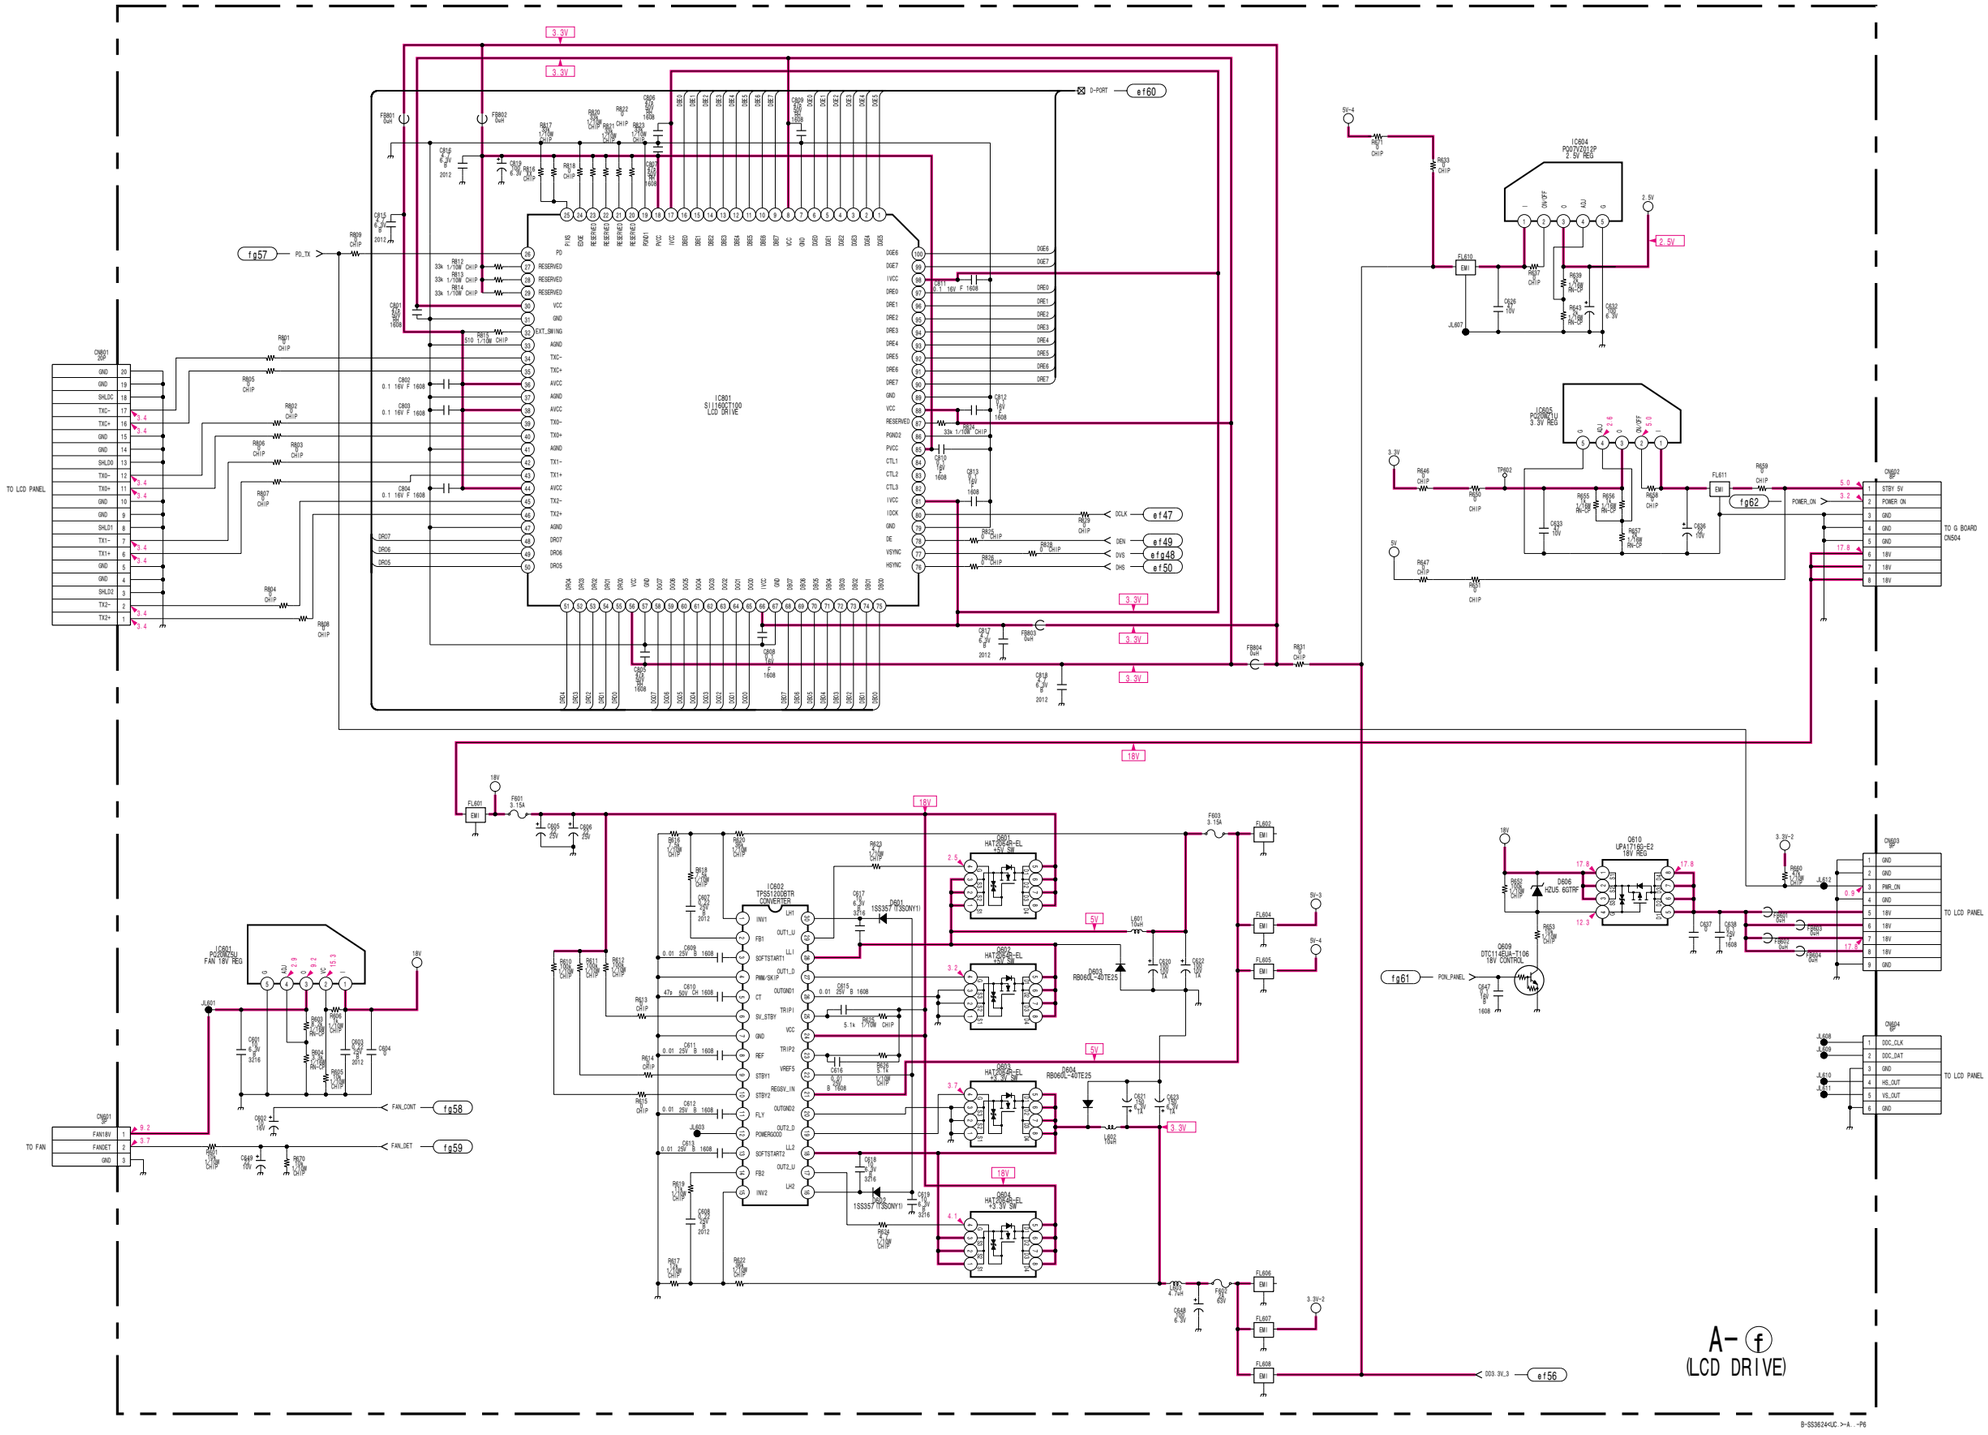

- Divided circuit diagram
  One sheet of A board are circuit diagram is divided into seven sheets,each having the code A-ⓐ to A-ⓖ.
  For example, the destination ab1 on the code A-ⓐ sheet is connected to ab1 on the A-ⓑ sheet.

a b 1
- 1 → Ref. No.
- b → Circuit diagram division code

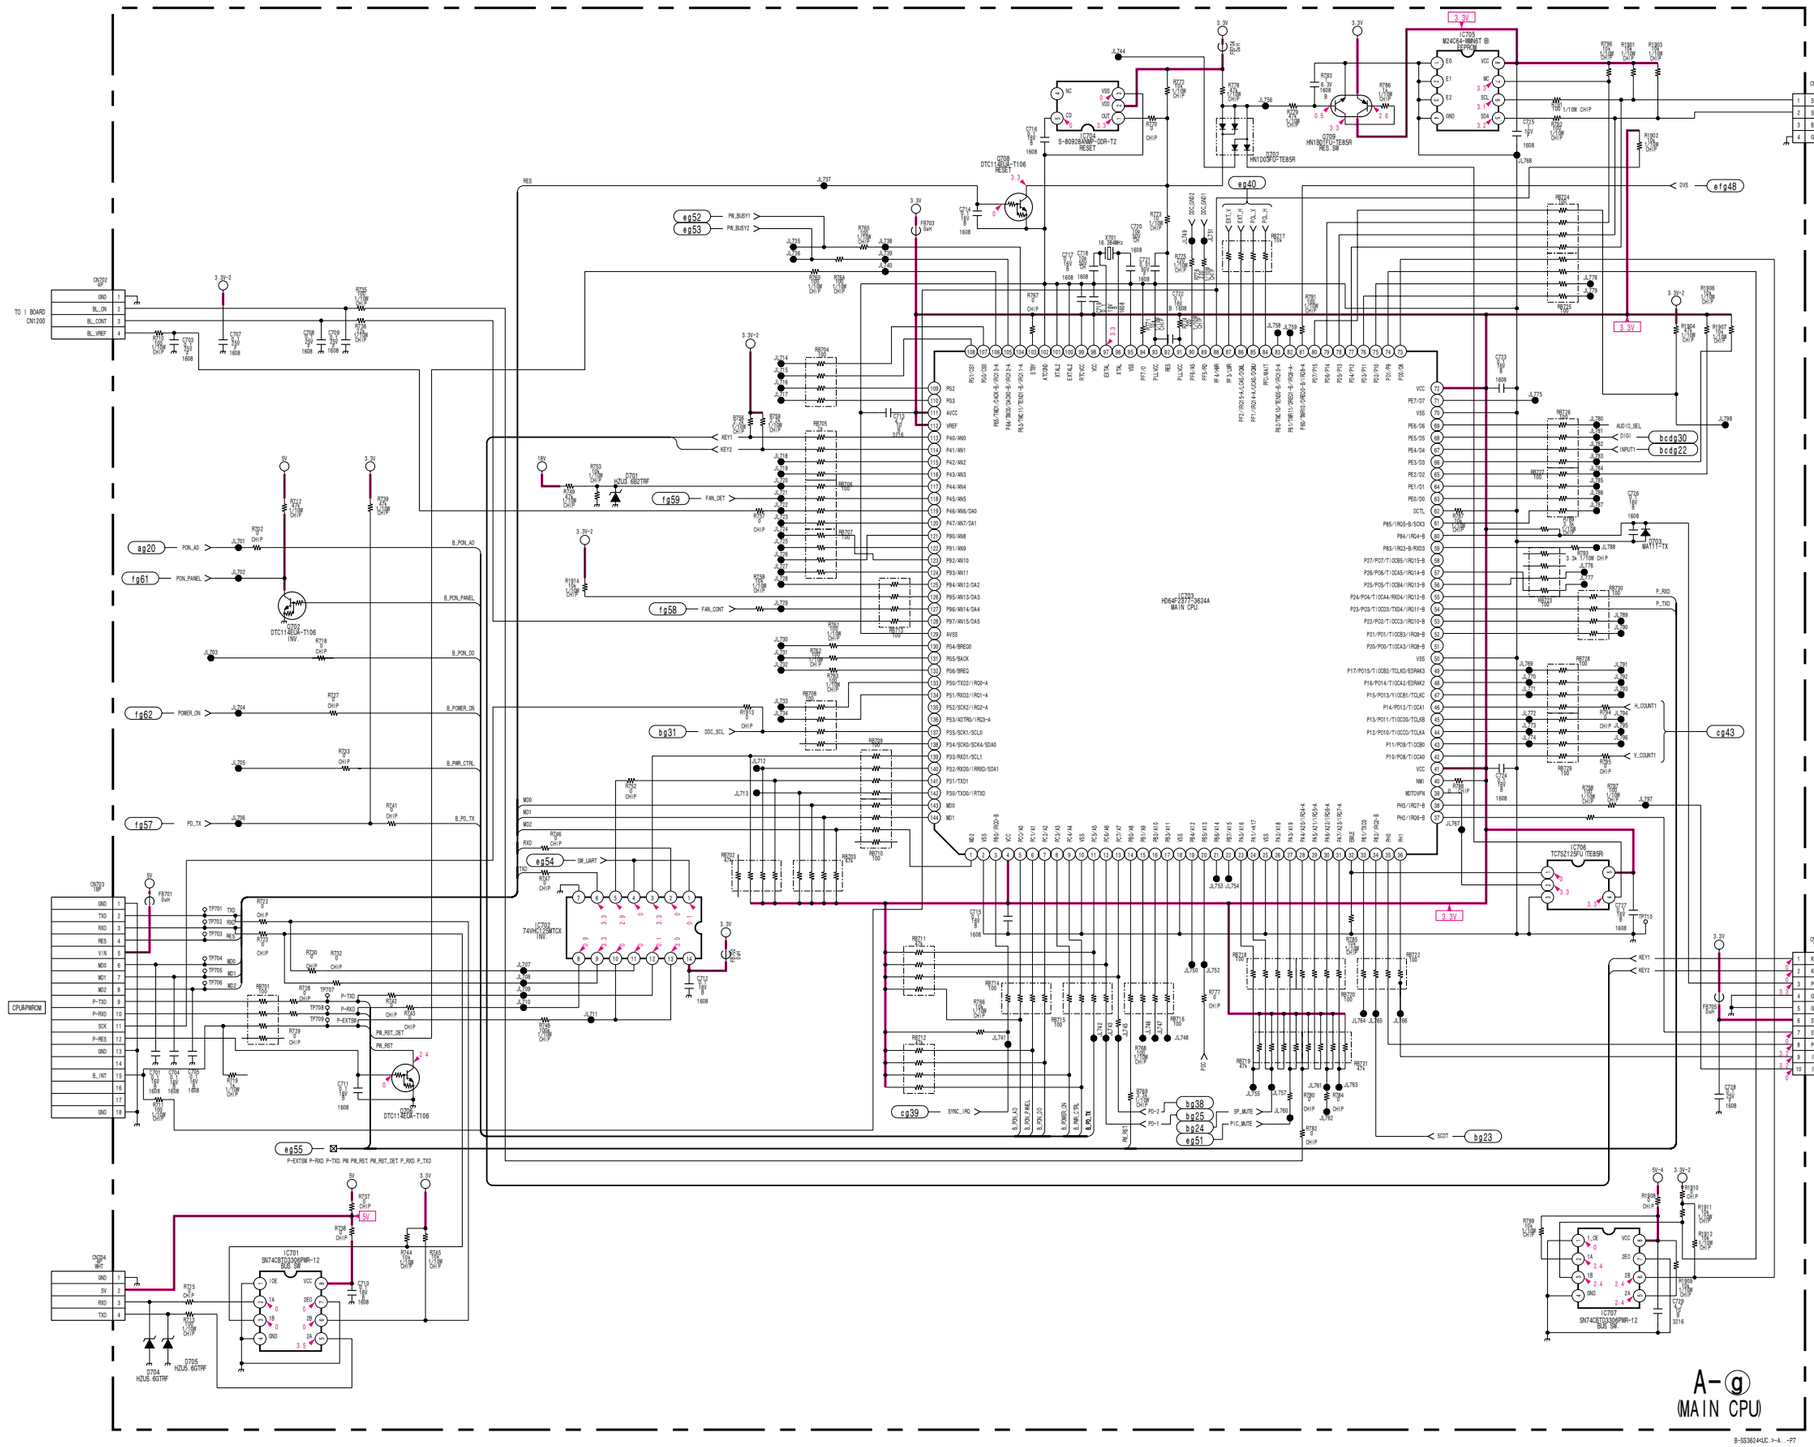

- Divided circuit diagram

  One sheet of A board are circuit diagram is divided into seven sheets,each having the code A-ⓐ to A-ⓖ.

  For example, the destination(ab1)on the code A-ⓐ sheet is connected to (ab1)on the A-ⓑ sheet.

  a b 1
  - Ref. No.
  - Circuit diagram division code

A [AD CONVERTER, PROCESSOR LSI, SCAN CONVERTER, LCD DRIVE]

— A BOARD —

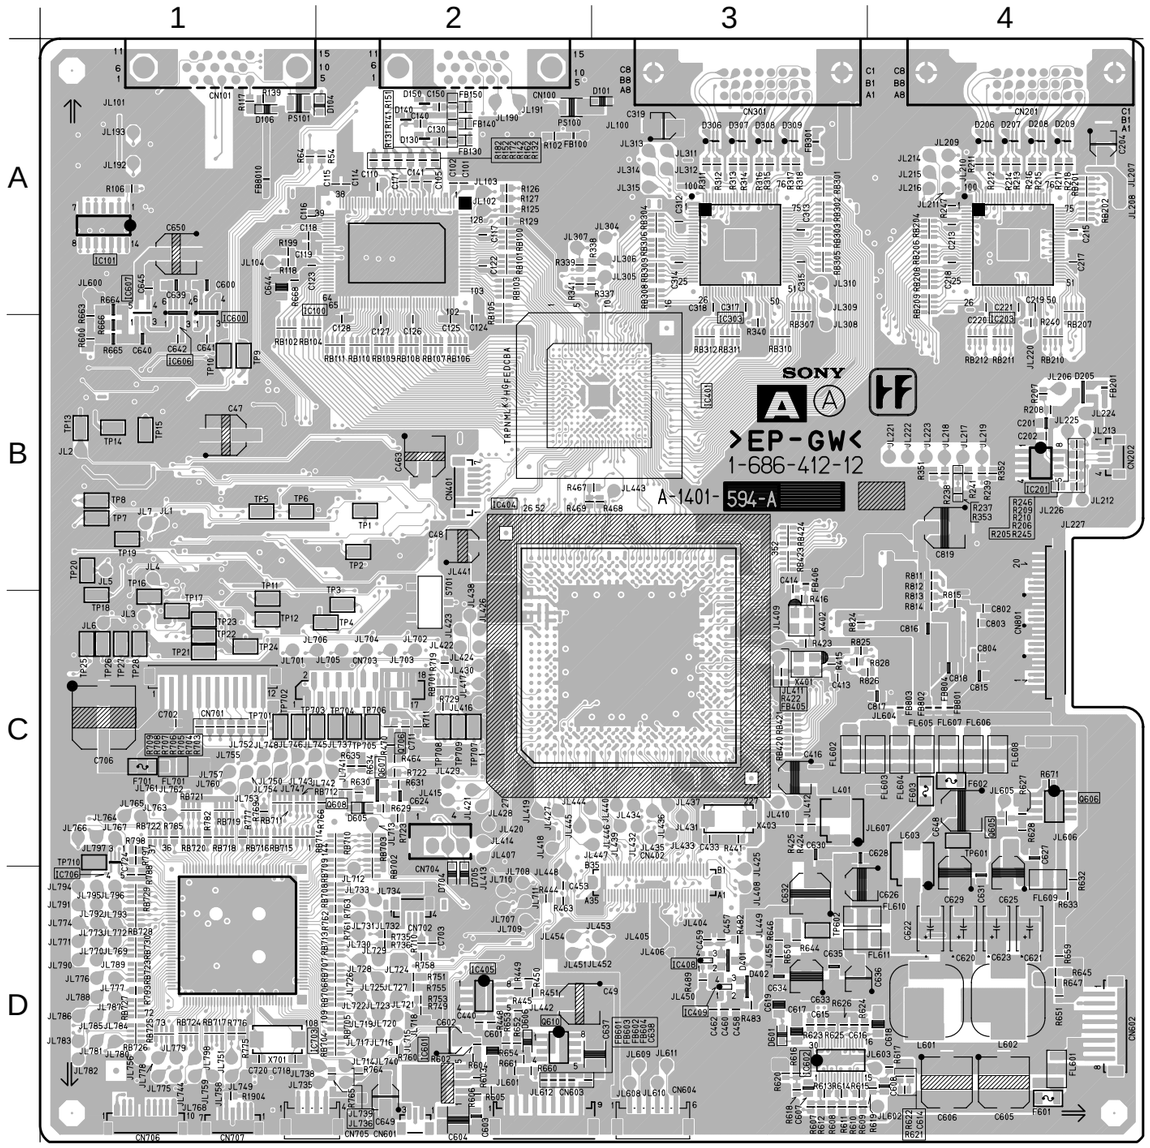

<COMPONENT SIDE>

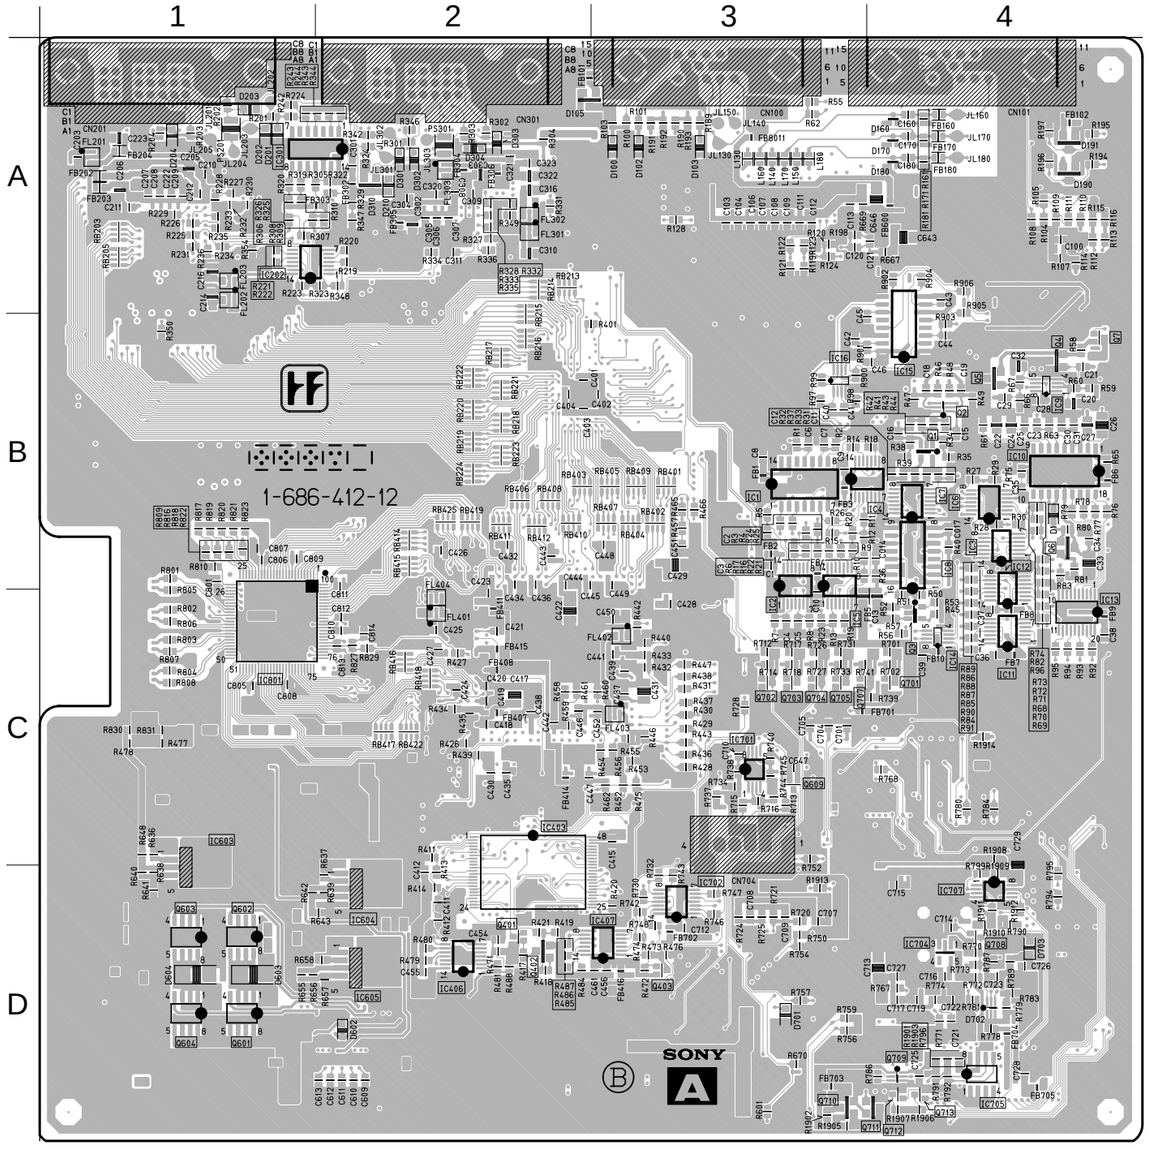

<CONDUCTOR SIDE>

- **A BOARD SEMICONDUCTOR LOCATION**

IC	(COMPONENT SIDE)	(CONDUCTOR SIDE)
IC1		B3
IC2		B3
IC3		B4
IC4		B4
IC5		B3
IC6		B4
IC7		B4
IC8		B4
IC9		B4
IC10		B4
IC11		C4
IC12		B4
IC13		C4
IC14		C4
IC15		B4
IC100	A2	
IC101	A1	
IC201	B4	
IC202		A1
IC203	A4	
IC301		A2
IC303	A3	
IC401	B3	
IC403		D2
IC404	C3	
IC405	D2	
IC406		D2
IC407		D3
IC408	D3	
IC409	D3	
IC600	A1	
IC601	D2	
IC602	D3	
IC604		D2
IC605		D2
IC606	A1	
IC607	A1	
IC701		C3
IC702		D3
IC703	D1	
IC704		D4
IC705		D4
IC706	C1	
IC707		D4
IC801		C1

TRANSISTOR	(COMPONENT SIDE)	(CONDUCTOR SIDE)	*
Q1	B4		⑳
Q2	B4		⑳
Q3	C4		-
Q4	B4		②
Q5	B4		②
Q6	B4		②
Q7	B4		②
Q401	D2		②
Q402	D2		②
Q403	D3		②
Q601	D1		-
Q602	D1		-
Q603		D1	-
Q604		D1	-
Q609		C3	②
Q610	D2		-
Q702		C3	②
Q706	C2		②
Q708		D4	②
Q709		D4	-

DIODE	(COMPONENT SIDE)	(CONDUCTOR SIDE)	*
D1		B4	③
D100		A3	③
D101	A3		③
D102		A3	③
D103		A3	③
D104	A2		③
D105		A2	⑨
D106	A1		③
D130	A2		⑦
D140	A2		⑦
D150	A2		⑦
D160		A4	⑦
D170		A4	⑦
D180		A4	⑦
D190		A4	⑦
D191		A4	⑦
D201		A1	③
D202		A1	③
D203		A1	③
D204		A1	③
D206	A4		-
D207	A4		-
D208	A4		-
D209	A4		-
D210		A2	③
D301		A2	③
D302		A2	③
D303		A2	③
D304		A2	③
D306	A3		-
D307	A3		-
D308	A3		-
D309	A3		-
D310		A2	⑨
D401	D3		⑨
D402	D3		⑨
D601	D3		③
D602		D2	③
D603		D1	③
D604		D1	③
D606	D2		③
D701		D3	③
D702		D4	-
D703		D4	③
D704	D2		③
D705	D2		③

∗: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 2-2)

(2) Schematic Diagram of G Board

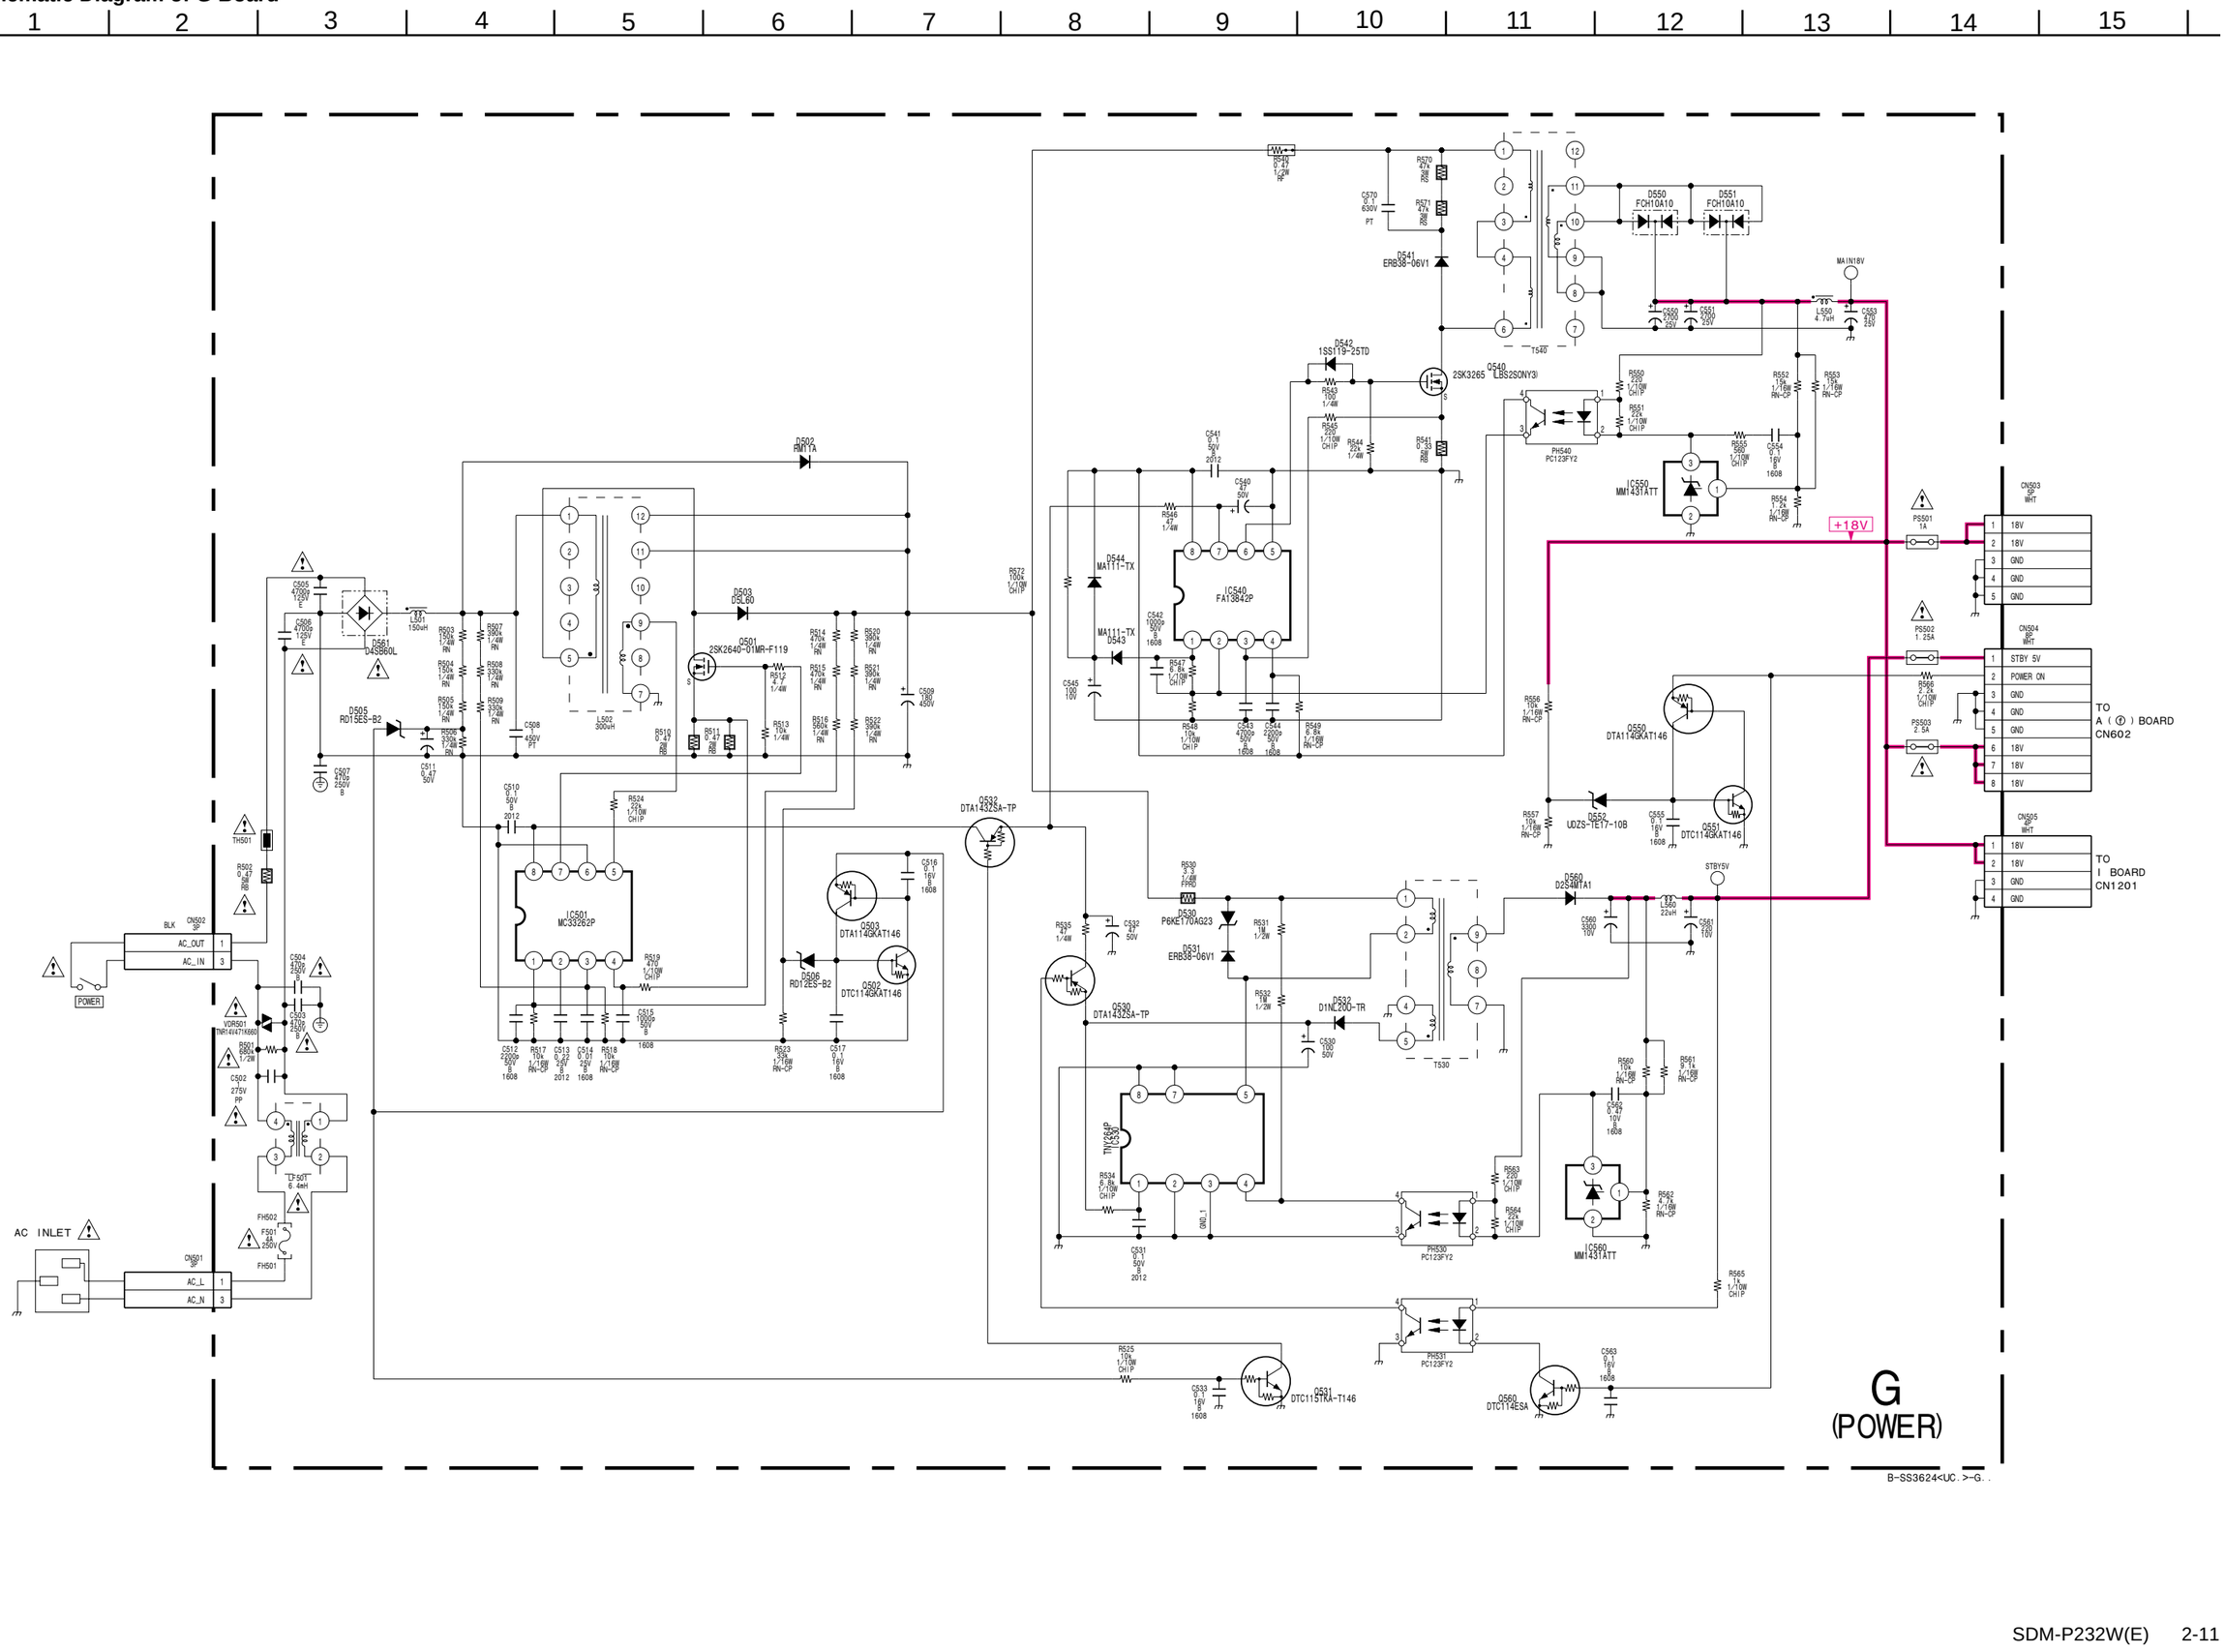

G [POWER]

— G BOARD —

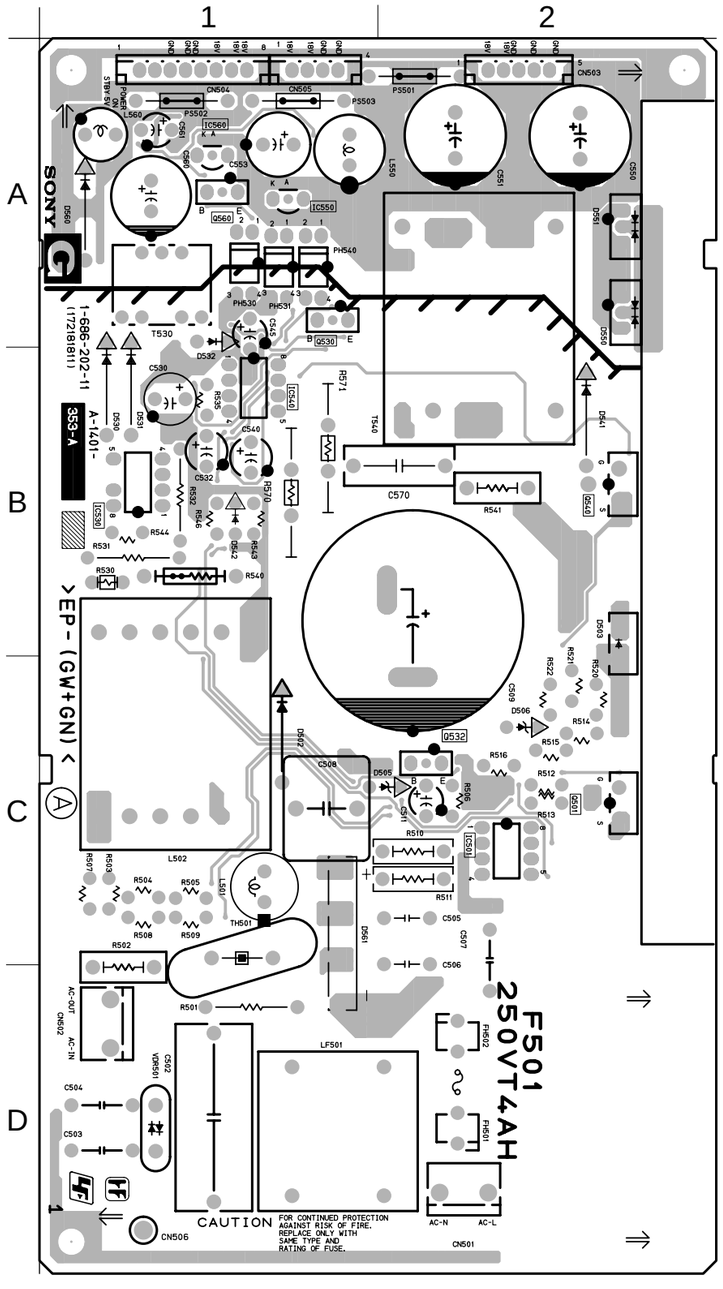

<COMPONENT SIDE>

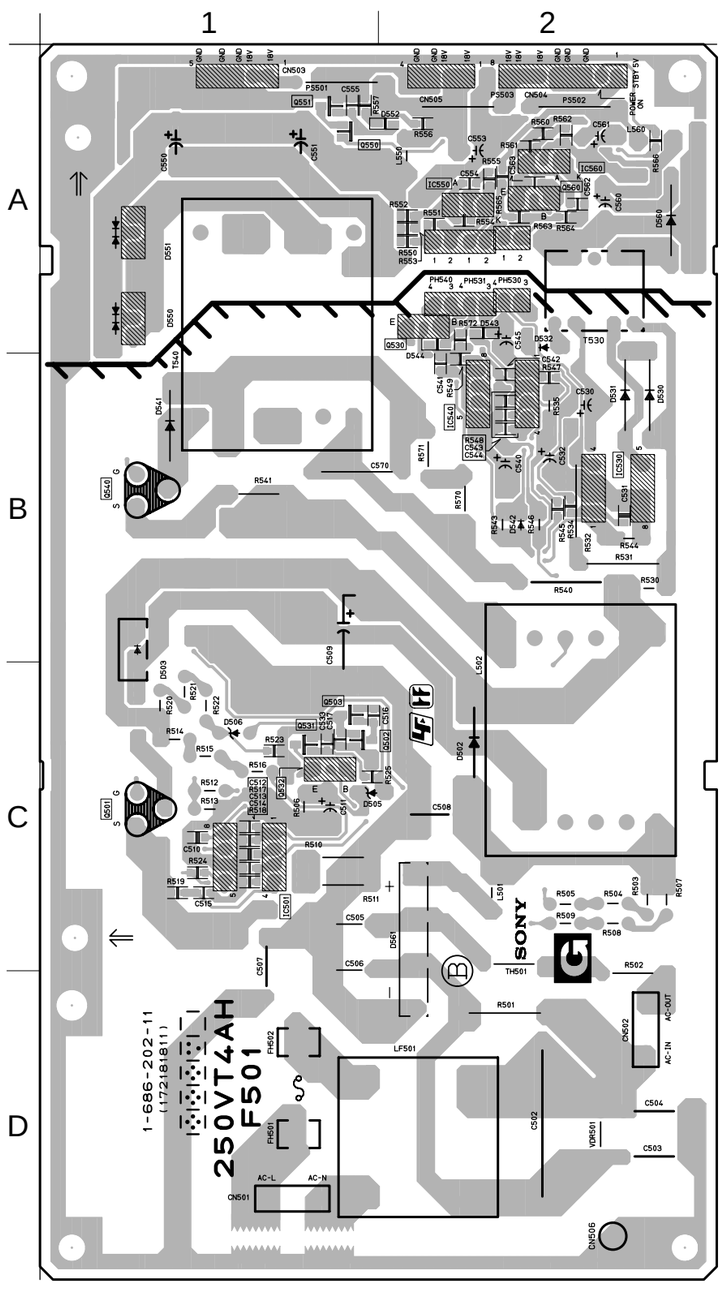

<CONDUCTOR SIDE>

- **G BOARD SEMICONDUCTOR LOCATION**

IC	(COMPONENT SIDE)	(CONDUCTOR SIDE)
IC501	C2	
IC530	B1	
IC540	B1	
IC550	A1	
IC560	A1	

TRANSISTOR	(COMPONENT SIDE)	(CONDUCTOR SIDE)	*
Q501	C2		-
Q502		C1	①
Q503		C1	①
Q530	A1		-
Q531		C1	①
Q532	C2		-
Q540	B2		-
Q550		A1	①
Q551		A1	①
Q560	A1		-

DIODE	(COMPONENT SIDE)	(CONDUCTOR SIDE)	*
D502	C1		-
D503	C2		-
D505	C1		-
D506	C2		-
D530	B1		-
D531	B1		-
D532	A1		-
D541	B2		-
D542	B1		-
D543		A2	③
D544		A2	③
D550	A2		-
D551	A2		-
D552		A2	③
D560	A1		-
D561	C1		-

∗: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 2-2)

(3) Schematic Diagram of H2 Board

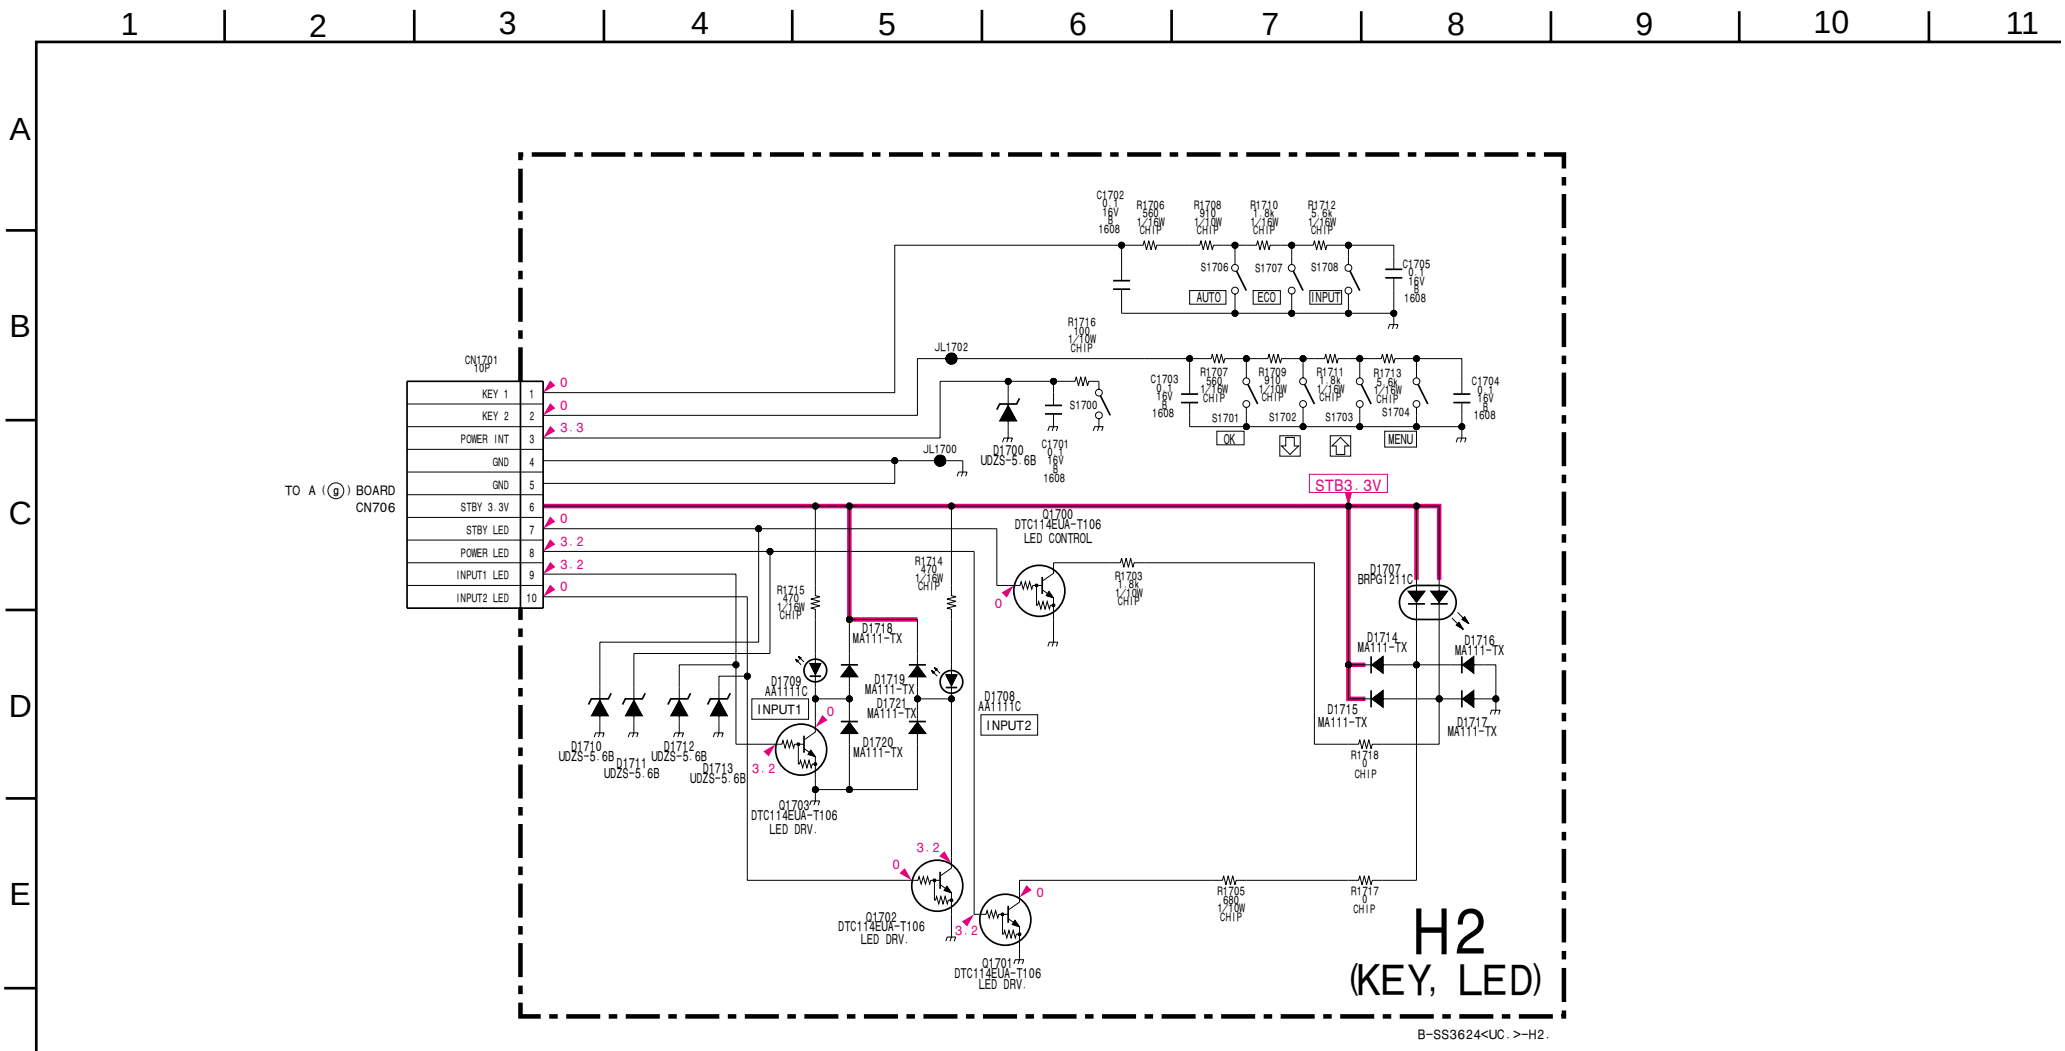

H2 [KEY]

— H2 BOARD —



<COMPONENT SIDE>

<CONDUCTOR SIDE>

H2 BOARD

Terminal name of semiconductors in silk screen printed circuit (∗)

Ref.	∗
Q1700-Q1703	②
D1700, D1707-D1721	③

∗: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 2-2)

(4) Schematic Diagram of I Board

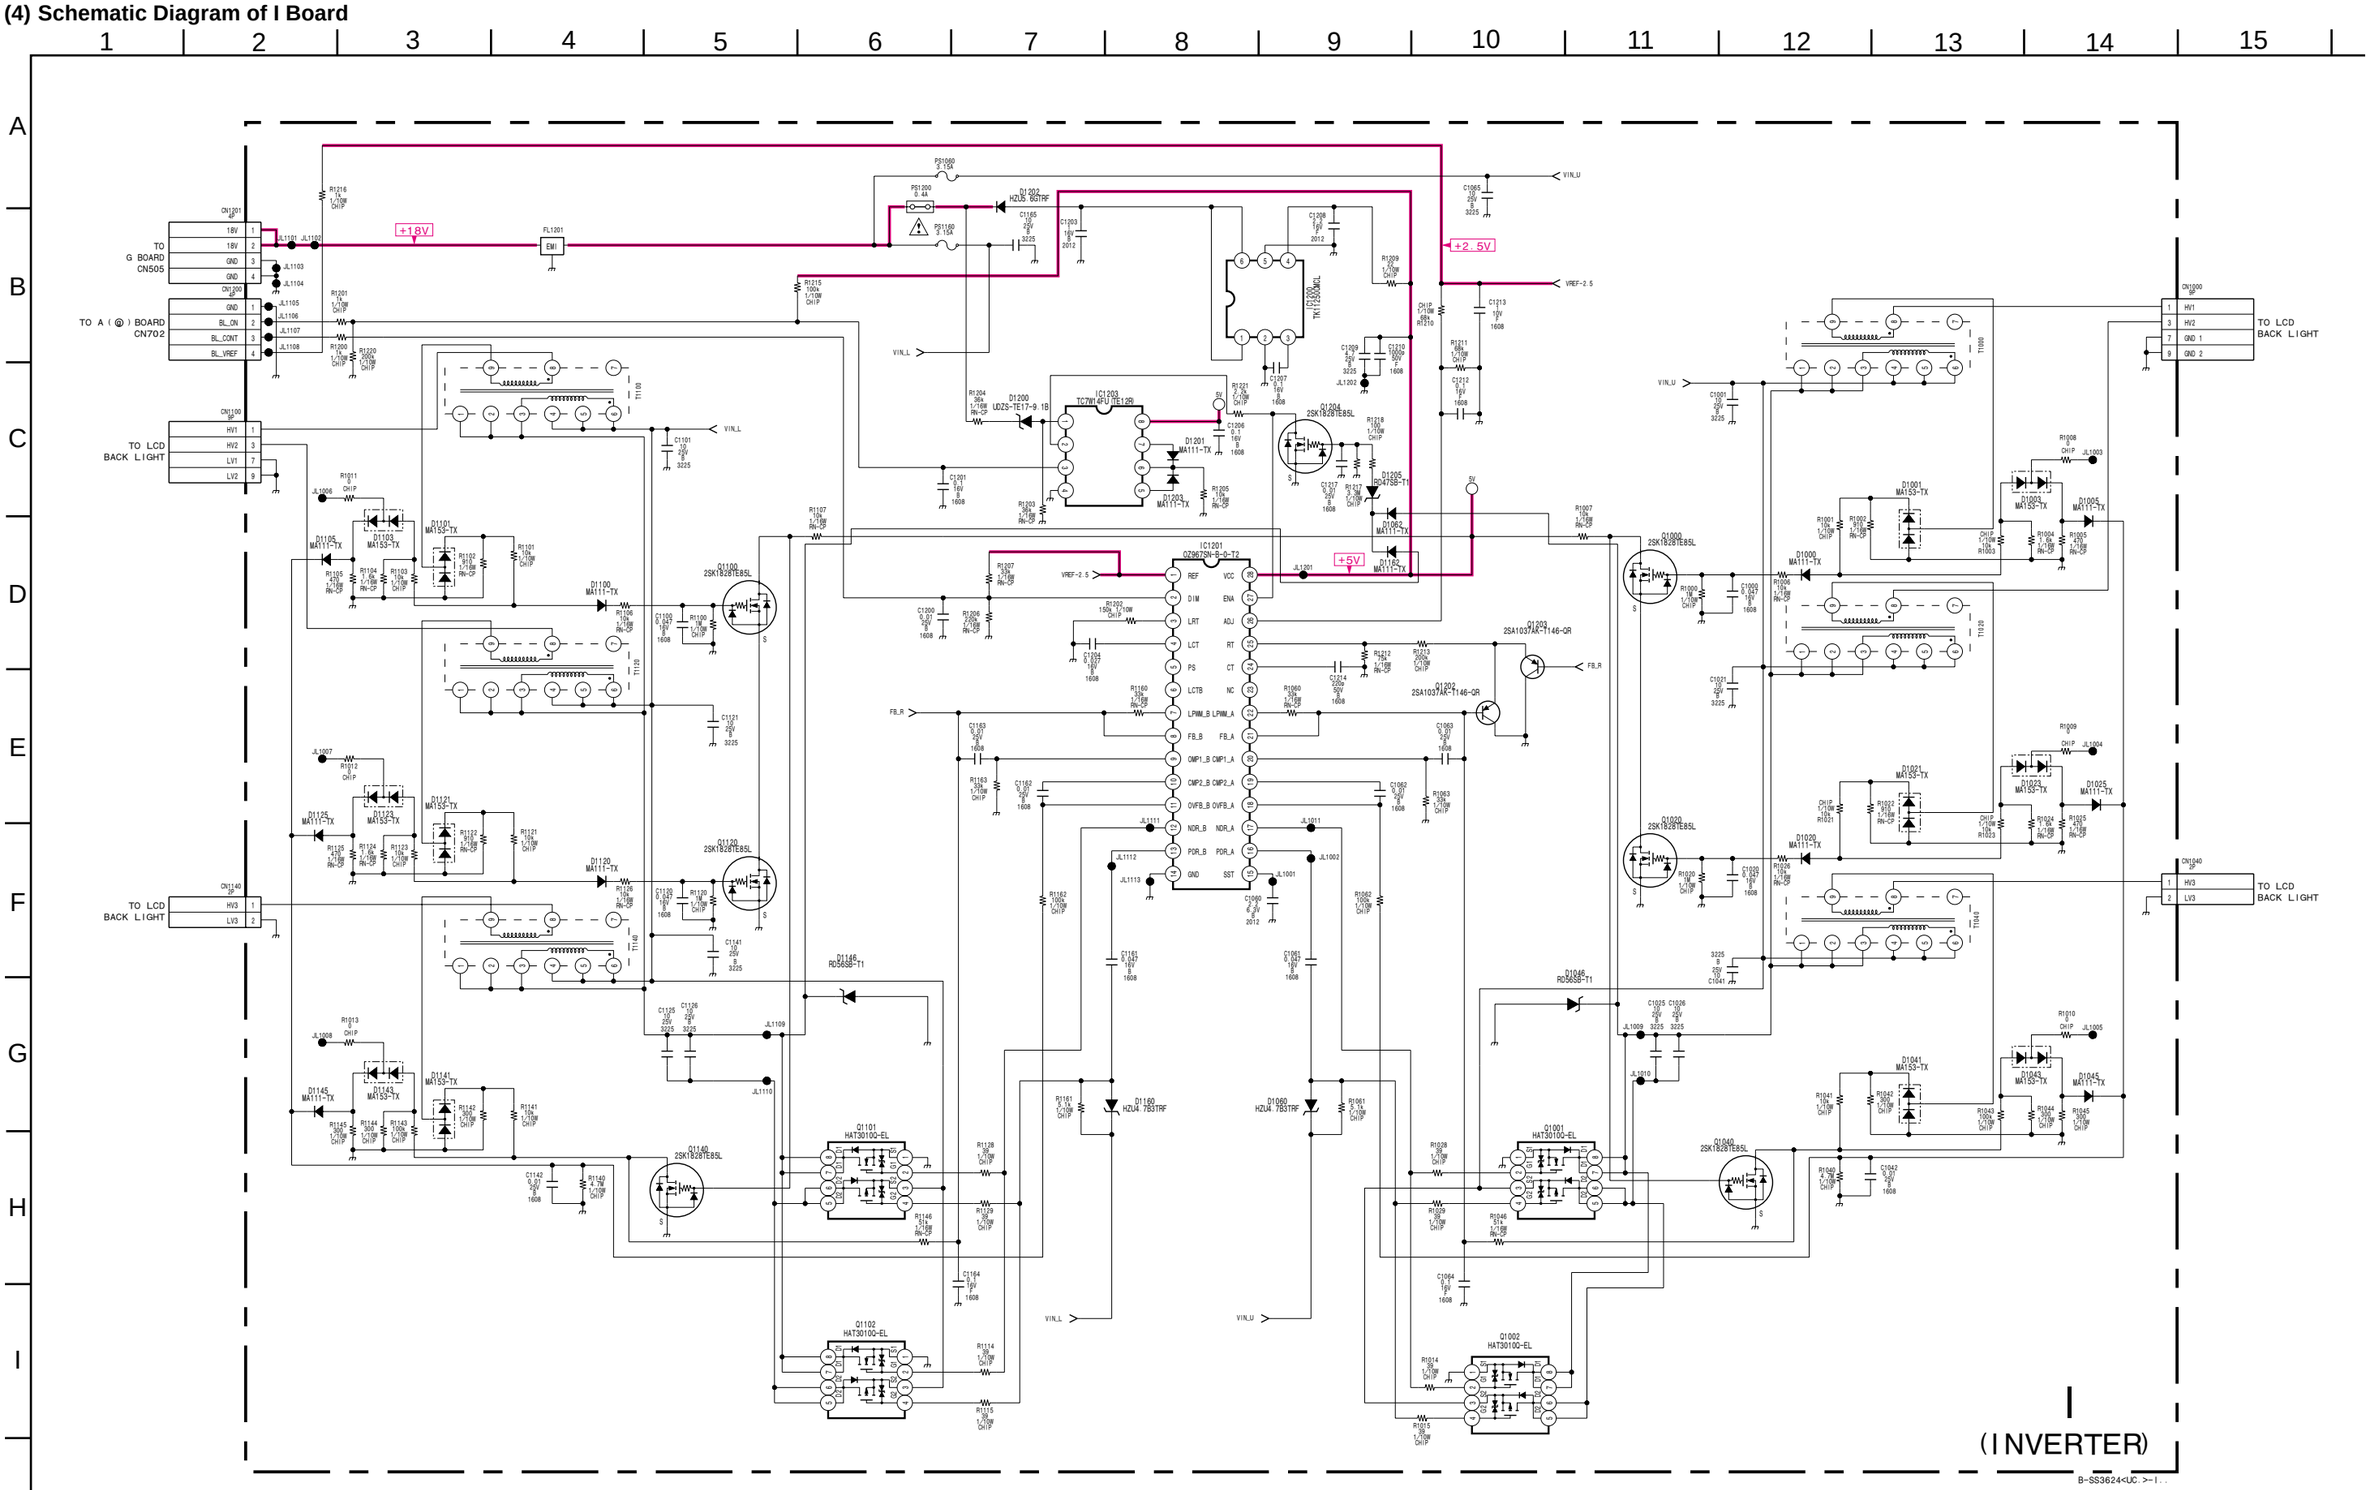

B-SS3624<UC. >-I. .

I [INVERTER]

— I BOARD —

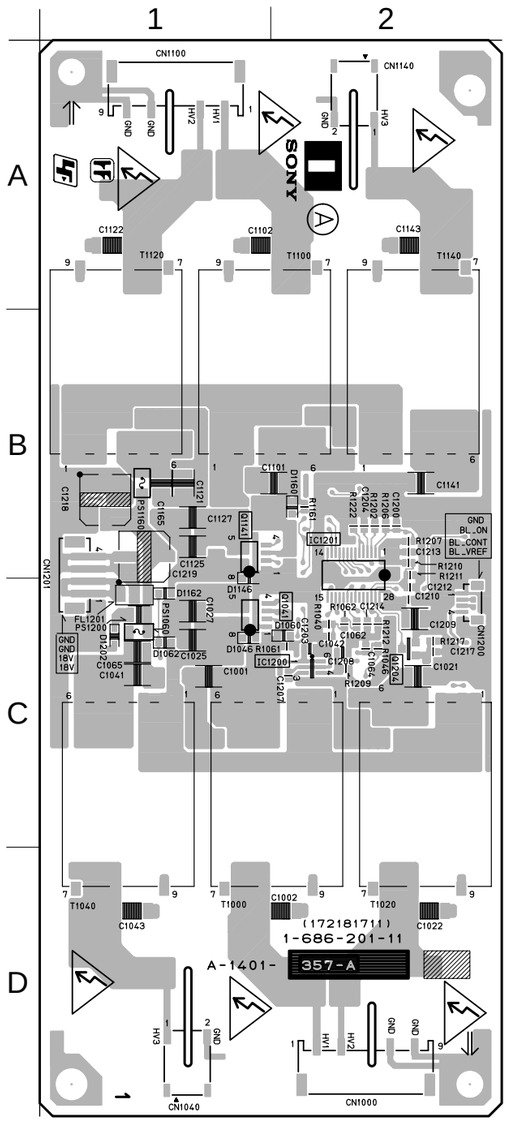

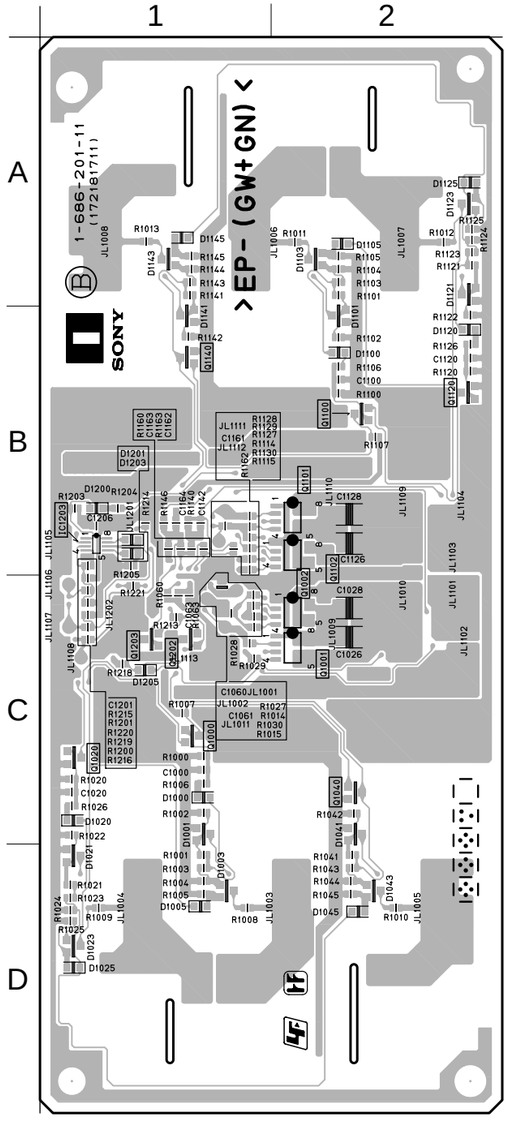

<COMPONENT SIDE> **<CONDUCTOR SIDE>**

• I BOARD SEMICONDUCTOR LOCATION

IC	(COMPONENT SIDE)	(CONDUCTOR SIDE)
IC1200	C2	
IC1201	B2	
IC1203		B1

TRANSISTOR	(COMPONENT SIDE)	(CONDUCTOR SIDE) *	
Q1000		C1	⑬
Q1001		C2	-
Q1002		C2	-
Q1020		C1	⑬
Q1040		C2	⑬
Q1041	C1		-
Q1100		B2	⑬
Q1101		B2	-
Q1102		B2	-
Q1120		B2	⑬
Q1140		B1	⑬
Q1202		C1	②
Q1203		C1	②
Q1204	C2		-

DIODE	(COMPONENT SIDE)	(CONDUCTOR SIDE) *	
D1000		C1	③
D1001		C1	⑦
D1003		D1	⑦
D1005		D1	③
D1020		C1	③
D1021		D1	⑦
D1023		D1	⑦
D1025		D1	③
D1041		C2	⑦
D1043		D2	⑦
D1045		D2	③
D1046	C1		③
D1060	C2		③
D1062	C1		③
D1100		B2	③
D1101		B2	⑦
D1103		A2	⑦
D1105		A2	③
D1120		B2	③
D1121		A2	⑦
D1123		A2	⑦
D1125		A2	③
D1141		B1	⑦
D1143		A1	⑦
D1145		A1	③
D1146	B1		③
D1160	B2		③
D1162	C1		③
D1200		B1	③
D1201		B1	③
D1202	C1		③
D1203		B1	③
D1205		C1	③

∗: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 2-2)

2-3. SEMICONDUCTORS

AD9888KS-205

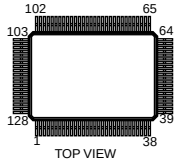

BA7078AF-E2



18Pin SOP

BU9882F-WE2
MC74LVX00DTR2
SN74AHCT04PWR
TC74LCX00FT(EL)
TC74LCX125FT(EL)
TC74LCX14F(EL)
TC74VHC125FT(EL)
TC74VHC86FT(EL)
TC74VHCT04AFT(EL)
TC74VHCT125AFT(EL)
74VHC125MTCX



14Pin SOP

FA13842P
MC33262P
TNY264P



8Pin DIP

HD64F2377-3624A
TC7SZ125FU(TE85R)



144Pin QFP

MBM29LV800TA-70PFTN-SV3624A



48Pin SOP

MM1431ATT



M24C64-WMN6T(B)
SN74CBTD3306PWR-12
TC7W04FU
TC7W04FU(TE12R)
TC7W14FU(TE12R)
TC7WH04FU(TE12R)



8Pin SOP

OZ967SN-B-0-T2



28Pin SOP

PQ07VZ012ZP



PW171-30U

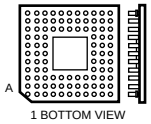

352Pin PGA

SII160CT100
TFP403PZP



100Pin QFP

S-80821ANNP-EDJ-T2
S-80828ANNP-EDR-T2



4Pin CHIP

S-80928ANMP-DDR-T2
TK71733SCL-TP



5Pin CHIP

TC74HC123AF
TC74HC123AF(EL)



16Pin SOP

TC74LCX244FT(EL)



20Pin SOP

TK11233CMCL
TK11250CMCL



6Pin CHIP

TPS5120DBTR



30Pin SOP

XCR3256XL-10FT256-3624T

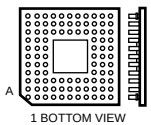

256Pin PGA

DTA114EUA-T106
DTA114GKAT146
DTC114GKA
DTC114GKAT146
DTC144EUA-T106
2SA1037AK-T146-QR
2SA1037AK-T146-R
2SA1462-T1Y33Y34
2SA1462-Y33
2SA1611T1-M5M6
2SC2712-YG
2SC2712-YG-TE85L



DTC114ESA
DTC114ESA-TP

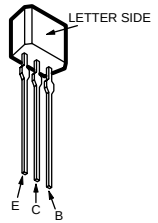

DTC114EU
DTC114EUA-T106



DTC115TKA-T146



FMG4AT148
FMS1A-T148

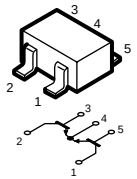

HN1B01FU-TE85R

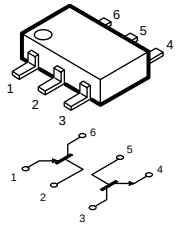

UMT1N-TN

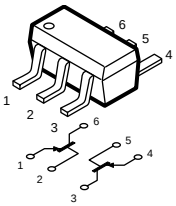

UPA1716G-E2

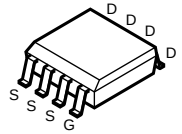

2SK1828
2SK1828TE85L



DAN202K-T-146
MA151WK-TX
1SS184



DTZ10B
HZU3.6B2TRF
HZU4.7B3TRF
HZU5.6GTRF
MA111-TX
RD47SB-T1
RD56SB-T1
UDZSTE-1710B
UDZSTE-175.6B
UDZSTE-179.1B
1SS355TE-17

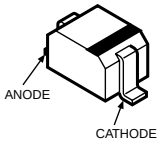

D1NL20U-TR
D2S4MF
D2S4MTA1

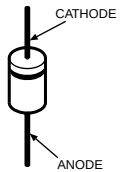

D4SB60L

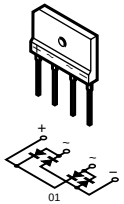

D5L60

ERB38-06V1
P6KE170AG23



HN1D03FU-TE85L
HN1D03FU-TE85R

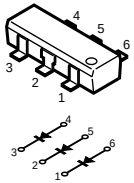

MA153-TX
1SS226



MA8082-H-TX
1SS357(T3SONY1)

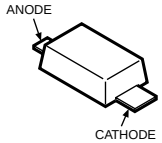

RB060L-40TE25

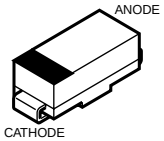

RD12ESB2
RD12ES-T1B2
RD15ESB2
RD15ES-T1B2
1SS119-25
1SS119-25TD



RM11A
RM11C



1SS362-TE85L

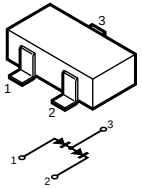

AA1111C

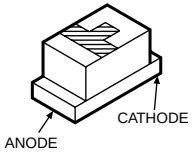

SECTION 3
EXPLODED VIEWS

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

3-1. CHASSIS

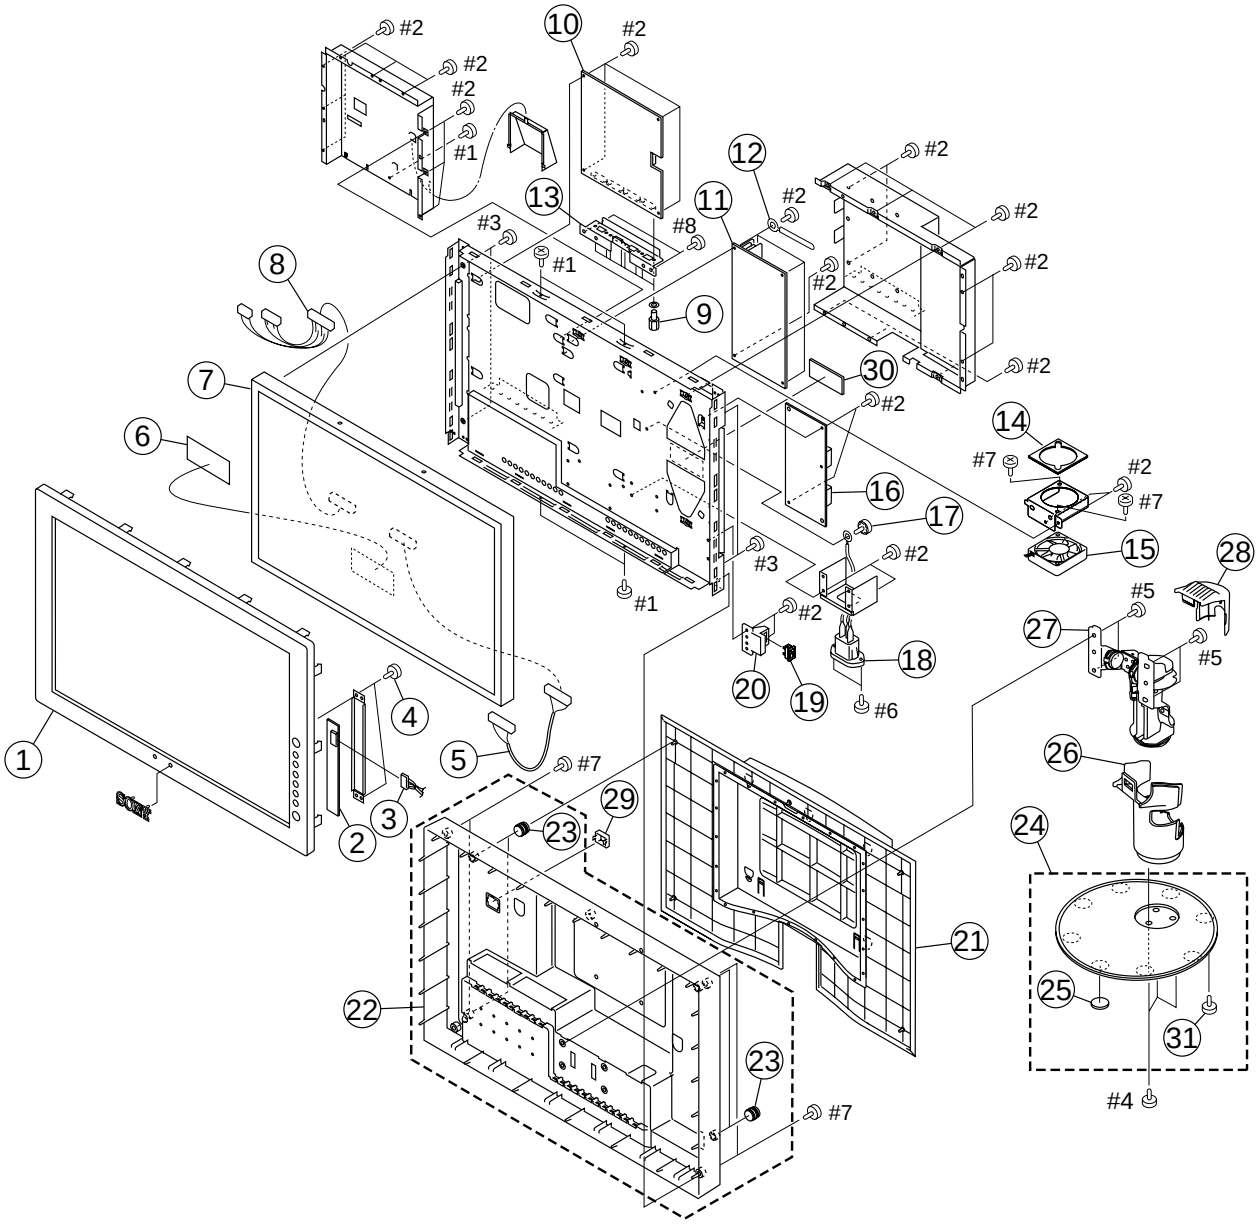
#2
#1
#3
#8
#7
#5
#6
#4
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31

REF.NO.		PART NO.	DESCRIPTION	REMARK
1		X-4040-913-1	BEZEL ASSY (U/C)	
⚠1		X-4040-998-1	BEZEL ASSY (AEP)	
2		8-933-600-19	H2 MOUNT	
3	*	1-900-270-24	MAIN HARNESS	
4		3-713-791-05	SCREW (M1.7)	
5		1-900-270-69	TMDS CONNECTOR ASSY	
6	*	4-091-715-01	LABEL, INFORMATION (U/C)	
⚠1	*	4-091-715-11	LABEL, INFORMATION (AEP)	
7		1-805-051-11	LCD PANEL	
8		1-900-270-26	CONNECTOR ASSY 15P	
9		4-635-966-01	SCREW (HEX)	
10		8-933-600-20	A MOUNT	
11		8-933-600-11	G MOUNT	
12		3-701-822-00	HOLDER, WIRE	
13		4-091-327-01	PLATE, TERMINAL	
14	*	4-091-713-01	SPACER, FAN	
15		1-763-882-11	FAN, COOLING	
16		8-933-600-18	I MOUNT	
17		4-389-025-01	SCREW (M4) (EXT TOOTH WASHER)	
18	⚠	1-785-425-11	INLET,AC (3P)	
19		A-1603-770-A	AC SW COMPLETE ASSY	
20		4-091-328-01	HOLDER, AC SWITCH (U/C)	
⚠1		4-091-328-11	HOLDER, AC SWITCH (AEP)	
21		X-4040-912-1	PANEL ASSY, REAR (U/C)	
⚠1		X-4040-996-1	PANEL ASSY, REAR (AEP)	
22		X-4040-914-1	COVER ASSY, REAR (U/C)	23
⚠1		X-4040-997-1	COVER ASSY, REAR (AEP)	
23		4-912-253-01	CATCHER	
24		X-4040-911-1	BASE ASSY, STAND (U/C)	25
⚠1		X-4040-999-1	BASE ASSY, STAND (AEP)	
25		4-074-713-01	LEG, RUBBER	

REF.NO.		PART NO.	DESCRIPTION	REMARK
26		X-4040-942-1	COVER ASSY, HINGE (F) (U/C)	
⚠1		X-4041-014-1	COVER ASSY, HINGE (F) (AEP)	
27		4-091-337-01	ARM, HINGE	
28		4-091-350-01	COVER (R), HINGE	
29		4-091-323-01	COVER, ECS (U/C)	
⚠1		4-091-323-11	COVER, ECS (AEP)	
30	*	4-091-321-01	SHEET (A), HEAT RELEASE	
31		4-091-743-01	SCREW, THIN HEAD +TAP 4X8 TYPE2	
#1		7-682-947-01	SCREW +PSW 3X6	
#2		7-685-871-01	SCREW +BVTT 3X6 (S)	
#3		7-682-554-04	SCREW +B 3X25	
#4		7-682-962-01	SCREW +PSW 4X10	
#5		7-682-964-01	SCREW +PSW 4X14	
#6		7-685-246-19	SCREW +KTP 3X8 TYPE2 SLIT	
#7		7-685-660-79	SCREW +BV 4X10, TYPE 2, IT-3	
#8		7-685-545-11	SCREW +BTP 3X6 TYPE2 N-S	

3-2. PACKING MATERIALS

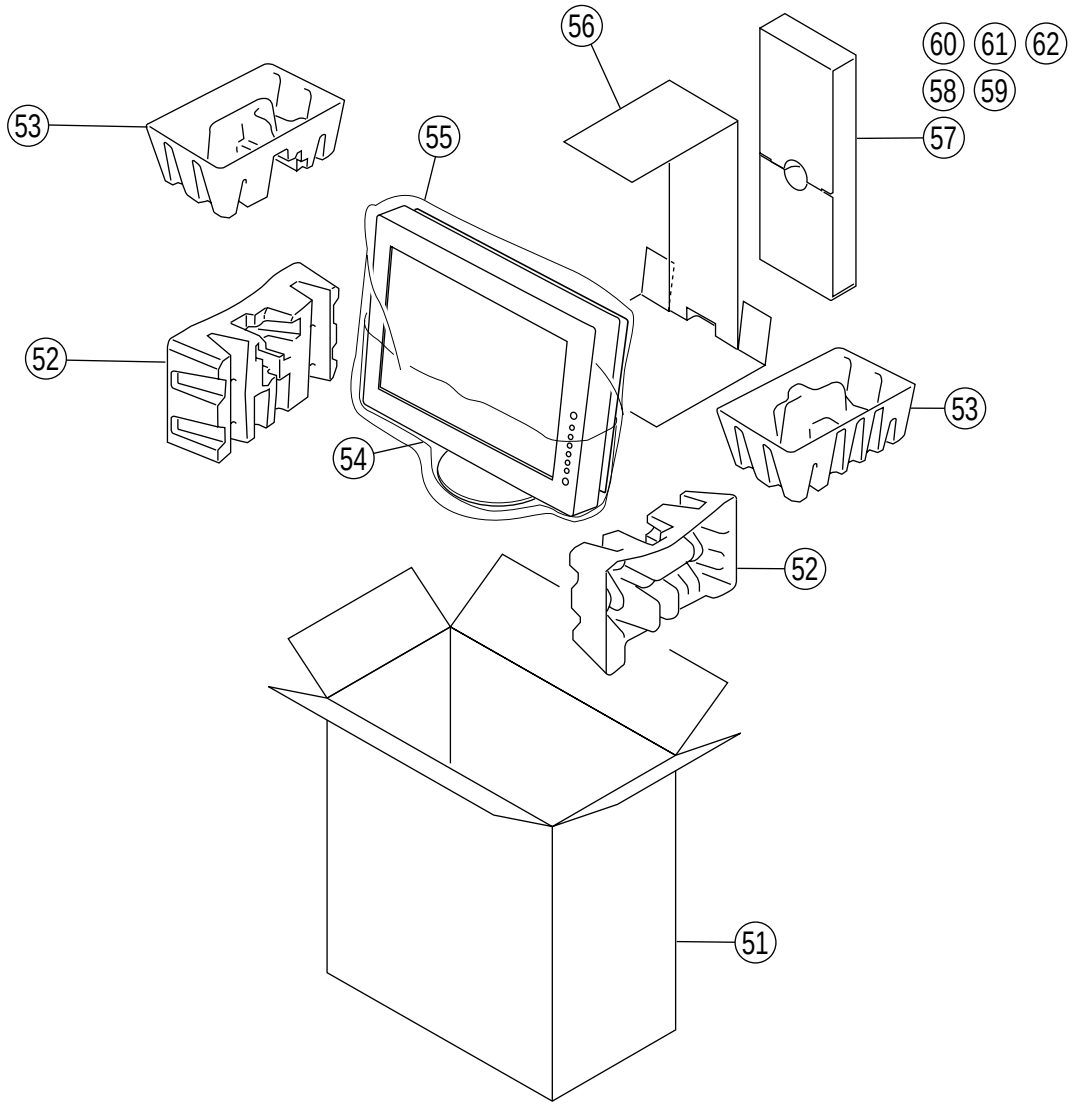

REF.NO.	PART NO.	DESCRIPTION	REMARK
51	* 4-090-330-01	INDIVIDUAL CARTON (U/C)	
⚠1	* 4-092-109-01	INDIVIDUAL CARTON (AEP)	
52	* 4-090-329-01	CUSHION, LOWER	
53	* 4-090-328-01	CUSHION, UPPER	
54	* 4-091-883-01	SHEET, PROTECTION	
55	* 4-091-763-01	BAG, PROTECTION	
56	* 4-091-642-01	PAD, STAND FIXED	
57	* 4-090-331-01	BOX, ACCESSARY	
58	⚠ 1-765-720-32	AC POWER-SUPPLY CORD SET	(R/V: 125) (U/C)
⚠1	⚠ 1-765-719-12	AC POWER-SUPPLY CORD SET	(R/V: 250) (AEP)
59	1-824-734-11	CABLE, DVI	
60	1-824-752-11	CABLE ASSY (15PDSUB CONNECTOR)	
61	4-092-059-12	MANUAL, INSTRUCTION (U/C)	
⚠1	4-092-059-21	MANUAL, INSTRUCTION (AEP)	
62	4-092-155-01	CD-ROM	

SECTION 4
ELECTRICAL PARTS LIST

NOTE:

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

RESISTORS
- All resistors are in ohms
- F : nonflammable

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1		G	CAPACITOR	⚠	C502	1-165-541-11	FILM 1UF 10% 275V			
2		G	CAPACITOR	⚠	C503	1-113-900-11	CERAMIC 470PF 10.00% 250V			
3		G	CAPACITOR	⚠	C504	1-113-900-11	CERAMIC 470PF 10.00% 250V			
4		G	CAPACITOR	⚠	C505	1-113-924-11	CERAMIC 0.0047UF 20.00% 250V			
5		G	CAPACITOR	⚠	C506	1-113-924-11	CERAMIC 0.0047UF 20.00% 250V			
6		G	CAPACITOR		C507	1-113-900-11	CERAMIC 470PF 10.00% 250V			
7		G	CAPACITOR		C508	1-117-227-31	MYLAR 1UF 5.00% 450V			
8		G	CAPACITOR		C509	1-135-361-11	ELECT 180UF 20% 450V			
9		G	CAPACITOR		C510	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
10		G	CAPACITOR		C511	1-107-901-11	ELECT 0.47UF 20.00% 50V			
11		G	CAPACITOR		C512	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V			
12		G	CAPACITOR		C513	1-115-340-11	CERAMIC CHIP 0.22UF 10.00% 25V			
13		G	CAPACITOR		C514	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
14		G	CAPACITOR		C515	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V			
15		G	CAPACITOR		C516	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
16		G	CAPACITOR		C517	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
17		G	CAPACITOR		C530	1-107-910-11	ELECT 100UF 20.00% 50V			
18		G	CAPACITOR		C531	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
19		G	CAPACITOR		C532	1-107-909-11	ELECT 47UF 20.00% 50V			
20		G	CAPACITOR		C533	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
21		G	CAPACITOR		C540	1-107-909-11	ELECT 47UF 20.00% 50V			
22		G	CAPACITOR		C541	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
23		G	CAPACITOR		C542	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V			
24		G	CAPACITOR		C543	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V			
25		G	CAPACITOR		C544	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V			
26		G	CAPACITOR		C545	1-128-526-11	ELECT 100UF 20.00% 25V			
27		G	CAPACITOR		C550	1-165-738-21	ELECT 2700UF 20% 25V			
28		G	CAPACITOR		C551	1-165-738-21	ELECT 2700UF 20% 25V			
29		G	CAPACITOR		C553	1-128-528-11	ELECT 470UF 20.00% 25V			
30		G	CAPACITOR		C554	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
31		G	CAPACITOR		C555	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
32		G	CAPACITOR		C560	1-107-879-11	ELECT 3300UF 20.00% 10V			
33		G	CAPACITOR		C561	1-107-889-11	ELECT 220UF 20.00% 25V			
34		G	CAPACITOR		C562	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
35		G	CAPACITOR		C563	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
36		G	CAPACITOR		C570	1-136-209-11	MYLAR 0.1UF 10.00% 630V			
37		G	CONNECTOR	*	CN501	1-691-960-11	PIN, CONNECTOR (PC BOARD) 3P			
38		G	CONNECTOR	*	CN502	1-691-960-21	PIN, CONNECTOR (PC BOARD) 3P			
39		G	CONNECTOR	*	CN503	1-564-508-11	PLUG, CONNECTOR 5P			
40		G	CONNECTOR	*	CN504	1-564-511-11	PLUG, CONNECTOR 8P			
41		G	CONNECTOR	*	CN505	1-564-507-11	PLUG, CONNECTOR 4P			
42		G	DIODE		D502	8-719-304-63	DIODE RM11C			
43		G	DIODE		D503	8-719-029-04	DIODE D5L60			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
44		G	DIODE		D505	8-719-110-41	DIODE RD15ESB2			
45		G	DIODE		D506	8-719-110-31	DIODE RD12ESB2			
46		G	DIODE		D530	8-719-066-51	DIODE P6KE170AG23			
47		G	DIODE		D531	8-719-069-63	DIODE ERB38-06V1			
48		G	DIODE		D532	8-719-063-73	DIODE D1NL20U-TR			
49		G	DIODE		D541	8-719-069-63	DIODE ERB38-06V1			
50		G	DIODE		D542	8-719-911-19	DIODE 1SS119-25			
51		G	DIODE		D543	8-719-404-50	DIODE MA111-TX			
52		G	DIODE		D544	8-719-404-50	DIODE MA111-TX			
53		G	DIODE		D550	8-719-074-58	DIODE FCH10A10			
54		G	DIODE		D551	8-719-074-58	DIODE FCH10A10			
55		G	DIODE		D552	8-719-977-28	DIODE DTZ10B			
56		G	DIODE		D560	8-719-022-97	DIODE D2S4MF			
57		G	DIODE	⚠	D561	8-719-510-53	DIODE D4SB60L			
58		G	FUSE	⚠	F501	1-576-231-11	FUSE 4A 250V			
59		G	FUSE HOLDER		FH501	1-533-223-11	FUSE HOLDER 0A 0V			
60		G	FUSE HOLDER		FH502	1-533-223-11	FUSE HOLDER 0A 0V			
61		G	IC		IC501	8-759-482-62	IC MC33262P			
62		G	IC		IC530	6-600-148-01	IC TNY264P			
63		G	IC		IC540	8-759-535-32	IC FA13842P			
64		G	IC		IC550	8-759-682-42	IC MM1431ATT			
65		G	IC		IC560	8-759-682-42	IC MM1431ATT			
66		G	COIL		L501	1-406-666-21	INDUCTOR 150UH			
67		G	COIL		L502	1-456-167-11	INDUCTOR 300UH			
68		G	COIL		L550	1-406-657-61	INDUCTOR 4.7UH			
69		G	COIL		L560	1-412-529-11	INDUCTOR 22UH			
70		G	COIL	⚠	LF501	1-456-176-11	COIL, LINE FILTER			
71		G	PHOTO COUPLER		PH530	8-749-010-64	PHOTO COUPLER PC123F2			
72		G	PHOTO COUPLER		PH531	8-749-010-64	PHOTO COUPLER PC123F2			
73		G	PHOTO COUPLER		PH540	8-749-010-64	PHOTO COUPLER PC123F2			
74		G	IC LINK	⚠	PS501	1-533-590-51	IC LINK 1A 90V			
75		G	IC LINK	⚠	PS502	1-533-591-31	IC LINK 1.25A 90V			
76		G	IC LINK	⚠	PS503	1-533-594-31	IC LINK 2.5A 90V			
77		G	TRANSISTOR		Q501	6-550-335-01	TRANSISTOR 2SK2640-01MR-F119			
78		G	TRANSISTOR		Q502	8-729-033-25	TRANSISTOR DTC114GKA			
79		G	TRANSISTOR		Q503	8-729-033-26	TRANSISTOR DTA114GKAT146			
80		G	TRANSISTOR		Q530	8-729-029-55	TRANSISTOR DTA143ZSA-TP			
81		G	TRANSISTOR		Q531	8-729-027-48	TRANSISTOR DTC115TKA-T146			
82		G	TRANSISTOR		Q532	8-729-029-55	TRANSISTOR DTA143ZSA-TP			
83		G	TRANSISTOR		Q540	6-550-350-01	TRANSISTOR 2SK3265 (LBS2SONY3)			
84		G	TRANSISTOR		Q550	8-729-033-26	TRANSISTOR DTA114GKAT146			
85		G	TRANSISTOR		Q551	8-729-033-25	TRANSISTOR DTC114GKA			
86		G	TRANSISTOR		Q560	8-729-029-66	TRANSISTOR DTC114ESA			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
87		G	RESISTOR	⚠	R501	1-219-754-11	METAL 680K 5% 1/2W			
88		G	RESISTOR	⚠	R502	1-219-440-11	CEMENTED 0.47 10% 5W			
89		G	RESISTOR		R503	1-215-473-00	METAL 150K 1% 1/4W			
90		G	RESISTOR		R504	1-215-473-00	METAL 150K 1% 1/4W			
91		G	RESISTOR		R505	1-215-473-00	METAL 150K 1% 1/4W			
92		G	RESISTOR		R506	1-215-481-00	METAL 330K 1% 1/4W			
93		G	RESISTOR		R507	1-215-483-00	METAL 390K 1% 1/4W			
94		G	RESISTOR		R508	1-215-481-00	METAL 330K 1% 1/4W			
95		G	RESISTOR		R509	1-215-481-00	METAL 330K 1% 1/4W			
96		G	RESISTOR		R510	1-217-153-00	METAL 0.47 10% 2W			
97		G	RESISTOR		R511	1-217-153-00	METAL 0.47 10% 2W			
98		G	RESISTOR		R512	1-249-389-11	CARBON 4.7 5% 1/4W			
99		G	RESISTOR		R513	1-249-429-11	CARBON 10K 5% 1/4W			
100		G	RESISTOR		R514	1-215-485-00	METAL 470K 1% 1/4W			
101		G	RESISTOR		R515	1-215-485-00	METAL 470K 1% 1/4W			
102		G	RESISTOR		R516	1-215-487-00	METAL 560K 1% 1/4W			
103		G	RESISTOR		R517	1-218-871-11	METAL CHIP 10K 0.5% 1/10W			
104		G	RESISTOR		R518	1-218-871-11	METAL CHIP 10K 0.5% 1/10W			
105		G	RESISTOR		R519	1-216-817-11	METAL CHIP 470 5% 1/10W			
106		G	RESISTOR		R520	1-215-483-00	METAL 390K 1% 1/4W			
107		G	RESISTOR		R521	1-215-483-00	METAL 390K 1% 1/4W			
108		G	RESISTOR		R522	1-215-483-00	METAL 390K 1% 1/4W			
109		G	RESISTOR		R523	1-218-883-11	METAL CHIP 33K 0.5% 1/10W			
110		G	RESISTOR		R524	1-216-837-11	METAL CHIP 22K 5% 1/10W			
111		G	RESISTOR		R525	1-216-833-11	METAL CHIP 10K 5% 1/10W			
112		G	RESISTOR		R530	1-249-387-11	CARBON 3.3 5% 1/4W			
113		G	RESISTOR		R531	1-260-135-11	CARBON 1M 5% 1/2W			
114		G	RESISTOR		R532	1-260-135-11	CARBON 1M 5% 1/2W			
115		G	RESISTOR		R534	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W			
116		G	RESISTOR		R535	1-249-401-11	CARBON 47 5% 1/4W			
117		G	RESISTOR		R540	1-220-926-11	FUSIBLE 0.47 10% 1/2W			
118		G	RESISTOR		R541	1-219-729-11	METAL 0.33 10% 5W			
119		G	RESISTOR		R543	1-247-807-31	CARBON 100 5% 1/4W			
120		G	RESISTOR		R544	1-249-433-11	CARBON 22K 5% 1/4W			
121		G	RESISTOR		R545	1-216-813-11	METAL CHIP 220 5% 1/10W			
122		G	RESISTOR		R546	1-249-401-11	CARBON 47 5% 1/4W			
123		G	RESISTOR		R547	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W			
124		G	RESISTOR		R548	1-216-833-11	METAL CHIP 10K 5% 1/10W			
125		G	RESISTOR		R549	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W			
126		G	RESISTOR		R550	1-216-813-11	METAL CHIP 220 5% 1/10W			
127		G	RESISTOR		R551	1-216-837-11	METAL CHIP 22K 5% 1/10W			
128		G	RESISTOR		R552	1-218-875-11	METAL CHIP 15K 0.5% 1/10W			
129		G	RESISTOR		R553	1-218-875-11	METAL CHIP 15K 0.5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
130		G	RESISTOR		R554	1-218-849-11	METAL CHIP 1.2K 0.5% 1/10W			
131		G	RESISTOR		R555	1-216-818-11	METAL CHIP 560 5% 1/10W			
132		G	RESISTOR		R556	1-218-871-11	METAL CHIP 10K 0.5% 1/10W			
133		G	RESISTOR		R557	1-218-871-11	METAL CHIP 10K 0.5% 1/10W			
134		G	RESISTOR		R560	1-218-871-11	METAL CHIP 10K 0.5% 1/10W			
135		G	RESISTOR		R561	1-218-870-11	METAL CHIP 9.1K 0.5% 1/10W			
136		G	RESISTOR		R562	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W			
137		G	RESISTOR		R563	1-216-813-11	METAL CHIP 220 5% 1/10W			
138		G	RESISTOR		R564	1-216-837-11	METAL CHIP 22K 5% 1/10W			
139		G	RESISTOR		R565	1-216-821-11	METAL CHIP 1K 5% 1/10W			
140		G	RESISTOR		R566	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
141		G	RESISTOR		R570	1-215-927-00	METAL OXIDE 47K 5% 3W			
142		G	RESISTOR		R571	1-215-927-00	METAL OXIDE 47K 5% 3W			
143		G	RESISTOR		R572	1-216-845-11	METAL CHIP 100K 5% 1/10W			
144		G	TRANSFORMER		T530	1-437-939-11	TRANSFORMER, POWER			
145		G	TRANSFORMER		T540	1-437-938-11	TRANSFORMER, POWER (SRT)			
146		G	THERMISTOR	⚠	TH501	1-809-260-11	THERMISTOR, POWER			
147		G	VARISTOR	⚠	VDR501	1-801-073-31	VARISTOR ERZV14D471			
148		I	CAPACITOR		C1000	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V			
149		I	CAPACITOR		C1001	1-135-960-91	CERAMIC CHIP 10UF 10% 25V			
150		I	CAPACITOR		C1020	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V			
151		I	CAPACITOR		C1021	1-135-960-91	CERAMIC CHIP 10UF 10% 25V			
152		I	CAPACITOR		C1025	1-135-960-91	CERAMIC CHIP 10UF 10% 25V			
153		I	CAPACITOR		C1026	1-135-960-91	CERAMIC CHIP 10UF 10% 25V			
154		I	CAPACITOR		C1041	1-135-960-91	CERAMIC CHIP 10UF 10% 25V			
155		I	CAPACITOR		C1042	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
156		I	CAPACITOR		C1060	1-125-838-11	CERAMIC CHIP 2.2UF 10% 6.3V			
157		I	CAPACITOR		C1061	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V			
158		I	CAPACITOR		C1062	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
159		I	CAPACITOR		C1063	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
160		I	CAPACITOR		C1064	1-164-360-11	CERAMIC CHIP 0.1UF 16V			
161		I	CAPACITOR		C1065	1-135-960-91	CERAMIC CHIP 10UF 10% 25V			
162		I	CAPACITOR		C1100	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V			
163		I	CAPACITOR		C1101	1-135-960-91	CERAMIC CHIP 10UF 10% 25V			
164		I	CAPACITOR		C1120	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V			
165		I	CAPACITOR		C1121	1-135-960-91	CERAMIC CHIP 10UF 10% 25V			
166		I	CAPACITOR		C1125	1-135-960-91	CERAMIC CHIP 10UF 10% 25V			
167		I	CAPACITOR		C1126	1-135-960-91	CERAMIC CHIP 10UF 10% 25V			
168		I	CAPACITOR		C1141	1-135-960-91	CERAMIC CHIP 10UF 10% 25V			
169		I	CAPACITOR		C1142	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
170		I	CAPACITOR		C1161	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V			
171		I	CAPACITOR		C1162	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
172		I	CAPACITOR		C1163	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
173		I	CAPACITOR		C1164	1-164-360-11	CERAMIC CHIP 0.1UF 16V			
174		I	CAPACITOR		C1165	1-135-960-91	CERAMIC CHIP 10UF 10% 25V			
175		I	CAPACITOR		C1200	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
176		I	CAPACITOR		C1201	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
177		I	CAPACITOR		C1203	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
178		I	CAPACITOR		C1204	1-104-700-11	CERAMIC CHIP 0.027UF 10.00% 16V			
179		I	CAPACITOR		C1206	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
180		I	CAPACITOR		C1207	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
181		I	CAPACITOR		C1208	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
182		I	CAPACITOR		C1209	1-127-738-91	CERAMIC CHIP 4.7UF 10% 25V			
183		I	CAPACITOR		C1210	1-162-971-11	CERAMIC CHIP 0.001UF 10.00% 50V			
184		I	CAPACITOR		C1212	1-164-360-11	CERAMIC CHIP 0.1UF 16V			
185		I	CAPACITOR		C1213	1-115-156-11	CERAMIC CHIP 1UF 10V			
186		I	CAPACITOR		C1214	1-162-960-11	CERAMIC CHIP 220PF 10.00% 50V			
187		I	CAPACITOR		C1217	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
188		I	CONNECTOR		CN1000	1-816-960-21	PIN, CONNECTOR (PC BOARD)4P			
189		I	CONNECTOR		CN1040	1-815-494-21	PIN, CONNECTOR 2P			
190		I	CONNECTOR		CN1100	1-816-960-21	PIN, CONNECTOR (PC BOARD)4P			
191		I	CONNECTOR		CN1140	1-815-494-21	PIN, CONNECTOR 2P			
192		I	CONNECTOR		CN1200	1-779-884-11	CONNECTOR 4P			
193		I	CONNECTOR	*	CN1201	1-764-250-11	PIN, CONNECTOR (PC BOARD) 4P			
194		I	DIODE		D1000	8-719-404-50	DIODE MA111-TX			
195		I	DIODE		D1001	8-719-800-76	DIODE 1SS226			
196		I	DIODE		D1003	8-719-800-76	DIODE 1SS226			
197		I	DIODE		D1005	8-719-404-50	DIODE MA111-TX			
198		I	DIODE		D1020	8-719-404-50	DIODE MA111-TX			
199		I	DIODE		D1021	8-719-800-76	DIODE 1SS226			
200		I	DIODE		D1023	8-719-800-76	DIODE 1SS226			
201		I	DIODE		D1025	8-719-404-50	DIODE MA111-TX			
202		I	DIODE		D1041	8-719-800-76	DIODE 1SS226			
203		I	DIODE		D1043	8-719-800-76	DIODE 1SS226			
204		I	DIODE		D1045	8-719-404-50	DIODE MA111-TX			
205		I	DIODE		D1046	6-500-395-11	DIODE RD56SB-T1			
206		I	DIODE		D1060	8-719-044-92	DIODE HZU4.7B3TRF			
207		I	DIODE		D1062	8-719-404-50	DIODE MA111-TX			
208		I	DIODE		D1100	8-719-404-50	DIODE MA111-TX			
209		I	DIODE		D1101	8-719-800-76	DIODE 1SS226			
210		I	DIODE		D1103	8-719-800-76	DIODE 1SS226			
211		I	DIODE		D1105	8-719-404-50	DIODE MA111-TX			
212		I	DIODE		D1120	8-719-404-50	DIODE MA111-TX			
213		I	DIODE		D1121	8-719-800-76	DIODE 1SS226			
214		I	DIODE		D1123	8-719-800-76	DIODE 1SS226			
215		I	DIODE		D1125	8-719-404-50	DIODE MA111-TX			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
216		I	DIODE		D1141	8-719-800-76	DIODE 1SS226			
217		I	DIODE		D1143	8-719-800-76	DIODE 1SS226			
218		I	DIODE		D1145	8-719-404-50	DIODE MA111-TX			
219		I	DIODE		D1146	6-500-395-11	DIODE RD56SB-T1			
220		I	DIODE		D1160	8-719-044-92	DIODE HZU4.7B3TRF			
221		I	DIODE		D1162	8-719-404-50	DIODE MA111-TX			
222		I	DIODE		D1200	8-719-069-60	DIODE UDZSTE-179.1B			
223		I	DIODE		D1201	8-719-404-50	DIODE MA111-TX			
224		I	DIODE		D1202	8-719-073-39	DIODE HZU5.6GTRF			
225		I	DIODE		D1203	8-719-404-50	DIODE MA111-TX			
226		I	DIODE		D1205	6-500-394-11	DIODE RD47SB-T1			
227		I	FERRITE		FL1201	1-239-899-21	FERRITE 0UH			
228		I	IC		IC1200	6-702-938-01	IC TK11250CMCL			
229		I	IC		IC1201	6-702-626-01	IC OZ967SN-B-0-T2			
230		I	IC		IC1203	8-759-277-63	IC TC7W14FU(TE12R)			
231		I	FUSE		PS1060	1-533-952-21	FUSE 3.15A 63V			
232		I	FUSE		PS1160	1-533-952-21	FUSE 3.15A 63V			
233		I	IC LINK		PS1200	1-576-122-21	IC LINK 0.4A 72V			
234		I	TRANSISTOR		Q1000	8-729-025-28	TRANSISTOR 2SK1828			
235		I	TRANSISTOR		Q1001	6-550-343-01	TRANSISTOR HAT3010R-EL			
236		I	TRANSISTOR		Q1002	6-550-343-01	TRANSISTOR HAT3010R-EL			
237		I	TRANSISTOR		Q1020	8-729-025-28	TRANSISTOR 2SK1828			
238		I	TRANSISTOR		Q1040	8-729-025-28	TRANSISTOR 2SK1828			
239		I	TRANSISTOR		Q1100	8-729-025-28	TRANSISTOR 2SK1828			
240		I	TRANSISTOR		Q1101	6-550-343-01	TRANSISTOR HAT3010R-EL			
241		I	TRANSISTOR		Q1102	6-550-343-01	TRANSISTOR HAT3010R-EL			
242		I	TRANSISTOR		Q1120	8-729-025-28	TRANSISTOR 2SK1828			
243		I	TRANSISTOR		Q1140	8-729-025-28	TRANSISTOR 2SK1828			
244		I	TRANSISTOR		Q1202	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R			
245		I	TRANSISTOR		Q1203	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R			
246		I	TRANSISTOR		Q1204	8-729-025-28	TRANSISTOR 2SK1828			
247		I	RESISTOR		R1000	1-216-857-11	METAL CHIP 1M 5% 1/10W			
248		I	RESISTOR		R1001	1-216-833-11	METAL CHIP 10K 5% 1/10W			
249		I	RESISTOR		R1002	1-218-691-11	METAL CHIP 910 0.5% 1/10W			
250		I	RESISTOR		R1003	1-216-833-11	METAL CHIP 10K 5% 1/10W			
251		I	RESISTOR		R1004	1-218-697-11	METAL CHIP 1.6K 0.5% 1/10W			
252		I	RESISTOR		R1005	1-218-684-11	METAL CHIP 470 0.5% 1/10W			
253		I	RESISTOR		R1006	1-218-716-11	METAL CHIP 10K 0.5% 1/10W			
254		I	RESISTOR		R1007	1-218-716-11	METAL CHIP 10K 0.5% 1/10W			
255		I	RESISTOR		R1008	1-216-864-11	SHORT CHIP 0			
256		I	RESISTOR		R1009	1-216-864-11	SHORT CHIP 0			
257		I	RESISTOR		R1010	1-216-864-11	SHORT CHIP 0			
258		I	RESISTOR		R1011	1-216-864-11	SHORT CHIP 0			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
259		I	RESISTOR		R1012	1-216-864-11	SHORT CHIP 0			
260		I	RESISTOR		R1013	1-216-864-11	SHORT CHIP 0			
261		I	RESISTOR		R1014	1-216-804-11	METAL CHIP 39 5% 1/10W			
262		I	RESISTOR		R1015	1-216-804-11	METAL CHIP 39 5% 1/10W			
263		I	RESISTOR		R1020	1-216-857-11	METAL CHIP 1M 5% 1/10W			
264		I	RESISTOR		R1021	1-216-833-11	METAL CHIP 10K 5% 1/10W			
265		I	RESISTOR		R1022	1-218-691-11	METAL CHIP 910 0.5% 1/10W			
266		I	RESISTOR		R1023	1-216-833-11	METAL CHIP 10K 5% 1/10W			
267		I	RESISTOR		R1024	1-218-697-11	METAL CHIP 1.6K 0.5% 1/10W			
268		I	RESISTOR		R1025	1-218-684-11	METAL CHIP 470 0.5% 1/10W			
269		I	RESISTOR		R1026	1-218-716-11	METAL CHIP 10K 0.5% 1/10W			
270		I	RESISTOR		R1028	1-216-804-11	METAL CHIP 39 5% 1/10W			
271		I	RESISTOR		R1029	1-216-804-11	METAL CHIP 39 5% 1/10W			
272		I	RESISTOR		R1040	1-220-397-11	METAL CHIP 4.7M 5% 1/10W			
273		I	RESISTOR		R1041	1-216-833-11	METAL CHIP 10K 5% 1/10W			
274		I	RESISTOR		R1042	1-218-679-11	METAL CHIP 300 0.5% 1/10W			
275		I	RESISTOR		R1043	1-216-845-11	METAL CHIP 100K 5% 1/10W			
276		I	RESISTOR		R1044	1-218-679-11	METAL CHIP 300 0.5% 1/10W			
277		I	RESISTOR		R1045	1-218-679-11	METAL CHIP 300 0.5% 1/10W			
278		I	RESISTOR		R1046	1-218-733-11	METAL CHIP 51K 0.5% 1/10W			
279		I	RESISTOR		R1060	1-218-728-11	METAL CHIP 33K 0.5% 1/10W			
280		I	RESISTOR		R1061	1-218-272-11	METAL CHIP 5.1K 5% 1/10W			
281		I	RESISTOR		R1062	1-216-845-11	METAL CHIP 100K 5% 1/10W			
282		I	RESISTOR		R1063	1-216-839-11	METAL CHIP 33K 5% 1/10W			
283		I	RESISTOR		R1100	1-216-857-11	METAL CHIP 1M 5% 1/10W			
284		I	RESISTOR		R1101	1-216-833-11	METAL CHIP 10K 5% 1/10W			
285		I	RESISTOR		R1102	1-218-691-11	METAL CHIP 910 0.5% 1/10W			
286		I	RESISTOR		R1103	1-216-833-11	METAL CHIP 10K 5% 1/10W			
287		I	RESISTOR		R1104	1-218-697-11	METAL CHIP 1.6K 0.5% 1/10W			
288		I	RESISTOR		R1105	1-218-684-11	METAL CHIP 470 0.5% 1/10W			
289		I	RESISTOR		R1106	1-218-716-11	METAL CHIP 10K 0.5% 1/10W			
290		I	RESISTOR		R1107	1-218-716-11	METAL CHIP 10K 0.5% 1/10W			
291		I	RESISTOR		R1114	1-216-804-11	METAL CHIP 39 5% 1/10W			
292		I	RESISTOR		R1115	1-216-804-11	METAL CHIP 39 5% 1/10W			
293		I	RESISTOR		R1120	1-216-857-11	METAL CHIP 1M 5% 1/10W			
294		I	RESISTOR		R1121	1-216-833-11	METAL CHIP 10K 5% 1/10W			
295		I	RESISTOR		R1122	1-218-691-11	METAL CHIP 910 0.5% 1/10W			
296		I	RESISTOR		R1123	1-216-833-11	METAL CHIP 10K 5% 1/10W			
297		I	RESISTOR		R1124	1-218-697-11	METAL CHIP 1.6K 0.5% 1/10W			
298		I	RESISTOR		R1125	1-218-684-11	METAL CHIP 470 0.5% 1/10W			
299		I	RESISTOR		R1126	1-218-716-11	METAL CHIP 10K 0.5% 1/10W			
300		I	RESISTOR		R1128	1-216-804-11	METAL CHIP 39 5% 1/10W			
301		I	RESISTOR		R1129	1-216-804-11	METAL CHIP 39 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
302		I	RESISTOR		R1140	1-220-397-11	METAL CHIP 4.7M 5% 1/10W			
303		I	RESISTOR		R1141	1-216-833-11	METAL CHIP 10K 5% 1/10W			
304		I	RESISTOR		R1142	1-218-679-11	METAL CHIP 300 0.5% 1/10W			
305		I	RESISTOR		R1143	1-216-845-11	METAL CHIP 100K 5% 1/10W			
306		I	RESISTOR		R1144	1-218-679-11	METAL CHIP 300 0.5% 1/10W			
307		I	RESISTOR		R1145	1-218-679-11	METAL CHIP 300 0.5% 1/10W			
308		I	RESISTOR		R1146	1-218-733-11	METAL CHIP 51K 0.5% 1/10W			
309		I	RESISTOR		R1160	1-218-728-11	METAL CHIP 33K 0.5% 1/10W			
310		I	RESISTOR		R1161	1-218-272-11	METAL CHIP 5.1K 5% 1/10W			
311		I	RESISTOR		R1162	1-216-845-11	METAL CHIP 100K 5% 1/10W			
312		I	RESISTOR		R1163	1-216-839-11	METAL CHIP 33K 5% 1/10W			
313		I	RESISTOR		R1200	1-216-821-11	METAL CHIP 1K 5% 1/10W			
314		I	RESISTOR		R1201	1-216-821-11	METAL CHIP 1K 5% 1/10W			
315		I	RESISTOR		R1202	1-216-847-11	METAL CHIP 150K 5% 1/10W			
316		I	RESISTOR		R1203	1-218-729-11	METAL CHIP 36K 0.5% 1/10W			
317		I	RESISTOR		R1204	1-218-729-11	METAL CHIP 36K 0.5% 1/10W			
318		I	RESISTOR		R1205	1-218-716-11	METAL CHIP 10K 0.5% 1/10W			
319		I	RESISTOR		R1206	1-218-748-11	METAL CHIP 220K 0.5% 1/10W			
320		I	RESISTOR		R1207	1-218-728-11	METAL CHIP 33K 0.5% 1/10W			
321		I	RESISTOR		R1209	1-216-801-11	METAL CHIP 22 5% 1/10W			
322		I	RESISTOR		R1210	1-216-843-11	METAL CHIP 68K 5% 1/10W			
323		I	RESISTOR		R1211	1-216-843-11	METAL CHIP 68K 5% 1/10W			
324		I	RESISTOR		R1212	1-218-296-11	METAL CHIP 75K 5% 1/10W			
325		I	RESISTOR		R1213	1-218-747-11	METAL CHIP 200K 0.5% 1/10W			
326		I	RESISTOR		R1215	1-216-845-11	METAL CHIP 100K 5% 1/10W			
327		I	RESISTOR		R1216	1-216-821-11	METAL CHIP 1K 5% 1/10W			
328		I	RESISTOR		R1217	1-216-863-11	METAL CHIP 3.3M 5% 1/10W			
329		I	RESISTOR		R1218	1-216-809-11	METAL CHIP 100 5% 1/10W			
330		I	RESISTOR		R1220	1-218-747-11	METAL CHIP 200K 0.5% 1/10W			
331		I	RESISTOR		R1221	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
332		I	TRANSFORMER		T1000	1-437-937-11	TRANSFORMER, INVERTER (SMD)			
333		I	TRANSFORMER		T1020	1-437-937-11	TRANSFORMER, INVERTER (SMD)			
334		I	TRANSFORMER		T1040	1-437-937-11	TRANSFORMER, INVERTER (SMD)			
335		I	TRANSFORMER		T1100	1-437-937-11	TRANSFORMER, INVERTER (SMD)			
336		I	TRANSFORMER		T1120	1-437-937-11	TRANSFORMER, INVERTER (SMD)			
337		I	TRANSFORMER		T1140	1-437-937-11	TRANSFORMER, INVERTER (SMD)			
338		H2	CAPACITOR		C1701	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
339		H2	CAPACITOR		C1702	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
340		H2	CAPACITOR		C1703	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
341		H2	CAPACITOR		C1704	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
342		H2	CAPACITOR		C1705	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
343		H2	CONNECTOR		CN1701	1-785-627-21	PIN, CONNECTOR (PC BOARD) 10P			
344		H2	DIODE		D1700	8-719-069-55	DIODE UDZSTE-175.6B			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
345		H2	DIODE		D1707	6-500-470-01	DIODE BRPG1211C			
346		H2	DIODE		D1708	6-500-469-01	DIODE AA1111C			
347		H2	DIODE		D1709	6-500-469-01	DIODE AA1111C			
348		H2	DIODE		D1710	8-719-069-55	DIODE UDZSTE-175.6B			
349		H2	DIODE		D1711	8-719-069-55	DIODE UDZSTE-175.6B			
350		H2	DIODE		D1712	8-719-069-55	DIODE UDZSTE-175.6B			
351		H2	DIODE		D1713	8-719-069-55	DIODE UDZSTE-175.6B			
352		H2	DIODE		D1714	8-719-404-50	DIODE MA111-TX			
353		H2	DIODE		D1715	8-719-404-50	DIODE MA111-TX			
354		H2	DIODE		D1716	8-719-404-50	DIODE MA111-TX			
355		H2	DIODE		D1717	8-719-404-50	DIODE MA111-TX			
356		H2	DIODE		D1718	8-719-404-50	DIODE MA111-TX			
357		H2	DIODE		D1719	8-719-404-50	DIODE MA111-TX			
358		H2	DIODE		D1720	8-719-404-50	DIODE MA111-TX			
359		H2	DIODE		D1721	8-719-404-50	DIODE MA111-TX			
360		H2	TRANSISTOR		Q1700	8-729-907-00	TRANSISTOR DTC114EU			
361		H2	TRANSISTOR		Q1701	8-729-907-00	TRANSISTOR DTC114EU			
362		H2	TRANSISTOR		Q1702	8-729-907-00	TRANSISTOR DTC114EU			
363		H2	TRANSISTOR		Q1703	8-729-907-00	TRANSISTOR DTC114EU			
364		H2	RESISTOR		R1703	1-216-824-11	METAL CHIP 1.8K 5% 1/10W			
365		H2	RESISTOR		R1705	1-216-819-11	METAL CHIP 680 5% 1/10W			
366		H2	RESISTOR		R1706	1-216-818-11	METAL CHIP 560 5% 1/10W			
367		H2	RESISTOR		R1707	1-216-818-11	METAL CHIP 560 5% 1/10W			
368		H2	RESISTOR		R1708	1-218-457-11	METAL CHIP 910 5% 1/10W			
369		H2	RESISTOR		R1709	1-218-457-11	METAL CHIP 910 5% 1/10W			
370		H2	RESISTOR		R1710	1-216-824-11	METAL CHIP 1.8K 5% 1/10W			
371		H2	RESISTOR		R1711	1-216-824-11	METAL CHIP 1.8K 5% 1/10W			
372		H2	RESISTOR		R1712	1-216-830-11	METAL CHIP 5.6K 5% 1/10W			
373		H2	RESISTOR		R1713	1-216-830-11	METAL CHIP 5.6K 5% 1/10W			
374		H2	RESISTOR		R1714	1-216-817-11	METAL CHIP 470 5% 1/10W			
375		H2	RESISTOR		R1715	1-216-817-11	METAL CHIP 470 5% 1/10W			
376		H2	RESISTOR		R1716	1-216-809-11	METAL CHIP 100 5% 1/10W			
377		H2	RESISTOR		R1717	1-216-864-11	SHORT CHIP 0			
378		H2	RESISTOR		R1718	1-216-864-11	SHORT CHIP 0			
379		H2	SWITCH		S1700	1-572-938-21	SWITCH, TACTIL			
380		H2	SWITCH		S1701	1-572-938-21	SWITCH, TACTIL			
381		H2	SWITCH		S1702	1-572-938-21	SWITCH, TACTIL			
382		H2	SWITCH		S1703	1-572-938-21	SWITCH, TACTIL			
383		H2	SWITCH		S1704	1-572-938-21	SWITCH, TACTIL			
384		H2	SWITCH		S1706	1-572-938-21	SWITCH, TACTIL			
385		H2	SWITCH		S1707	1-572-938-21	SWITCH, TACTIL			
386		H2	SWITCH		S1708	1-572-938-21	SWITCH, TACTIL			
387		A	CAPACITOR		C1	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
388		A	CAPACITOR		C2	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
389		A	CAPACITOR		C3	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
390		A	CAPACITOR		C4	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
391		A	CAPACITOR		C5	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
392		A	CAPACITOR		C8	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
393		A	CAPACITOR		C9	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
394		A	CAPACITOR		C10	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
395		A	CAPACITOR		C13	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
396		A	CAPACITOR		C15	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
397		A	CAPACITOR		C16	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
398		A	CAPACITOR		C18	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
399		A	CAPACITOR		C19	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
400		A	CAPACITOR		C20	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V			
401		A	CAPACITOR		C21	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
402		A	CAPACITOR		C22	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V			
403		A	CAPACITOR		C23	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
404		A	CAPACITOR		C24	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V			
405		A	CAPACITOR		C25	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
406		A	CAPACITOR		C26	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V			
407		A	CAPACITOR		C27	1-115-340-11	CERAMIC CHIP 0.22UF 10.00% 25V			
408		A	CAPACITOR		C28	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
409		A	CAPACITOR		C29	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
410		A	CAPACITOR		C30	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
411		A	CAPACITOR		C31	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
412		A	CAPACITOR		C32	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V			
413		A	CAPACITOR		C33	1-119-667-11	CERAMIC CHIP 22UF 10V			
414		A	CAPACITOR		C34	1-115-467-11	CERAMIC CHIP 0.22UF 10.00% 10V			
415		A	CAPACITOR		C35	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
416		A	CAPACITOR		C36	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
417		A	CAPACITOR		C37	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
418		A	CAPACITOR		C38	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
419		A	CAPACITOR		C39	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
420		A	CAPACITOR		C40	1-162-967-11	CERAMIC CHIP 0.0033UF 10.00% 50V			
421		A	CAPACITOR		C41	1-162-967-11	CERAMIC CHIP 0.0033UF 10.00% 50V			
422		A	CAPACITOR		C42	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
423		A	CAPACITOR		C43	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
424		A	CAPACITOR		C44	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
425		A	CAPACITOR		C45	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
426		A	CAPACITOR		C46	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
427		A	CAPACITOR		C47	1-128-995-21	ELECT CHIP 100UF 20% 10V			
428		A	CAPACITOR		C48	1-126-209-11	ELECT CHIP 100UF 20.00% 4V			
429		A	CAPACITOR		C49	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
430		A	CAPACITOR		C014	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
431		A	CAPACITOR		C017	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
432		A	CAPACITOR		C100	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
433		A	CAPACITOR		C101	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
434		A	CAPACITOR		C102	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
435		A	CAPACITOR		C103	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
436		A	CAPACITOR		C104	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
437		A	CAPACITOR		C105	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
438		A	CAPACITOR		C106	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
439		A	CAPACITOR		C107	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
440		A	CAPACITOR		C108	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
441		A	CAPACITOR		C109	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
442		A	CAPACITOR		C110	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
443		A	CAPACITOR		C111	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
444		A	CAPACITOR		C112	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
445		A	CAPACITOR		C113	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
446		A	CAPACITOR		C114	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
447		A	CAPACITOR		C115	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
448		A	CAPACITOR		C116	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
449		A	CAPACITOR		C117	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
450		A	CAPACITOR		C118	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
451		A	CAPACITOR		C119	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
452		A	CAPACITOR		C120	1-164-173-11	CERAMIC CHIP 0.0039UF 10.00% 50V			
453		A	CAPACITOR		C121	1-137-652-91	CERAMIC CHIP 39000PF 10% 16V			
454		A	CAPACITOR		C122	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
455		A	CAPACITOR		C123	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
456		A	CAPACITOR		C124	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
457		A	CAPACITOR		C125	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
458		A	CAPACITOR		C126	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
459		A	CAPACITOR		C127	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
460		A	CAPACITOR		C128	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
461		A	CAPACITOR		C130	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
462		A	CAPACITOR		C140	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
463		A	CAPACITOR		C141	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V			
464		A	CAPACITOR		C150	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
465		A	CAPACITOR		C160	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
466		A	CAPACITOR		C170	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
467		A	CAPACITOR		C171	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V			
468		A	CAPACITOR		C180	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V			
469		A	CAPACITOR		C203	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
470		A	CAPACITOR		C204	1-128-993-21	ELECT CHIP 22UF 20% 10V			
471		A	CAPACITOR		C205	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
472		A	CAPACITOR		C206	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
473		A	CAPACITOR		C207	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
474		A	CAPACITOR		C208	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
475		A	CAPACITOR		C209	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
476		A	CAPACITOR		C210	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
477		A	CAPACITOR		C211	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
478		A	CAPACITOR		C212	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
479		A	CAPACITOR		C213	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
480		A	CAPACITOR		C214	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
481		A	CAPACITOR		C215	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
482		A	CAPACITOR		C216	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
483		A	CAPACITOR		C217	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
484		A	CAPACITOR		C218	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
485		A	CAPACITOR		C219	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
486		A	CAPACITOR		C220	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
487		A	CAPACITOR		C221	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
488		A	CAPACITOR		C222	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
489		A	CAPACITOR		C223	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
490		A	CAPACITOR		C301	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
491		A	CAPACITOR		C302	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
492		A	CAPACITOR		C303	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
493		A	CAPACITOR		C304	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
494		A	CAPACITOR		C305	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
495		A	CAPACITOR		C306	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
496		A	CAPACITOR		C307	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
497		A	CAPACITOR		C308	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
498		A	CAPACITOR		C309	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
499		A	CAPACITOR		C310	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
500		A	CAPACITOR		C312	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
501		A	CAPACITOR		C313	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
502		A	CAPACITOR		C314	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
503		A	CAPACITOR		C315	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
504		A	CAPACITOR		C316	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
505		A	CAPACITOR		C317	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
506		A	CAPACITOR		C318	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
507		A	CAPACITOR		C319	1-128-993-21	ELECT CHIP 22UF 20% 10V			
508		A	CAPACITOR		C320	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
509		A	CAPACITOR		C321	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
510		A	CAPACITOR		C322	1-164-505-11	CERAMIC CHIP 2.2UF 16V			
511		A	CAPACITOR		C323	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
512		A	CAPACITOR		C401	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
513		A	CAPACITOR		C402	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
514		A	CAPACITOR		C403	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
515		A	CAPACITOR		C404	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
516		A	CAPACITOR		C411	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
517		A	CAPACITOR		C412	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
518		A	CAPACITOR		C413	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
519		A	CAPACITOR		C414	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
520		A	CAPACITOR		C415	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
521		A	CAPACITOR		C416	1-126-209-11	ELECT CHIP 100UF 20.00% 4V			
522		A	CAPACITOR		C417	1-119-667-11	CERAMIC CHIP 22UF 10V			
523		A	CAPACITOR		C418	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
524		A	CAPACITOR		C419	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
525		A	CAPACITOR		C420	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
526		A	CAPACITOR		C421	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
527		A	CAPACITOR		C422	1-119-667-11	CERAMIC CHIP 22UF 10V			
528		A	CAPACITOR		C423	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
529		A	CAPACITOR		C424	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
530		A	CAPACITOR		C425	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
531		A	CAPACITOR		C426	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
532		A	CAPACITOR		C427	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
533		A	CAPACITOR		C428	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
534		A	CAPACITOR		C429	1-119-667-11	CERAMIC CHIP 22UF 10V			
535		A	CAPACITOR		C430	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
536		A	CAPACITOR		C431	1-119-667-11	CERAMIC CHIP 22UF 10V			
537		A	CAPACITOR		C432	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
538		A	CAPACITOR		C434	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
539		A	CAPACITOR		C435	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
540		A	CAPACITOR		C436	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
541		A	CAPACITOR		C437	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
542		A	CAPACITOR		C438	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
543		A	CAPACITOR		C439	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
544		A	CAPACITOR		C441	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
545		A	CAPACITOR		C442	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
546		A	CAPACITOR		C443	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
547		A	CAPACITOR		C444	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
548		A	CAPACITOR		C445	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
549		A	CAPACITOR		C446	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
550		A	CAPACITOR		C447	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
551		A	CAPACITOR		C448	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
552		A	CAPACITOR		C449	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
553		A	CAPACITOR		C450	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
554		A	CAPACITOR		C452	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
555		A	CAPACITOR		C453	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
556		A	CAPACITOR		C454	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
557		A	CAPACITOR		C455	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
558		A	CAPACITOR		C456	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
559		A	CAPACITOR		C457	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
560		A	CAPACITOR		C458	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V			
561		A	CAPACITOR		C459	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
562		A	CAPACITOR		C460	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
563		A	CAPACITOR		C461	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
564		A	CAPACITOR		C462	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
565		A	CAPACITOR		C600	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
566		A	CAPACITOR		C601	1-127-692-11	CERAMIC CHIP 10UF 10% 16V			
567		A	CAPACITOR		C602	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
568		A	CAPACITOR		C603	1-115-340-11	CERAMIC CHIP 0.22UF 10.00% 25V			
569		A	CAPACITOR		C604	1-119-869-91	CERAMIC CHIP 0PF 0V			
570		A	CAPACITOR		C605	1-100-309-21	ELECT CHIP 22UF 20% 25V			
571		A	CAPACITOR		C606	1-100-309-21	ELECT CHIP 22UF 20% 25V			
572		A	CAPACITOR		C607	1-115-340-11	CERAMIC CHIP 0.22UF 10.00% 25V			
573		A	CAPACITOR		C608	1-115-340-11	CERAMIC CHIP 0.22UF 10.00% 25V			
574		A	CAPACITOR		C609	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
575		A	CAPACITOR		C610	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V			
576		A	CAPACITOR		C611	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
577		A	CAPACITOR		C612	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
578		A	CAPACITOR		C613	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
579		A	CAPACITOR		C615	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
580		A	CAPACITOR		C616	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
581		A	CAPACITOR		C617	1-127-692-11	CERAMIC CHIP 10UF 10% 16V			
582		A	CAPACITOR		C618	1-127-692-11	CERAMIC CHIP 10UF 10% 16V			
583		A	CAPACITOR		C619	1-127-692-11	CERAMIC CHIP 10UF 10% 16V			
584		A	CAPACITOR		C620	1-131-603-22	TANTAL. CHIP 100UF 20% 10V			
585		A	CAPACITOR		C621	1-128-706-22	TANTAL. CHIP 150UF 20% 6.3V			
586		A	CAPACITOR		C622	1-131-603-22	TANTAL. CHIP 100UF 20% 10V			
587		A	CAPACITOR		C623	1-128-706-22	TANTAL. CHIP 150UF 20% 6.3V			
588		A	CAPACITOR		C626	1-128-994-21	ELECT CHIP 47UF 20% 10V			
589		A	CAPACITOR		C632	1-135-595-21	ELECT 100UF 20% 6.3V			
590		A	CAPACITOR		C633	1-128-994-21	ELECT CHIP 47UF 20% 10V			
591		A	CAPACITOR		C636	1-128-993-21	ELECT CHIP 22UF 20% 10V			
592		A	CAPACITOR		C637	1-119-869-91	CERAMIC CHIP 0PF 0V			
593		A	CAPACITOR		C638	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
594		A	CAPACITOR		C639	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
595		A	CAPACITOR		C640	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
596		A	CAPACITOR		C641	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
597		A	CAPACITOR		C642	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
598		A	CAPACITOR		C643	1-127-861-11	CERAMIC CHIP 2.2UF 10% 16V			
599		A	CAPACITOR		C644	1-127-861-11	CERAMIC CHIP 2.2UF 10% 16V			
600		A	CAPACITOR		C645	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
601		A	CAPACITOR		C646	1-127-861-11	CERAMIC CHIP 2.2UF 10% 16V			
602		A	CAPACITOR		C647	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
603		A	CAPACITOR		C648	1-135-595-21	ELECT 100UF 20% 6.3V			
604		A	CAPACITOR		C649	1-128-993-21	ELECT CHIP 22UF 20% 10V			
605		A	CAPACITOR		C650	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
606		A	CAPACITOR		C701	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
607		A	CAPACITOR		C703	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
608		A	CAPACITOR		C704	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
609		A	CAPACITOR		C705	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
610		A	CAPACITOR		C707	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
611		A	CAPACITOR		C708	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
612		A	CAPACITOR		C709	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
613		A	CAPACITOR		C710	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
614		A	CAPACITOR		C711	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
615		A	CAPACITOR		C712	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
616		A	CAPACITOR		C713	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V			
617		A	CAPACITOR		C714	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
618		A	CAPACITOR		C715	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
619		A	CAPACITOR		C716	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
620		A	CAPACITOR		C717	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
621		A	CAPACITOR		C718	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V			
622		A	CAPACITOR		C719	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
623		A	CAPACITOR		C720	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V			
624		A	CAPACITOR		C721	1-162-974-11	CERAMIC CHIP 0.01UF 50V			
625		A	CAPACITOR		C722	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
626		A	CAPACITOR		C723	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
627		A	CAPACITOR		C724	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
628		A	CAPACITOR		C725	1-115-156-11	CERAMIC CHIP 1UF 10V			
629		A	CAPACITOR		C726	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
630		A	CAPACITOR		C727	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
631		A	CAPACITOR		C728	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
632		A	CAPACITOR		C729	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V			
633		A	CAPACITOR		C801	1-164-260-11	CERAMIC CHIP 47PF 5.00% 50V			
634		A	CAPACITOR		C802	1-164-360-11	CERAMIC CHIP 0.1UF 16V			
635		A	CAPACITOR		C803	1-164-360-11	CERAMIC CHIP 0.1UF 16V			
636		A	CAPACITOR		C804	1-164-360-11	CERAMIC CHIP 0.1UF 16V			
637		A	CAPACITOR		C805	1-164-260-11	CERAMIC CHIP 47PF 5.00% 50V			
638		A	CAPACITOR		C806	1-164-260-11	CERAMIC CHIP 47PF 5.00% 50V			
639		A	CAPACITOR		C807	1-164-260-11	CERAMIC CHIP 47PF 5.00% 50V			
640		A	CAPACITOR		C808	1-164-360-11	CERAMIC CHIP 0.1UF 16V			
641		A	CAPACITOR		C809	1-164-260-11	CERAMIC CHIP 47PF 5.00% 50V			
642		A	CAPACITOR		C810	1-164-360-11	CERAMIC CHIP 0.1UF 16V			
643		A	CAPACITOR		C811	1-164-360-11	CERAMIC CHIP 0.1UF 16V			
644		A	CAPACITOR		C812	1-164-360-11	CERAMIC CHIP 0.1UF 16V			
645		A	CAPACITOR		C813	1-164-360-11	CERAMIC CHIP 0.1UF 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
646		A	CAPACITOR		C815	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V			
647		A	CAPACITOR		C816	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V			
648		A	CAPACITOR		C817	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V			
649		A	CAPACITOR		C818	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V			
650		A	CAPACITOR		C819	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
651		A	CONNECTOR		CN100	1-794-930-21	CONNECTOR, D SUB			
652		A	CONNECTOR		CN101	1-794-930-21	CONNECTOR, D SUB			
653		A	CONNECTOR		CN201	1-817-074-11	DVI CONNECTOR			
654		A	CONNECTOR		CN301	1-817-074-11	DVI CONNECTOR			
655		A	CONNECTOR		CN401	1-784-210-21	CONNECTOR 7P			
656		A	CONNECTOR	*	CN402	1-785-306-21	CONNECTOR, BOARD TO BOARD70P			
657		A	CONNECTOR		CN601	1-785-946-21	CONNECTOR 3P			
658		A	CONNECTOR	*	CN602	1-691-591-11	PIN, CONNECTOR (1.5MM) (SMD)8P			
659		A	CONNECTOR	*	CN603	1-760-388-11	CONNECTOR PIN (SMD) 9P			
660		A	CONNECTOR	*	CN604	1-580-789-21	PIN, CONNECTOR (SMD) 6P			
661		A	CONNECTOR		CN702	1-779-884-11	CONNECTOR 4P			
662		A	CONNECTOR		CN703	1-779-936-21	CONNECTOR, FFC/FPC 18P			
663		A	CONNECTOR	*	CN704	1-560-062-00	PIN, CONNECTOR 4P			
664		A	CONNECTOR	*	CN705	1-580-057-11	PIN, CONNECTOR (SMD) 4P			
665		A	CONNECTOR		CN706	1-785-627-21	PIN, CONNECTOR (PC BOARD) 10P			
666		A	CONNECTOR		CN801	1-816-989-11	PIN, CONNECTOR			
667		A	DIODE		D1	8-719-988-61	DIODE 1SS355TE-17			
668		A	DIODE		D100	8-719-073-39	DIODE HZU5.6GTRF			
669		A	DIODE		D101	8-719-073-39	DIODE HZU5.6GTRF			
670		A	DIODE		D102	8-719-073-39	DIODE HZU5.6GTRF			
671		A	DIODE		D103	8-719-073-39	DIODE HZU5.6GTRF			
672		A	DIODE		D104	8-719-404-50	DIODE MA111-TX			
673		A	DIODE		D105	8-719-801-78	DIODE 1SS184			
674		A	DIODE		D106	8-719-073-39	DIODE HZU5.6GTRF			
675		A	DIODE		D130	8-719-024-71	DIODE 1SS362-TE85L			
676		A	DIODE		D140	8-719-024-71	DIODE 1SS362-TE85L			
677		A	DIODE		D150	8-719-024-71	DIODE 1SS362-TE85L			
678		A	DIODE		D160	8-719-024-71	DIODE 1SS362-TE85L			
679		A	DIODE		D170	8-719-024-71	DIODE 1SS362-TE85L			
680		A	DIODE		D180	8-719-024-71	DIODE 1SS362-TE85L			
681		A	DIODE		D190	8-719-800-76	DIODE 1SS226			
682		A	DIODE		D191	8-719-800-76	DIODE 1SS226			
683		A	DIODE		D201	8-719-422-89	DIODE MA8082-H-TX			
684		A	DIODE		D202	8-719-422-89	DIODE MA8082-H-TX			
685		A	DIODE		D203	8-719-422-89	DIODE MA8082-H-TX			
686		A	DIODE		D204	8-719-422-89	DIODE MA8082-H-TX			
687		A	DIODE		D206	8-719-024-77	DIODE HN1D03FU-TE85L			
688		A	DIODE		D207	8-719-024-77	DIODE HN1D03FU-TE85L			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
689		A	DIODE		D208	8-719-024-77	DIODE HN1D03FU-TE85L			
690		A	DIODE		D209	8-719-024-77	DIODE HN1D03FU-TE85L			
691		A	DIODE		D210	8-719-404-50	DIODE MA111-TX			
692		A	DIODE		D301	8-719-073-39	DIODE HZU5.6GTRF			
693		A	DIODE		D302	8-719-073-39	DIODE HZU5.6GTRF			
694		A	DIODE		D303	8-719-073-39	DIODE HZU5.6GTRF			
695		A	DIODE		D304	8-719-073-39	DIODE HZU5.6GTRF			
696		A	DIODE		D306	8-719-024-77	DIODE HN1D03FU-TE85L			
697		A	DIODE		D307	8-719-024-77	DIODE HN1D03FU-TE85L			
698		A	DIODE		D308	8-719-024-77	DIODE HN1D03FU-TE85L			
699		A	DIODE		D309	8-719-024-77	DIODE HN1D03FU-TE85L			
700		A	DIODE		D310	8-719-801-78	DIODE 1SS184			
701		A	DIODE		D401	8-719-914-43	DIODE DAN202K			
702		A	DIODE		D402	8-719-914-43	DIODE DAN202K			
703		A	DIODE		D601	8-719-078-02	DIODE 1SS357(T3SONY1)			
704		A	DIODE		D602	8-719-078-02	DIODE 1SS357(T3SONY1)			
705		A	DIODE		D603	8-719-073-92	DIODE RB060L-40TE25			
706		A	DIODE		D604	8-719-073-92	DIODE RB060L-40TE25			
707		A	DIODE		D606	8-719-073-39	DIODE HZU5.6GTRF			
708		A	DIODE		D701	8-719-067-48	DIODE HZU3.6B2TRF			
709		A	DIODE		D702	8-719-024-77	DIODE HN1D03FU-TE85L			
710		A	DIODE		D703	8-719-404-50	DIODE MA111-TX			
711		A	DIODE		D704	8-719-073-39	DIODE HZU5.6GTRF			
712		A	DIODE		D705	8-719-073-39	DIODE HZU5.6GTRF			
713		A	FUSE	⚠	F601	1-533-952-21	FUSE 3.15A 63V			
714		A	FUSE	⚠	F602	1-576-410-21	FUSE 2A 63V			
715		A	FUSE	⚠	F603	1-533-952-21	FUSE 3.15A 63V			
716		A	FERRITE		FB1	1-414-760-21	FERRITE 0UH			
717		A	FERRITE		FB2	1-414-760-21	FERRITE 0UH			
718		A	FERRITE		FB3	1-414-760-21	FERRITE 0UH			
719		A	FERRITE		FB4	1-414-760-21	FERRITE 0UH			
720		A	FERRITE		FB5	1-414-235-22	FERRITE 0UH			
721		A	FERRITE		FB6	1-414-760-21	FERRITE 0UH			
722		A	FERRITE		FB7	1-414-760-21	FERRITE 0UH			
723		A	FERRITE		FB8	1-414-760-21	FERRITE 0UH			
724		A	FERRITE		FB9	1-414-760-21	FERRITE 0UH			
725		A	FERRITE		FB10	1-414-760-21	FERRITE 0UH			
726		A	FERRITE		FB100	1-414-760-21	FERRITE 0UH			
727		A	FERRITE		FB101	1-400-141-22	FERRITE 0UH			
728		A	FERRITE		FB102	1-414-921-11	FERRITE 0UH			
729		A	FERRITE		FB130	1-469-100-21	FERRITE 0UH			
730		A	FERRITE		FB140	1-469-100-21	FERRITE 0UH			
731		A	FERRITE		FB150	1-469-100-21	FERRITE 0UH			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
732		A	FERRITE		FB160	1-469-100-21	FERRITE 0UH			
733		A	FERRITE		FB170	1-469-100-21	FERRITE 0UH			
734		A	FERRITE		FB180	1-469-100-21	FERRITE 0UH			
735		A	FERRITE		FB202	1-414-445-11	FERRITE 0UH			
736		A	FERRITE		FB203	1-414-445-11	FERRITE 0UH			
737		A	FERRITE		FB204	1-414-445-11	FERRITE 0UH			
738		A	FERRITE		FB301	1-400-141-22	FERRITE 0UH			
739		A	FERRITE		FB302	1-400-141-22	FERRITE 0UH			
740		A	FERRITE		FB303	1-400-141-22	FERRITE 0UH			
741		A	FERRITE		FB304	1-414-921-11	FERRITE 0UH			
742		A	FERRITE		FB305	1-414-921-11	FERRITE 0UH			
743		A	FERRITE		FB306	1-414-921-11	FERRITE 0UH			
744		A	FERRITE		FB405	1-400-141-22	FERRITE 0UH			
745		A	FERRITE		FB406	1-400-141-22	FERRITE 0UH			
746		A	FERRITE		FB407	1-414-921-11	FERRITE 0UH			
747		A	FERRITE		FB408	1-414-921-11	FERRITE 0UH			
748		A	FERRITE		FB411	1-414-921-11	FERRITE 0UH			
749		A	FERRITE		FB414	1-414-921-11	FERRITE 0UH			
750		A	FERRITE		FB415	1-414-921-11	FERRITE 0UH			
751		A	FERRITE		FB416	1-400-141-22	FERRITE 0UH			
752		A	FERRITE		FB600	1-414-760-21	FERRITE 0UH			
753		A	FERRITE		FB601	1-400-141-22	FERRITE 0UH			
754		A	FERRITE		FB602	1-400-141-22	FERRITE 0UH			
755		A	FERRITE		FB603	1-400-141-22	FERRITE 0UH			
756		A	FERRITE		FB604	1-400-141-22	FERRITE 0UH			
757		A	FERRITE		FB701	1-414-921-11	FERRITE 0UH			
758		A	FERRITE		FB702	1-400-141-22	FERRITE 0UH			
759		A	FERRITE		FB703	1-414-921-11	FERRITE 0UH			
760		A	FERRITE		FB704	1-400-141-22	FERRITE 0UH			
761		A	FERRITE		FB705	1-400-141-22	FERRITE 0UH			
762		A	FERRITE		FB801	1-414-921-11	FERRITE 0UH			
763		A	FERRITE		FB802	1-414-921-11	FERRITE 0UH			
764		A	FERRITE		FB803	1-414-921-11	FERRITE 0UH			
765		A	FERRITE		FB804	1-414-921-11	FERRITE 0UH			
766		A	FERRITE		FB8010	1-400-141-22	FERRITE 0UH			
767		A	FERRITE		FB8011	1-400-141-22	FERRITE 0UH			
768		A	FERRITE		FL201	1-234-177-21	FERRITE 0UH			
769		A	FERRITE		FL202	1-234-177-21	FERRITE 0UH			
770		A	FERRITE		FL203	1-234-177-21	FERRITE 0UH			
771		A	FERRITE		FL301	1-234-177-21	FERRITE 0UH			
772		A	FERRITE		FL302	1-234-177-21	FERRITE 0UH			
773		A	FERRITE		FL303	1-234-177-21	FERRITE 0UH			
774		A	FERRITE		FL401	1-234-177-21	FERRITE 0UH			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
775		A	FERRITE		FL402	1-234-177-21	FERRITE 0UH			
776		A	FERRITE		FL403	1-234-177-21	FERRITE 0UH			
777		A	FERRITE		FL404	1-234-177-21	FERRITE 0UH			
778		A	FERRITE		FL601	1-239-899-21	FERRITE 0UH			
779		A	FERRITE		FL602	1-239-899-21	FERRITE 0UH			
780		A	FERRITE		FL604	1-239-899-21	FERRITE 0UH			
781		A	FERRITE		FL605	1-239-899-21	FERRITE 0UH			
782		A	FERRITE		FL606	1-239-899-21	FERRITE 0UH			
783		A	FERRITE		FL607	1-239-899-21	FERRITE 0UH			
784		A	FERRITE		FL608	1-239-899-21	FERRITE 0UH			
785		A	FERRITE		FL610	1-239-899-21	FERRITE 0UH			
786		A	FERRITE		FL611	1-239-899-21	FERRITE 0UH			
787		A	IC		IC1	8-759-475-13	IC TC74LCX14F(EL)			
788		A	IC		IC2	6-700-915-01	IC SN74AHCT04PWR			
789		A	IC		IC3	8-759-475-33	IC TC74LCX00FT(EL)			
790		A	IC		IC4	8-759-688-12	IC TC74VHCT125AFT(EL)			
791		A	IC		IC5	8-759-688-12	IC TC74VHCT125AFT(EL)			
792		A	IC		IC6	8-759-524-04	IC TC74VHC125FT(EL)			
793		A	IC		IC7	8-759-523-96	IC TC74VHC86FT(EL)			
794		A	IC		IC8	8-759-239-55	IC TC74HC123AF			
795		A	IC		IC9	8-759-082-57	IC TC7W04FU			
796		A	IC		IC10	8-759-584-88	IC BA7078AF-E2			
797		A	IC		IC11	8-759-475-43	IC TC74LCX125FT(EL)			
798		A	IC		IC12	8-759-475-43	IC TC74LCX125FT(EL)			
799		A	IC		IC13	8-759-475-47	IC TC74LCX244FT(EL)			
800		A	IC		IC14	8-759-531-92	IC TC7WH04FU(TE12R)			
801		A	IC		IC15	8-759-239-55	IC TC74HC123AF			
802		A	IC		IC100	6-702-815-01	IC AD9888KS-205			
803		A	IC		IC101	6-702-832-11	IC BU9882F-WE2			
804		A	IC		IC202	8-759-524-04	IC TC74VHC125FT(EL)			
805		A	IC		IC203	6-700-133-02	IC TFP403PZP			
806		A	IC		IC301	6-702-832-11	IC BU9882F-WE2			
807		A	IC		IC303	6-700-133-02	IC TFP403PZP			
808		A	IC		IC401	6-802-538-01	IC XCR3256XL-10FT256-3624T			
809		A	IC		IC403	6-702-834-01	IC MBM29LV800TA-70PFTN-SV3624A			
810		A	IC		IC404	6-702-841-01	IC PW171-30U			
811		A	IC		IC406	6-701-145-01	IC MC74LVX00DTR2			
812		A	IC		IC407	8-759-472-14	IC 74VHC125MTCX			
813		A	IC		IC408	8-759-568-85	IC S-80821ANNP-EDJ-T2			
814		A	IC		IC409	8-759-544-01	IC S-80828ANNP-EDR-T2			
815		A	IC		IC600	6-702-315-01	IC TK11233CMCL			
816		A	IC		IC601	8-759-521-89	IC PQ20WZ5U			
817		A	IC		IC602	6-702-510-01	IC TPS5120DBTR			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
818		A	IC		IC604	8-749-015-18	IC PQ07VZ012ZP			
819		A	IC		IC605	8-759-579-31	IC PQ20WZ1U			
820		A	IC		IC606	6-702-315-01	IC TK11233CMCL			
821		A	IC		IC607	6-702-830-11	IC TK71733SCL-TP			
822		A	IC		IC701	8-759-669-50	IC SN74CBTD3306PWR-12			
823		A	IC		IC702	8-759-472-14	IC 74VHC125MTCX			
824		A	IC		IC703	6-802-570-01	IC HD64F2377-3624A			
825		A	IC		IC704	8-759-593-23	IC S-80928ANMP-DDR-T2			
826		A	IC		IC705	6-702-688-01	IC M24C64-WMN6T(B)			
827		A	IC		IC706	8-759-592-49	IC TC7SZ125FU(TE85R)			
828		A	IC		IC707	8-759-669-50	IC SN74CBTD3306PWR-12			
829		A	IC		IC801	6-702-814-01	IC SII160CT100			
830		A	COIL		L401	1-409-527-41	INDUCTOR 4.7UH			
831		A	COIL		L601	1-414-617-11	INDUCTOR 10UH			
832		A	COIL		L602	1-414-617-11	INDUCTOR 10UH			
833		A	COIL		L603	1-409-527-41	INDUCTOR 4.7UH			
834		A	IC LINK	⚠	PS100	1-576-122-21	IC LINK 0.4A 72V			
835		A	IC LINK	⚠	PS101	1-576-122-21	IC LINK 0.4A 72V			
836		A	IC LINK	⚠	PS201	1-576-122-21	IC LINK 0.4A 72V			
837		A	IC LINK	⚠	PS301	1-576-122-21	IC LINK 0.4A 72V			
838		A	TRANSISTOR		Q1	8-729-026-57	TRANSISTOR FMS1A-T148			
839		A	TRANSISTOR		Q2	8-729-055-85	TRANSISTOR UMT1N-TN			
840		A	TRANSISTOR		Q3	8-729-035-74	TRANSISTOR FMG4AT148			
841		A	TRANSISTOR		Q4	8-729-112-65	TRANSISTOR 2SA1462-Y33			
842		A	TRANSISTOR		Q5	8-729-112-65	TRANSISTOR 2SA1462-Y33			
843		A	TRANSISTOR		Q6	8-729-230-49	TRANSISTOR 2SC2712-YG			
844		A	TRANSISTOR		Q7	8-729-029-14	TRANSISTOR DTC144EUA-T106			
845		A	TRANSISTOR		Q401	8-729-140-63	TRANSISTOR 2SA1611-M5M6			
846		A	TRANSISTOR		Q402	8-729-230-49	TRANSISTOR 2SC2712-YG			
847		A	TRANSISTOR		Q403	8-729-028-73	TRANSISTOR DTA114EUA-T106			
848		A	TRANSISTOR		Q601	8-729-052-07	TRANSISTOR HAT2064R-EL			
849		A	TRANSISTOR		Q602	8-729-052-07	TRANSISTOR HAT2064R-EL			
850		A	TRANSISTOR		Q603	8-729-052-07	TRANSISTOR HAT2064R-EL			
851		A	TRANSISTOR		Q604	8-729-052-07	TRANSISTOR HAT2064R-EL			
852		A	TRANSISTOR		Q609	8-729-907-00	TRANSISTOR DTC114EU			
853		A	TRANSISTOR		Q610	8-729-054-36	TRANSISTOR UPA1716G-E2			
854		A	TRANSISTOR		Q702	8-729-907-00	TRANSISTOR DTC114EU			
855		A	TRANSISTOR		Q706	8-729-907-00	TRANSISTOR DTC114EU			
856		A	TRANSISTOR		Q708	8-729-907-00	TRANSISTOR DTC114EU			
857		A	TRANSISTOR		Q709	8-729-013-28	TRANSISTOR HN1B01FU-TE85R			
858		A	RESISTOR		R1	1-216-809-11	METAL CHIP 100 5% 1/10W			
859		A	RESISTOR		R2	1-216-809-11	METAL CHIP 100 5% 1/10W			
860		A	RESISTOR		R3	1-216-809-11	METAL CHIP 100 5% 1/10W			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
861		A	RESISTOR		R4	1-216-809-11	METAL CHIP 100 5% 1/10W			
862		A	RESISTOR		R5	1-216-809-11	METAL CHIP 100 5% 1/10W			
863		A	RESISTOR		R6	1-216-809-11	METAL CHIP 100 5% 1/10W			
864		A	RESISTOR		R7	1-216-809-11	METAL CHIP 100 5% 1/10W			
865		A	RESISTOR		R8	1-216-809-11	METAL CHIP 100 5% 1/10W			
866		A	RESISTOR		R9	1-216-805-11	METAL CHIP 47 5% 1/10W			
867		A	RESISTOR		R10	1-216-805-11	METAL CHIP 47 5% 1/10W			
868		A	RESISTOR		R11	1-216-805-11	METAL CHIP 47 5% 1/10W			
869		A	RESISTOR		R12	1-216-805-11	METAL CHIP 47 5% 1/10W			
870		A	RESISTOR		R13	1-216-805-11	METAL CHIP 47 5% 1/10W			
871		A	RESISTOR		R14	1-216-805-11	METAL CHIP 47 5% 1/10W			
872		A	RESISTOR		R15	1-216-805-11	METAL CHIP 47 5% 1/10W			
873		A	RESISTOR		R16	1-216-805-11	METAL CHIP 47 5% 1/10W			
874		A	RESISTOR		R17	1-216-805-11	METAL CHIP 47 5% 1/10W			
875		A	RESISTOR		R18	1-216-805-11	METAL CHIP 47 5% 1/10W			
876		A	RESISTOR		R19	1-216-805-11	METAL CHIP 47 5% 1/10W			
877		A	RESISTOR		R20	1-216-805-11	METAL CHIP 47 5% 1/10W			
878		A	RESISTOR		R21	1-216-805-11	METAL CHIP 47 5% 1/10W			
879		A	RESISTOR		R22	1-216-805-11	METAL CHIP 47 5% 1/10W			
880		A	RESISTOR		R23	1-216-809-11	METAL CHIP 100 5% 1/10W			
881		A	RESISTOR		R24	1-216-805-11	METAL CHIP 47 5% 1/10W			
882		A	RESISTOR		R25	1-216-809-11	METAL CHIP 100 5% 1/10W			
883		A	RESISTOR		R26	1-216-805-11	METAL CHIP 47 5% 1/10W			
884		A	RESISTOR		R27	1-216-809-11	METAL CHIP 100 5% 1/10W			
885		A	RESISTOR		R28	1-216-809-11	METAL CHIP 100 5% 1/10W			
886		A	RESISTOR		R29	1-216-809-11	METAL CHIP 100 5% 1/10W			
887		A	RESISTOR		R30	1-216-809-11	METAL CHIP 100 5% 1/10W			
888		A	RESISTOR		R31	1-216-821-11	METAL CHIP 1K 5% 1/10W			
889		A	RESISTOR		R32	1-216-821-11	METAL CHIP 1K 5% 1/10W			
890		A	RESISTOR		R33	1-216-837-11	METAL CHIP 22K 5% 1/10W			
891		A	RESISTOR		R34	1-216-841-11	METAL CHIP 47K 5% 1/10W			
892		A	RESISTOR		R35	1-216-841-11	METAL CHIP 47K 5% 1/10W			
893		A	RESISTOR		R36	1-216-853-11	METAL CHIP 470K 5% 1/10W			
894		A	RESISTOR		R37	1-216-837-11	METAL CHIP 22K 5% 1/10W			
895		A	RESISTOR		R38	1-216-841-11	METAL CHIP 47K 5% 1/10W			
896		A	RESISTOR		R39	1-216-841-11	METAL CHIP 47K 5% 1/10W			
897		A	RESISTOR		R40	1-216-853-11	METAL CHIP 470K 5% 1/10W			
898		A	RESISTOR		R41	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
899		A	RESISTOR		R42	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
900		A	RESISTOR		R43	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
901		A	RESISTOR		R44	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
902		A	RESISTOR		R45	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
903		A	RESISTOR		R46	1-216-849-11	METAL CHIP 220K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
904		A	RESISTOR		R47	1-216-849-11	METAL CHIP 220K 5% 1/10W			
905		A	RESISTOR		R48	1-216-849-11	METAL CHIP 220K 5% 1/10W			
906		A	RESISTOR		R49	1-216-849-11	METAL CHIP 220K 5% 1/10W			
907		A	RESISTOR		R52	1-216-833-11	METAL CHIP 10K 5% 1/10W			
908		A	RESISTOR		R53	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
909		A	RESISTOR		R54	1-216-833-11	METAL CHIP 10K 5% 1/10W			
910		A	RESISTOR		R55	1-216-833-11	METAL CHIP 10K 5% 1/10W			
911		A	RESISTOR		R56	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
912		A	RESISTOR		R57	1-216-833-11	METAL CHIP 10K 5% 1/10W			
913		A	RESISTOR		R58	1-216-833-11	METAL CHIP 10K 5% 1/10W			
914		A	RESISTOR		R59	1-216-853-11	METAL CHIP 470K 5% 1/10W			
915		A	RESISTOR		R60	1-216-849-11	METAL CHIP 220K 5% 1/10W			
916		A	RESISTOR		R61	1-216-864-11	SHORT CHIP 0			
917		A	RESISTOR		R62	1-216-833-11	METAL CHIP 10K 5% 1/10W			
918		A	RESISTOR		R63	1-216-857-11	METAL CHIP 1M 5% 1/10W			
919		A	RESISTOR		R64	1-216-833-11	METAL CHIP 10K 5% 1/10W			
920		A	RESISTOR		R65	1-216-833-11	METAL CHIP 10K 5% 1/10W			
921		A	RESISTOR		R66	1-216-853-11	METAL CHIP 470K 5% 1/10W			
922		A	RESISTOR		R67	1-216-849-11	METAL CHIP 220K 5% 1/10W			
923		A	RESISTOR		R70	1-216-805-11	METAL CHIP 47 5% 1/10W			
924		A	RESISTOR		R71	1-216-864-11	SHORT CHIP 0			
925		A	RESISTOR		R73	1-216-805-11	METAL CHIP 47 5% 1/10W			
926		A	RESISTOR		R74	1-216-805-11	METAL CHIP 47 5% 1/10W			
927		A	RESISTOR		R75	1-216-828-11	METAL CHIP 3.9K 5% 1/10W			
928		A	RESISTOR		R76	1-216-809-11	METAL CHIP 100 5% 1/10W			
929		A	RESISTOR		R77	1-216-809-11	METAL CHIP 100 5% 1/10W			
930		A	RESISTOR		R78	1-216-809-11	METAL CHIP 100 5% 1/10W			
931		A	RESISTOR		R79	1-216-809-11	METAL CHIP 100 5% 1/10W			
932		A	RESISTOR		R80	1-216-821-11	METAL CHIP 1K 5% 1/10W			
933		A	RESISTOR		R81	1-216-828-11	METAL CHIP 3.9K 5% 1/10W			
934		A	RESISTOR		R84	1-216-805-11	METAL CHIP 47 5% 1/10W			
935		A	RESISTOR		R85	1-216-805-11	METAL CHIP 47 5% 1/10W			
936		A	RESISTOR		R86	1-216-864-11	SHORT CHIP 0			
937		A	RESISTOR		R87	1-216-864-11	SHORT CHIP 0			
938		A	RESISTOR		R88	1-216-805-11	METAL CHIP 47 5% 1/10W			
939		A	RESISTOR		R89	1-216-805-11	METAL CHIP 47 5% 1/10W			
940		A	RESISTOR		R91	1-216-864-11	SHORT CHIP 0			
941		A	RESISTOR		R92	1-216-809-11	METAL CHIP 100 5% 1/10W			
942		A	RESISTOR		R93	1-216-809-11	METAL CHIP 100 5% 1/10W			
943		A	RESISTOR		R94	1-216-809-11	METAL CHIP 100 5% 1/10W			
944		A	RESISTOR		R95	1-216-809-11	METAL CHIP 100 5% 1/10W			
945		A	RESISTOR		R96	1-216-864-11	SHORT CHIP 0			
946		A	RESISTOR		R97	1-216-833-11	METAL CHIP 10K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
947		A	RESISTOR		R98	1-216-833-11	METAL CHIP 10K 5% 1/10W			
948		A	RESISTOR		R99	1-216-864-11	SHORT CHIP 0			
949		A	RESISTOR		R100	1-216-805-11	METAL CHIP 47 5% 1/10W			
950		A	RESISTOR		R101	1-216-805-11	METAL CHIP 47 5% 1/10W			
951		A	RESISTOR		R102	1-216-841-11	METAL CHIP 47K 5% 1/10W			
952		A	RESISTOR		R103	1-216-833-11	METAL CHIP 10K 5% 1/10W			
953		A	RESISTOR		R104	1-216-833-11	METAL CHIP 10K 5% 1/10W			
954		A	RESISTOR		R105	1-216-805-11	METAL CHIP 47 5% 1/10W			
955		A	RESISTOR		R106	1-216-805-11	METAL CHIP 47 5% 1/10W			
956		A	RESISTOR		R107	1-216-833-11	METAL CHIP 10K 5% 1/10W			
957		A	RESISTOR		R108	1-216-833-11	METAL CHIP 10K 5% 1/10W			
958		A	RESISTOR		R109	1-216-833-11	METAL CHIP 10K 5% 1/10W			
959		A	RESISTOR		R110	1-216-805-11	METAL CHIP 47 5% 1/10W			
960		A	RESISTOR		R111	1-216-805-11	METAL CHIP 47 5% 1/10W			
961		A	RESISTOR		R112	1-216-805-11	METAL CHIP 47 5% 1/10W			
962		A	RESISTOR		R113	1-216-805-11	METAL CHIP 47 5% 1/10W			
963		A	RESISTOR		R115	1-216-837-11	METAL CHIP 22K 5% 1/10W			
964		A	RESISTOR		R116	1-216-837-11	METAL CHIP 22K 5% 1/10W			
965		A	RESISTOR		R117	1-216-805-11	METAL CHIP 47 5% 1/10W			
966		A	RESISTOR		R118	1-216-821-11	METAL CHIP 1K 5% 1/10W			
967		A	RESISTOR		R119	1-216-821-11	METAL CHIP 1K 5% 1/10W			
968		A	RESISTOR		R120	1-216-821-11	METAL CHIP 1K 5% 1/10W			
969		A	RESISTOR		R121	1-216-821-11	METAL CHIP 1K 5% 1/10W			
970		A	RESISTOR		R122	1-216-821-11	METAL CHIP 1K 5% 1/10W			
971		A	RESISTOR		R123	1-216-805-11	METAL CHIP 47 5% 1/10W			
972		A	RESISTOR		R124	1-216-821-11	METAL CHIP 1K 5% 1/10W			
973		A	RESISTOR		R125	1-216-801-11	METAL CHIP 22 5% 1/10W			
974		A	RESISTOR		R126	1-216-864-11	SHORT CHIP 0			
975		A	RESISTOR		R127	1-216-805-11	METAL CHIP 47 5% 1/10W			
976		A	RESISTOR		R129	1-216-864-11	SHORT CHIP 0			
977		A	RESISTOR		R131	1-211-990-11	METAL CHIP 75 0.5% 1/10W			
978		A	RESISTOR		R132	1-216-809-11	METAL CHIP 100 5% 1/10W			
979		A	RESISTOR		R139	1-216-841-11	METAL CHIP 47K 5% 1/10W			
980		A	RESISTOR		R141	1-211-990-11	METAL CHIP 75 0.5% 1/10W			
981		A	RESISTOR		R142	1-216-809-11	METAL CHIP 100 5% 1/10W			
982		A	RESISTOR		R151	1-211-990-11	METAL CHIP 75 0.5% 1/10W			
983		A	RESISTOR		R152	1-216-809-11	METAL CHIP 100 5% 1/10W			
984		A	RESISTOR		R161	1-218-665-11	METAL CHIP 75 0.5% 1/10W			
985		A	RESISTOR		R162	1-216-809-11	METAL CHIP 100 5% 1/10W			
986		A	RESISTOR		R171	1-211-990-11	METAL CHIP 75 0.5% 1/10W			
987		A	RESISTOR		R172	1-216-809-11	METAL CHIP 100 5% 1/10W			
988		A	RESISTOR		R181	1-218-665-11	METAL CHIP 75 0.5% 1/10W			
989		A	RESISTOR		R182	1-216-809-11	METAL CHIP 100 5% 1/10W			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
990		A	RESISTOR		R189	1-216-805-11	METAL CHIP 47 5% 1/10W			
991		A	RESISTOR		R190	1-216-805-11	METAL CHIP 47 5% 1/10W			
992		A	RESISTOR		R191	1-216-805-11	METAL CHIP 47 5% 1/10W			
993		A	RESISTOR		R192	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
994		A	RESISTOR		R193	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
995		A	RESISTOR		R194	1-216-805-11	METAL CHIP 47 5% 1/10W			
996		A	RESISTOR		R195	1-216-805-11	METAL CHIP 47 5% 1/10W			
997		A	RESISTOR		R196	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
998		A	RESISTOR		R197	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
999		A	RESISTOR		R198	1-216-827-11	METAL CHIP 3.3K 5% 1/10W			
1000		A	RESISTOR		R199	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1001		A	RESISTOR		R201	1-216-805-11	METAL CHIP 47 5% 1/10W			
1002		A	RESISTOR		R202	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1003		A	RESISTOR		R203	1-216-805-11	METAL CHIP 47 5% 1/10W			
1004		A	RESISTOR		R204	1-216-841-11	METAL CHIP 47K 5% 1/10W			
1005		A	RESISTOR		R211	1-216-864-11	SHORT CHIP 0			
1006		A	RESISTOR		R212	1-216-864-11	SHORT CHIP 0			
1007		A	RESISTOR		R213	1-216-864-11	SHORT CHIP 0			
1008		A	RESISTOR		R214	1-216-864-11	SHORT CHIP 0			
1009		A	RESISTOR		R215	1-216-864-11	SHORT CHIP 0			
1010		A	RESISTOR		R216	1-216-864-11	SHORT CHIP 0			
1011		A	RESISTOR		R217	1-216-864-11	SHORT CHIP 0			
1012		A	RESISTOR		R218	1-216-864-11	SHORT CHIP 0			
1013		A	RESISTOR		R219	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1014		A	RESISTOR		R220	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1015		A	RESISTOR		R221	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1016		A	RESISTOR		R222	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1017		A	RESISTOR		R223	1-216-809-11	METAL CHIP 100 5% 1/10W			
1018		A	RESISTOR		R224	1-216-805-11	METAL CHIP 47 5% 1/10W			
1019		A	RESISTOR		R225	1-216-864-11	SHORT CHIP 0			
1020		A	RESISTOR		R226	1-216-864-11	SHORT CHIP 0			
1021		A	RESISTOR		R228	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1022		A	RESISTOR		R229	1-216-864-11	SHORT CHIP 0			
1023		A	RESISTOR		R231	1-216-864-11	SHORT CHIP 0			
1024		A	RESISTOR		R232	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1025		A	RESISTOR		R233	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1026		A	RESISTOR		R234	1-216-864-11	SHORT CHIP 0			
1027		A	RESISTOR		R235	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1028		A	RESISTOR		R236	1-216-864-11	SHORT CHIP 0			
1029		A	RESISTOR		R237	1-216-864-11	SHORT CHIP 0			
1030		A	RESISTOR		R238	1-216-864-11	SHORT CHIP 0			
1031		A	RESISTOR		R239	1-216-805-11	METAL CHIP 47 5% 1/10W			
1032		A	RESISTOR		R240	1-216-864-11	SHORT CHIP 0			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1033		A	RESISTOR		R242	1-216-805-11	METAL CHIP 47 5% 1/10W			
1034		A	RESISTOR		R243	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1035		A	RESISTOR		R244	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1036		A	RESISTOR		R245	1-216-805-11	METAL CHIP 47 5% 1/10W			
1037		A	RESISTOR		R246	1-216-805-11	METAL CHIP 47 5% 1/10W			
1038		A	RESISTOR		R247	1-216-864-11	SHORT CHIP 0			
1039		A	RESISTOR		R301	1-216-805-11	METAL CHIP 47 5% 1/10W			
1040		A	RESISTOR		R302	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1041		A	RESISTOR		R303	1-216-805-11	METAL CHIP 47 5% 1/10W			
1042		A	RESISTOR		R304	1-216-841-11	METAL CHIP 47K 5% 1/10W			
1043		A	RESISTOR		R309	1-216-864-11	SHORT CHIP 0			
1044		A	RESISTOR		R311	1-216-864-11	SHORT CHIP 0			
1045		A	RESISTOR		R312	1-216-864-11	SHORT CHIP 0			
1046		A	RESISTOR		R313	1-216-864-11	SHORT CHIP 0			
1047		A	RESISTOR		R314	1-216-864-11	SHORT CHIP 0			
1048		A	RESISTOR		R315	1-216-864-11	SHORT CHIP 0			
1049		A	RESISTOR		R316	1-216-864-11	SHORT CHIP 0			
1050		A	RESISTOR		R317	1-216-864-11	SHORT CHIP 0			
1051		A	RESISTOR		R318	1-216-864-11	SHORT CHIP 0			
1052		A	RESISTOR		R319	1-216-805-11	METAL CHIP 47 5% 1/10W			
1053		A	RESISTOR		R320	1-216-805-11	METAL CHIP 47 5% 1/10W			
1054		A	RESISTOR		R322	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1055		A	RESISTOR		R323	1-216-809-11	METAL CHIP 100 5% 1/10W			
1056		A	RESISTOR		R324	1-216-805-11	METAL CHIP 47 5% 1/10W			
1057		A	RESISTOR		R325	1-216-837-11	METAL CHIP 22K 5% 1/10W			
1058		A	RESISTOR		R326	1-216-837-11	METAL CHIP 22K 5% 1/10W			
1059		A	RESISTOR		R328	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1060		A	RESISTOR		R329	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1061		A	RESISTOR		R331	1-216-864-11	SHORT CHIP 0			
1062		A	RESISTOR		R332	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1063		A	RESISTOR		R333	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1064		A	RESISTOR		R334	1-216-864-11	SHORT CHIP 0			
1065		A	RESISTOR		R335	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1066		A	RESISTOR		R336	1-216-864-11	SHORT CHIP 0			
1067		A	RESISTOR		R337	1-216-864-11	SHORT CHIP 0			
1068		A	RESISTOR		R338	1-216-864-11	SHORT CHIP 0			
1069		A	RESISTOR		R339	1-216-805-11	METAL CHIP 47 5% 1/10W			
1070		A	RESISTOR		R340	1-216-801-11	METAL CHIP 22 5% 1/10W			
1071		A	RESISTOR		R342	1-216-805-11	METAL CHIP 47 5% 1/10W			
1072		A	RESISTOR		R343	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1073		A	RESISTOR		R344	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1074		A	RESISTOR		R346	1-216-805-11	METAL CHIP 47 5% 1/10W			
1075		A	RESISTOR		R350	1-216-845-11	METAL CHIP 100K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1076		A	RESISTOR		R351	1-216-845-11	METAL CHIP 100K 5% 1/10W			
1077		A	RESISTOR		R352	1-216-845-11	METAL CHIP 100K 5% 1/10W			
1078		A	RESISTOR		R353	1-216-845-11	METAL CHIP 100K 5% 1/10W			
1079		A	RESISTOR		R354	1-216-845-11	METAL CHIP 100K 5% 1/10W			
1080		A	RESISTOR		R401	1-216-864-11	SHORT CHIP 0			
1081		A	RESISTOR		R411	1-218-704-11	METAL CHIP 3.3K 0.5% 1/10W			
1082		A	RESISTOR		R412	1-216-864-11	SHORT CHIP 0			
1083		A	RESISTOR		R413	1-216-864-11	SHORT CHIP 0			
1084		A	RESISTOR		R417	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1085		A	RESISTOR		R418	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1086		A	RESISTOR		R419	1-216-827-11	METAL CHIP 3.3K 5% 1/10W			
1087		A	RESISTOR		R420	1-216-827-11	METAL CHIP 3.3K 5% 1/10W			
1088		A	RESISTOR		R421	1-216-864-11	SHORT CHIP 0			
1089		A	RESISTOR		R422	1-216-809-11	METAL CHIP 100 5% 1/10W			
1090		A	RESISTOR		R423	1-216-809-11	METAL CHIP 100 5% 1/10W			
1091		A	RESISTOR		R426	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1092		A	RESISTOR		R427	1-216-801-11	METAL CHIP 22 5% 1/10W			
1093		A	RESISTOR		R430	1-216-809-11	METAL CHIP 100 5% 1/10W			
1094		A	RESISTOR		R431	1-216-809-11	METAL CHIP 100 5% 1/10W			
1095		A	RESISTOR		R433	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1096		A	RESISTOR		R435	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1097		A	RESISTOR		R437	1-216-809-11	METAL CHIP 100 5% 1/10W			
1098		A	RESISTOR		R438	1-216-809-11	METAL CHIP 100 5% 1/10W			
1099		A	RESISTOR		R439	1-216-864-11	SHORT CHIP 0			
1100		A	RESISTOR		R440	1-216-864-11	SHORT CHIP 0			
1101		A	RESISTOR		R441	1-216-864-11	SHORT CHIP 0			
1102		A	RESISTOR		R442	1-216-864-11	SHORT CHIP 0			
1103		A	RESISTOR		R443	1-216-864-11	SHORT CHIP 0			
1104		A	RESISTOR		R444	1-216-864-11	SHORT CHIP 0			
1105		A	RESISTOR		R445	1-216-827-11	METAL CHIP 3.3K 5% 1/10W			
1106		A	RESISTOR		R446	1-216-827-11	METAL CHIP 3.3K 5% 1/10W			
1107		A	RESISTOR		R447	1-216-809-11	METAL CHIP 100 5% 1/10W			
1108		A	RESISTOR		R452	1-216-827-11	METAL CHIP 3.3K 5% 1/10W			
1109		A	RESISTOR		R453	1-216-864-11	SHORT CHIP 0			
1110		A	RESISTOR		R454	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1111		A	RESISTOR		R455	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1112		A	RESISTOR		R456	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1113		A	RESISTOR		R460	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1114		A	RESISTOR		R461	1-216-864-11	SHORT CHIP 0			
1115		A	RESISTOR		R462	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1116		A	RESISTOR		R463	1-216-809-11	METAL CHIP 100 5% 1/10W			
1117		A	RESISTOR		R464	1-216-809-11	METAL CHIP 100 5% 1/10W			
1118		A	RESISTOR		R465	1-216-864-11	SHORT CHIP 0			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1119		A	RESISTOR		R466	1-216-864-11	SHORT CHIP 0			
1120		A	RESISTOR		R469	1-216-801-11	METAL CHIP 22 5% 1/10W			
1121		A	RESISTOR		R470	1-216-864-11	SHORT CHIP 0			
1122		A	RESISTOR		R471	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1123		A	RESISTOR		R472	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1124		A	RESISTOR		R473	1-216-809-11	METAL CHIP 100 5% 1/10W			
1125		A	RESISTOR		R474	1-216-864-11	SHORT CHIP 0			
1126		A	RESISTOR		R475	1-216-864-11	SHORT CHIP 0			
1127		A	RESISTOR		R476	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1128		A	RESISTOR		R477	1-216-864-11	SHORT CHIP 0			
1129		A	RESISTOR		R479	1-216-809-11	METAL CHIP 100 5% 1/10W			
1130		A	RESISTOR		R480	1-216-809-11	METAL CHIP 100 5% 1/10W			
1131		A	RESISTOR		R481	1-216-809-11	METAL CHIP 100 5% 1/10W			
1132		A	RESISTOR		R482	1-216-839-11	METAL CHIP 33K 5% 1/10W			
1133		A	RESISTOR		R483	1-216-839-11	METAL CHIP 33K 5% 1/10W			
1134		A	RESISTOR		R484	1-216-809-11	METAL CHIP 100 5% 1/10W			
1135		A	RESISTOR		R485	1-216-809-11	METAL CHIP 100 5% 1/10W			
1136		A	RESISTOR		R486	1-216-809-11	METAL CHIP 100 5% 1/10W			
1137		A	RESISTOR		R487	1-216-809-11	METAL CHIP 100 5% 1/10W			
1138		A	RESISTOR		R488	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1139		A	RESISTOR		R489	1-216-864-11	SHORT CHIP 0			
1140		A	RESISTOR		R600	1-216-864-11	SHORT CHIP 0			
1141		A	RESISTOR		R601	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1142		A	RESISTOR		R603	1-218-714-11	METAL CHIP 8.2K 0.5% 1/10W			
1143		A	RESISTOR		R604	1-218-704-11	METAL CHIP 3.3K 0.5% 1/10W			
1144		A	RESISTOR		R605	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1145		A	RESISTOR		R606	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1146		A	RESISTOR		R610	1-216-845-11	METAL CHIP 100K 5% 1/10W			
1147		A	RESISTOR		R611	1-216-845-11	METAL CHIP 100K 5% 1/10W			
1148		A	RESISTOR		R612	1-216-845-11	METAL CHIP 100K 5% 1/10W			
1149		A	RESISTOR		R613	1-216-864-11	SHORT CHIP 0			
1150		A	RESISTOR		R614	1-216-864-11	SHORT CHIP 0			
1151		A	RESISTOR		R615	1-216-864-11	SHORT CHIP 0			
1152		A	RESISTOR		R616	1-218-344-11	METAL CHIP 7.5K 5% 1/10W			
1153		A	RESISTOR		R617	1-216-834-11	METAL CHIP 12K 5% 1/10W			
1154		A	RESISTOR		R618	1-218-344-11	METAL CHIP 7.5K 5% 1/10W			
1155		A	RESISTOR		R619	1-218-717-11	METAL CHIP 11K 0.5% 1/10W			
1156		A	RESISTOR		R620	1-202-926-11	METAL CHIP 36K 5% 1/10W			
1157		A	RESISTOR		R622	1-202-926-11	METAL CHIP 36K 5% 1/10W			
1158		A	RESISTOR		R623	1-216-793-11	METAL CHIP 4.7 5% 1/10W			
1159		A	RESISTOR		R624	1-216-793-11	METAL CHIP 4.7 5% 1/10W			
1160		A	RESISTOR		R625	1-218-272-11	METAL CHIP 5.1K 5% 1/10W			
1161		A	RESISTOR		R626	1-218-272-11	METAL CHIP 5.1K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1162		A	RESISTOR		R633	1-216-864-11	SHORT CHIP 0			
1163		A	RESISTOR		R637	1-216-864-11	SHORT CHIP 0			
1164		A	RESISTOR		R639	1-218-699-11	METAL CHIP 2K 0.5% 1/10W			
1165		A	RESISTOR		R643	1-218-699-11	METAL CHIP 2K 0.5% 1/10W			
1166		A	RESISTOR		R646	1-216-864-11	SHORT CHIP 0			
1167		A	RESISTOR		R647	1-216-864-11	SHORT CHIP 0			
1168		A	RESISTOR		R650	1-216-864-11	SHORT CHIP 0			
1169		A	RESISTOR		R651	1-216-864-11	SHORT CHIP 0			
1170		A	RESISTOR		R652	1-216-845-11	METAL CHIP 100K 5% 1/10W			
1171		A	RESISTOR		R653	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1172		A	RESISTOR		R655	1-218-692-11	METAL CHIP 1K 0.5% 1/10W			
1173		A	RESISTOR		R656	1-218-692-11	METAL CHIP 1K 0.5% 1/10W			
1174		A	RESISTOR		R657	1-218-699-11	METAL CHIP 2K 0.5% 1/10W			
1175		A	RESISTOR		R658	1-216-864-11	SHORT CHIP 0			
1176		A	RESISTOR		R659	1-216-864-11	SHORT CHIP 0			
1177		A	RESISTOR		R660	1-216-841-11	METAL CHIP 47K 5% 1/10W			
1178		A	RESISTOR		R664	1-216-605-11	METAL CHIP 12 0.5% 1/10W			
1179		A	RESISTOR		R665	1-216-605-11	METAL CHIP 12 0.5% 1/10W			
1180		A	RESISTOR		R666	1-216-605-11	METAL CHIP 12 0.5% 1/10W			
1181		A	RESISTOR		R667	1-216-864-11	SHORT CHIP 0			
1182		A	RESISTOR		R668	1-216-864-11	SHORT CHIP 0			
1183		A	RESISTOR		R669	1-216-864-11	SHORT CHIP 0			
1184		A	RESISTOR		R670	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1185		A	RESISTOR		R671	1-216-864-11	SHORT CHIP 0			
1186		A	RESISTOR		R702	1-216-864-11	SHORT CHIP 0			
1187		A	RESISTOR		R710	1-216-809-11	METAL CHIP 100 5% 1/10W			
1188		A	RESISTOR		R711	1-216-809-11	METAL CHIP 100 5% 1/10W			
1189		A	RESISTOR		R712	1-216-841-11	METAL CHIP 47K 5% 1/10W			
1190		A	RESISTOR		R713	1-216-809-11	METAL CHIP 100 5% 1/10W			
1191		A	RESISTOR		R715	1-216-864-11	SHORT CHIP 0			
1192		A	RESISTOR		R718	1-216-864-11	SHORT CHIP 0			
1193		A	RESISTOR		R719	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1194		A	RESISTOR		R722	1-216-864-11	SHORT CHIP 0			
1195		A	RESISTOR		R723	1-216-864-11	SHORT CHIP 0			
1196		A	RESISTOR		R727	1-216-864-11	SHORT CHIP 0			
1197		A	RESISTOR		R728	1-216-864-11	SHORT CHIP 0			
1198		A	RESISTOR		R729	1-216-864-11	SHORT CHIP 0			
1199		A	RESISTOR		R730	1-216-864-11	SHORT CHIP 0			
1200		A	RESISTOR		R732	1-216-864-11	SHORT CHIP 0			
1201		A	RESISTOR		R733	1-216-864-11	SHORT CHIP 0			
1202		A	RESISTOR		R735	1-216-809-11	METAL CHIP 100 5% 1/10W			
1203		A	RESISTOR		R736	1-216-837-11	METAL CHIP 22K 5% 1/10W			
1204		A	RESISTOR		R737	1-216-864-11	SHORT CHIP 0			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1205		A	RESISTOR		R738	1-216-864-11	SHORT CHIP 0			
1206		A	RESISTOR		R739	1-216-841-11	METAL CHIP 47K 5% 1/10W			
1207		A	RESISTOR		R741	1-216-864-11	SHORT CHIP 0			
1208		A	RESISTOR		R742	1-216-864-11	SHORT CHIP 0			
1209		A	RESISTOR		R743	1-216-864-11	SHORT CHIP 0			
1210		A	RESISTOR		R744	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1211		A	RESISTOR		R745	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1212		A	RESISTOR		R746	1-216-864-11	SHORT CHIP 0			
1213		A	RESISTOR		R747	1-216-864-11	SHORT CHIP 0			
1214		A	RESISTOR		R748	1-216-845-11	METAL CHIP 100K 5% 1/10W			
1215		A	RESISTOR		R749	1-216-841-11	METAL CHIP 47K 5% 1/10W			
1216		A	RESISTOR		R752	1-216-864-11	SHORT CHIP 0			
1217		A	RESISTOR		R753	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1218		A	RESISTOR		R756	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1219		A	RESISTOR		R757	1-216-864-11	SHORT CHIP 0			
1220		A	RESISTOR		R758	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1221		A	RESISTOR		R759	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1222		A	RESISTOR		R760	1-216-809-11	METAL CHIP 100 5% 1/10W			
1223		A	RESISTOR		R761	1-216-809-11	METAL CHIP 100 5% 1/10W			
1224		A	RESISTOR		R762	1-216-809-11	METAL CHIP 100 5% 1/10W			
1225		A	RESISTOR		R763	1-216-809-11	METAL CHIP 100 5% 1/10W			
1226		A	RESISTOR		R764	1-216-809-11	METAL CHIP 100 5% 1/10W			
1227		A	RESISTOR		R765	1-216-809-11	METAL CHIP 100 5% 1/10W			
1228		A	RESISTOR		R766	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1229		A	RESISTOR		R767	1-216-864-11	SHORT CHIP 0			
1230		A	RESISTOR		R768	1-216-809-11	METAL CHIP 100 5% 1/10W			
1231		A	RESISTOR		R769	1-216-827-11	METAL CHIP 3.3K 5% 1/10W			
1232		A	RESISTOR		R770	1-216-864-11	SHORT CHIP 0			
1233		A	RESISTOR		R771	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1234		A	RESISTOR		R772	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1235		A	RESISTOR		R773	1-216-797-11	METAL CHIP 10 5% 1/10W			
1236		A	RESISTOR		R774	1-216-813-11	METAL CHIP 220 5% 1/10W			
1237		A	RESISTOR		R775	1-216-813-11	METAL CHIP 220 5% 1/10W			
1238		A	RESISTOR		R776	1-216-813-11	METAL CHIP 220 5% 1/10W			
1239		A	RESISTOR		R777	1-216-864-11	SHORT CHIP 0			
1240		A	RESISTOR		R778	1-216-841-11	METAL CHIP 47K 5% 1/10W			
1241		A	RESISTOR		R779	1-216-841-11	METAL CHIP 47K 5% 1/10W			
1242		A	RESISTOR		R780	1-216-864-11	SHORT CHIP 0			
1243		A	RESISTOR		R781	1-216-809-11	METAL CHIP 100 5% 1/10W			
1244		A	RESISTOR		R782	1-216-864-11	SHORT CHIP 0			
1245		A	RESISTOR		R783	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V			
1246		A	RESISTOR		R784	1-216-864-11	SHORT CHIP 0			
1247		A	RESISTOR		R785	1-216-833-11	METAL CHIP 10K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1248		A	RESISTOR		R786	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1249		A	RESISTOR		R787	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1250		A	RESISTOR		R788	1-216-864-11	SHORT CHIP 0			
1251		A	RESISTOR		R789	1-216-827-11	METAL CHIP 3.3K 5% 1/10W			
1252		A	RESISTOR		R791	1-216-809-11	METAL CHIP 100 5% 1/10W			
1253		A	RESISTOR		R792	1-216-809-11	METAL CHIP 100 5% 1/10W			
1254		A	RESISTOR		R793	1-216-827-11	METAL CHIP 3.3K 5% 1/10W			
1255		A	RESISTOR		R794	1-216-864-11	SHORT CHIP 0			
1256		A	RESISTOR		R795	1-216-864-11	SHORT CHIP 0			
1257		A	RESISTOR		R796	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1258		A	RESISTOR		R797	1-216-809-11	METAL CHIP 100 5% 1/10W			
1259		A	RESISTOR		R798	1-216-809-11	METAL CHIP 100 5% 1/10W			
1260		A	RESISTOR		R799	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1261		A	RESISTOR		R801	1-216-864-11	SHORT CHIP 0			
1262		A	RESISTOR		R802	1-216-864-11	SHORT CHIP 0			
1263		A	RESISTOR		R803	1-216-864-11	SHORT CHIP 0			
1264		A	RESISTOR		R804	1-216-864-11	SHORT CHIP 0			
1265		A	RESISTOR		R805	1-216-864-11	SHORT CHIP 0			
1266		A	RESISTOR		R806	1-216-864-11	SHORT CHIP 0			
1267		A	RESISTOR		R807	1-216-864-11	SHORT CHIP 0			
1268		A	RESISTOR		R808	1-216-864-11	SHORT CHIP 0			
1269		A	RESISTOR		R809	1-216-864-11	SHORT CHIP 0			
1270		A	RESISTOR		R812	1-216-839-11	METAL CHIP 33K 5% 1/10W			
1271		A	RESISTOR		R813	1-216-839-11	METAL CHIP 33K 5% 1/10W			
1272		A	RESISTOR		R814	1-216-839-11	METAL CHIP 33K 5% 1/10W			
1273		A	RESISTOR		R815	1-218-289-11	METAL CHIP 510 5% 1/10W			
1274		A	RESISTOR		R817	1-216-839-11	METAL CHIP 33K 5% 1/10W			
1275		A	RESISTOR		R818	1-216-864-11	SHORT CHIP 0			
1276		A	RESISTOR		R820	1-216-839-11	METAL CHIP 33K 5% 1/10W			
1277		A	RESISTOR		R821	1-216-839-11	METAL CHIP 33K 5% 1/10W			
1278		A	RESISTOR		R822	1-216-864-11	SHORT CHIP 0			
1279		A	RESISTOR		R823	1-216-839-11	METAL CHIP 33K 5% 1/10W			
1280		A	RESISTOR		R824	1-216-839-11	METAL CHIP 33K 5% 1/10W			
1281		A	RESISTOR		R825	1-216-864-11	SHORT CHIP 0			
1282		A	RESISTOR		R826	1-216-864-11	SHORT CHIP 0			
1283		A	RESISTOR		R828	1-216-864-11	SHORT CHIP 0			
1284		A	RESISTOR		R829	1-216-864-11	SHORT CHIP 0			
1285		A	RESISTOR		R831	1-216-864-11	SHORT CHIP 0			
1286		A	RESISTOR		R900	1-216-864-11	SHORT CHIP 0			
1287		A	RESISTOR		R901	1-216-853-11	METAL CHIP 470K 5% 1/10W			
1288		A	RESISTOR		R902	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1289		A	RESISTOR		R903	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1290		A	RESISTOR		R904	1-216-853-11	METAL CHIP 470K 5% 1/10W			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1291		A	RESISTOR		R905	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1292		A	RESISTOR		R906	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1293		A	RESISTOR		R1901	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1294		A	RESISTOR		R1902	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1295		A	RESISTOR		R1903	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1296		A	RESISTOR		R1904	1-216-841-11	METAL CHIP 47K 5% 1/10W			
1297		A	RESISTOR		R1906	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1298		A	RESISTOR		R1907	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1299		A	RESISTOR		R1908	1-216-864-11	SHORT CHIP 0			
1300		A	RESISTOR		R1909	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1301		A	RESISTOR		R1910	1-216-864-11	SHORT CHIP 0			
1302		A	RESISTOR		R1911	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1303		A	RESISTOR		R1912	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1304		A	RESISTOR		R1913	1-216-864-11	SHORT CHIP 0			
1305		A	RESISTOR		R1914	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1306		A	NETWORK		RB100	1-239-621-11	NETWORK (CHIP) 22			
1307		A	NETWORK		RB101	1-239-621-11	NETWORK (CHIP) 22			
1308		A	NETWORK		RB102	1-239-621-11	NETWORK (CHIP) 22			
1309		A	NETWORK		RB103	1-239-621-11	NETWORK (CHIP) 22			
1310		A	NETWORK		RB104	1-239-621-11	NETWORK (CHIP) 22			
1311		A	NETWORK		RB105	1-239-621-11	NETWORK (CHIP) 22			
1312		A	NETWORK		RB106	1-239-621-11	NETWORK (CHIP) 22			
1313		A	NETWORK		RB107	1-239-621-11	NETWORK (CHIP) 22			
1314		A	NETWORK		RB108	1-239-621-11	NETWORK (CHIP) 22			
1315		A	NETWORK		RB109	1-239-621-11	NETWORK (CHIP) 22			
1316		A	NETWORK		RB110	1-239-621-11	NETWORK (CHIP) 22			
1317		A	NETWORK		RB111	1-239-621-11	NETWORK (CHIP) 22			
1318		A	NETWORK		RB201	1-239-621-11	NETWORK (CHIP) 22			
1319		A	NETWORK		RB202	1-239-621-11	NETWORK (CHIP) 22			
1320		A	NETWORK		RB203	1-239-621-11	NETWORK (CHIP) 22			
1321		A	NETWORK		RB204	1-239-621-11	NETWORK (CHIP) 22			
1322		A	NETWORK		RB205	1-239-621-11	NETWORK (CHIP) 22			
1323		A	NETWORK		RB206	1-239-621-11	NETWORK (CHIP) 22			
1324		A	NETWORK		RB207	1-239-621-11	NETWORK (CHIP) 22			
1325		A	NETWORK		RB208	1-239-621-11	NETWORK (CHIP) 22			
1326		A	NETWORK		RB209	1-239-621-11	NETWORK (CHIP) 22			
1327		A	NETWORK		RB210	1-239-621-11	NETWORK (CHIP) 22			
1328		A	NETWORK		RB211	1-239-621-11	NETWORK (CHIP) 22			
1329		A	NETWORK		RB212	1-239-621-11	NETWORK (CHIP) 22			
1330		A	NETWORK		RB213	1-239-409-11	NETWORK (CHIP) 47			
1331		A	NETWORK		RB214	1-239-409-11	NETWORK (CHIP) 47			
1332		A	NETWORK		RB215	1-239-409-11	NETWORK (CHIP) 47			
1333		A	NETWORK		RB216	1-239-409-11	NETWORK (CHIP) 47			

No.	#	Board	Type	⚠/∗	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1334		A	NETWORK		RB217	1-239-409-11	NETWORK (CHIP) 47			
1335		A	NETWORK		RB218	1-239-409-11	NETWORK (CHIP) 47			
1336		A	NETWORK		RB219	1-239-409-11	NETWORK (CHIP) 47			
1337		A	NETWORK		RB220	1-239-409-11	NETWORK (CHIP) 47			
1338		A	NETWORK		RB221	1-239-409-11	NETWORK (CHIP) 47			
1339		A	NETWORK		RB222	1-239-409-11	NETWORK (CHIP) 47			
1340		A	NETWORK		RB223	1-239-409-11	NETWORK (CHIP) 47			
1341		A	NETWORK		RB224	1-239-409-11	NETWORK (CHIP) 47			
1342		A	NETWORK		RB301	1-239-409-11	NETWORK (CHIP) 47			
1343		A	NETWORK		RB302	1-239-409-11	NETWORK (CHIP) 47			
1344		A	NETWORK		RB303	1-239-409-11	NETWORK (CHIP) 47			
1345		A	NETWORK		RB304	1-239-409-11	NETWORK (CHIP) 47			
1346		A	NETWORK		RB305	1-239-409-11	NETWORK (CHIP) 47			
1347		A	NETWORK		RB306	1-239-409-11	NETWORK (CHIP) 47			
1348		A	NETWORK		RB307	1-239-409-11	NETWORK (CHIP) 47			
1349		A	NETWORK		RB308	1-239-409-11	NETWORK (CHIP) 47			
1350		A	NETWORK		RB309	1-239-409-11	NETWORK (CHIP) 47			
1351		A	NETWORK		RB310	1-239-409-11	NETWORK (CHIP) 47			
1352		A	NETWORK		RB311	1-239-409-11	NETWORK (CHIP) 47			
1353		A	NETWORK		RB312	1-239-409-11	NETWORK (CHIP) 47			
1354		A	NETWORK		RB401	1-239-409-11	NETWORK (CHIP) 47			
1355		A	NETWORK		RB402	1-239-409-11	NETWORK (CHIP) 47			
1356		A	NETWORK		RB403	1-239-409-11	NETWORK (CHIP) 47			
1357		A	NETWORK		RB404	1-239-409-11	NETWORK (CHIP) 47			
1358		A	NETWORK		RB405	1-239-409-11	NETWORK (CHIP) 47			
1359		A	NETWORK		RB406	1-239-409-11	NETWORK (CHIP) 47			
1360		A	NETWORK		RB407	1-239-409-11	NETWORK (CHIP) 47			
1361		A	NETWORK		RB408	1-239-409-11	NETWORK (CHIP) 47			
1362		A	NETWORK		RB409	1-239-409-11	NETWORK (CHIP) 47			
1363		A	NETWORK		RB410	1-239-409-11	NETWORK (CHIP) 47			
1364		A	NETWORK		RB411	1-239-409-11	NETWORK (CHIP) 47			
1365		A	NETWORK		RB412	1-239-409-11	NETWORK (CHIP) 47			
1366		A	NETWORK		RB414	1-239-409-11	NETWORK (CHIP) 47			
1367		A	NETWORK		RB415	1-239-409-11	NETWORK (CHIP) 47			
1368		A	NETWORK		RB416	1-239-409-11	NETWORK (CHIP) 47			
1369		A	NETWORK		RB417	1-239-409-11	NETWORK (CHIP) 47			
1370		A	NETWORK		RB418	1-239-409-11	NETWORK (CHIP) 47			
1371		A	NETWORK		RB419	1-239-409-11	NETWORK (CHIP) 47			
1372		A	NETWORK		RB420	1-239-409-11	NETWORK (CHIP) 47			
1373		A	NETWORK		RB421	1-239-409-11	NETWORK (CHIP) 47			
1374		A	NETWORK		RB422	1-239-409-11	NETWORK (CHIP) 47			
1375		A	NETWORK		RB423	1-239-409-11	NETWORK (CHIP) 47			
1376		A	NETWORK		RB424	1-239-409-11	NETWORK (CHIP) 47			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1377		A	NETWORK		RB425	1-239-409-11	NETWORK (CHIP) 47			
1378		A	NETWORK		RB701	1-239-412-11	NETWORK (CHIP) 100			
1379		A	NETWORK		RB702	1-239-389-11	NETWORK (CHIP) 47K			
1380		A	NETWORK		RB703	1-239-389-11	NETWORK (CHIP) 47K			
1381		A	NETWORK		RB704	1-239-412-11	NETWORK (CHIP) 100			
1382		A	NETWORK		RB705	1-236-904-11	NETWORK (CHIP) 1.0K			
1383		A	NETWORK		RB706	1-239-412-11	NETWORK (CHIP) 100			
1384		A	NETWORK		RB707	1-239-412-11	NETWORK (CHIP) 100			
1385		A	NETWORK		RB708	1-239-412-11	NETWORK (CHIP) 100			
1386		A	NETWORK		RB709	1-239-412-11	NETWORK (CHIP) 100			
1387		A	NETWORK		RB710	1-239-412-11	NETWORK (CHIP) 100			
1388		A	NETWORK		RB711	1-239-389-11	NETWORK (CHIP) 47K			
1389		A	NETWORK		RB712	1-239-389-11	NETWORK (CHIP) 47K			
1390		A	NETWORK		RB713	1-239-412-11	NETWORK (CHIP) 100			
1391		A	NETWORK		RB714	1-239-412-11	NETWORK (CHIP) 100			
1392		A	NETWORK		RB715	1-239-412-11	NETWORK (CHIP) 100			
1393		A	NETWORK		RB716	1-239-412-11	NETWORK (CHIP) 100			
1394		A	NETWORK		RB717	1-236-908-11	NETWORK (CHIP) 10K			
1395		A	NETWORK		RB718	1-239-412-11	NETWORK (CHIP) 100			
1396		A	NETWORK		RB719	1-239-389-11	NETWORK (CHIP) 47K			
1397		A	NETWORK		RB720	1-239-412-11	NETWORK (CHIP) 100			
1398		A	NETWORK		RB721	1-239-389-11	NETWORK (CHIP) 47K			
1399		A	NETWORK		RB722	1-239-412-11	NETWORK (CHIP) 100			
1400		A	NETWORK		RB723	1-239-412-11	NETWORK (CHIP) 100			
1401		A	NETWORK		RB724	1-239-412-11	NETWORK (CHIP) 100			
1402		A	NETWORK		RB725	1-239-412-11	NETWORK (CHIP) 100			
1403		A	NETWORK		RB726	1-239-412-11	NETWORK (CHIP) 100			
1404		A	NETWORK		RB727	1-239-412-11	NETWORK (CHIP) 100			
1405		A	NETWORK		RB728	1-239-412-11	NETWORK (CHIP) 100			
1406		A	NETWORK		RB729	1-239-412-11	NETWORK (CHIP) 100			
1407		A	NETWORK		RB730	1-239-412-11	NETWORK (CHIP) 100			
1408		A	CHECKER		TP1	1-535-757-11	CHIP, CHECKER			
1409		A	CHECKER		TP2	1-535-757-11	CHIP, CHECKER			
1410		A	CHECKER		TP3	1-535-757-11	CHIP, CHECKER			
1411		A	CHECKER		TP4	1-535-757-11	CHIP, CHECKER			
1412		A	CHECKER		TP5	1-535-757-11	CHIP, CHECKER			
1413		A	CHECKER		TP6	1-535-757-11	CHIP, CHECKER			
1414		A	CHECKER		TP7	1-535-757-11	CHIP, CHECKER			
1415		A	CHECKER		TP8	1-535-757-11	CHIP, CHECKER			
1416		A	CHECKER		TP9	1-535-757-11	CHIP, CHECKER			
1417		A	CHECKER		TP10	1-535-757-11	CHIP, CHECKER			
1418		A	CHECKER		TP11	1-535-757-11	CHIP, CHECKER			
1419		A	CHECKER		TP12	1-535-757-11	CHIP, CHECKER			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1420		A	CHECKER		TP13	1-535-757-11	CHIP, CHECKER			
1421		A	CHECKER		TP14	1-535-757-11	CHIP, CHECKER			
1422		A	CHECKER		TP15	1-535-757-11	CHIP, CHECKER			
1423		A	CHECKER		TP16	1-535-757-11	CHIP, CHECKER			
1424		A	CHECKER		TP17	1-535-757-11	CHIP, CHECKER			
1425		A	CHECKER		TP18	1-535-757-11	CHIP, CHECKER			
1426		A	CHECKER		TP19	1-535-757-11	CHIP, CHECKER			
1427		A	CHECKER		TP20	1-535-757-11	CHIP, CHECKER			
1428		A	CHECKER		TP21	1-535-757-11	CHIP, CHECKER			
1429		A	CHECKER		TP22	1-535-757-11	CHIP, CHECKER			
1430		A	CHECKER		TP23	1-535-757-11	CHIP, CHECKER			
1431		A	CHECKER		TP24	1-535-757-11	CHIP, CHECKER			
1432		A	CHECKER		TP25	1-535-757-11	CHIP, CHECKER			
1433		A	CHECKER		TP26	1-535-757-11	CHIP, CHECKER			
1434		A	CHECKER		TP27	1-535-757-11	CHIP, CHECKER			
1435		A	CHECKER		TP28	1-535-757-11	CHIP, CHECKER			
1436		A	CHECKER		TP602	1-535-757-11	CHIP, CHECKER			
1437		A	CHECKER		TP701	1-535-757-11	CHIP, CHECKER			
1438		A	CHECKER		TP702	1-535-757-11	CHIP, CHECKER			
1439		A	CHECKER		TP703	1-535-757-11	CHIP, CHECKER			
1440		A	CHECKER		TP704	1-535-757-11	CHIP, CHECKER			
1441		A	CHECKER		TP705	1-535-757-11	CHIP, CHECKER			
1442		A	CHECKER		TP706	1-535-757-11	CHIP, CHECKER			
1443		A	CHECKER		TP707	1-535-757-11	CHIP, CHECKER			
1444		A	CHECKER		TP708	1-535-757-11	CHIP, CHECKER			
1445		A	CHECKER		TP709	1-535-757-11	CHIP, CHECKER			
1446		A	CHECKER		TP710	1-535-757-11	CHIP, CHECKER			
1447		A	CRYSTAL		X401	1-795-714-21	OSCILLATOR, CRYSTAL			
1448		A	CRYSTAL		X402	1-795-715-21	OSCILLATOR, CRYSTAL			
1449		A	CRYSTAL		X701	1-795-650-21	VIBRATOR, CRYSTAL			

Sony EMCS Corporation
Ichinomiya TEC

9-978-744-02

English
2002KL08-Data
Made in Japan
© 2002. 11